

# INSTRUCTIONS CHARCOAL TRAY AGCT



## INSTALLATION AND USE OF CHARCOAL TRAY ACCESSORY IN YOUR HESTAN GRILL

IMPORTANT - READ ALL INSTRUCTIONS BEFORE YOU BEGIN

**!** WARNING: THIS ACCESSORY IS INTENDED FOR USE ON HESTAN GAS GRILLS ONLY. USE EXTREME CAUTION WHEN HANDLING THE HOT COOKING GRATES OR THE TRAY ITSELF.

DO NOT ATTEMPT TO REMOVE THE TRAY FROM THE GRILL WHILE HOT. ALLOW THE ENTIRE GRILL AND TRAY TO COOL COMPLETELY, BEFORE REMOVING THE TRAY TO PROPERLY DISPOSE OF COALS OR ASH IN A FIREPROOF CONTAINER.

MULTIPLE TRAYS IN A GRILL ARE NOT ALLOWED AND COULD DAMAGE THE GRILL.

ALL NORMAL SAFETY PRECAUTIONS SHOULD BE FOLLOWED WHEN COOKING WITH THE GRILL AND CHARCOAL TRAY. PLEASE REFER TO THE GRILL USER MANUAL FOR ALL SAFETY PRECAUTIONS, WARNINGS, AND INSTRUCTIONS.

### STEP 1

Remove the cooking grate (usually the one furthest to the right), and the radiant tray beneath as well. The burner is now fully exposed.

DO NOT USE THE CHARCOAL TRAY OVER A SEAR BURNER!






## INSTRUCTIONS *(continued)*

### STEP 2

Insert the Charcoal Tray into position. There is a locating pin on the back wall of the firebox which must align with a tab at the rear of the tray. The tray insert can now be installed as seen in this photo.

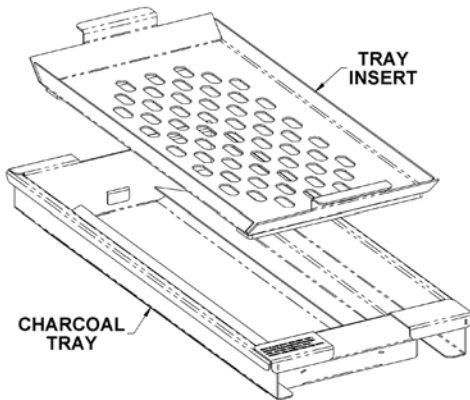

### STEP 3

Add a single layer of your favorite charcoal briquettes, lump charcoal, large mezquite chips, etc. into the tray. Ashes will fall through the large holes in the insert, into the tray below.

**DO NOT ATTEMPT TO REMOVE THE TRAY FROM THE GRILL WHILE HOT. ALLOW THE ENTIRE GRILL AND TRAY TO COOL COMPLETELY, BEFORE REMOVING THE TRAY TO PROPERLY DISPOSE OF COALS OR ASH IN A FIREPROOF CONTAINER.**



## INSTRUCTIONS *(continued)*



### STEP 4

Use a large spatula or other tool whenever moving the cooking grate to refill the tray with more coals.

Cover the coals with the cooking grate before ignition or pre-heating the grill. Follow the lighting instructions in your Grill manual. **Quick-Lighting coals, or lighter fluid is not necessary.**

The gas burner can be left on HIGH for about 5 minutes. When the edges of the coals begin to turn white, you may shut off the gas burner. The coals will continue to heat / turn white.

At this point, it will be up to you to determine when proper cooking temperature has been reached for the food you are preparing (cooking directly over coals, indirect cooking, etc.).



### NOTES

Use a large spatula or other tool whenever moving the hot cooking grate to refill the tray with more coals.

REMEMBER THE GRATES, TRAY, AND REMOVABLE TRAY INSERT ARE ALL VERY HOT. TOUCHING THESE ITEMS COULD RESULT IN SEVERE BURNS. ALLOW THE ENTIRE GRILL AND TRAY TO COOL COMPLETELY, BEFORE REMOVING THE TRAY TO PROPERLY DISPOSE OF COALS OR ASH IN A FIREPROOF CONTAINER.

Be sure to return the radiant tray to the grill if you are no longer using the Charcoal Tray accessory. The gas burners should never be run without the radiant trays to protect the burner ports from clogging with food debris.

**RETAIN THIS MANUAL FOR FUTURE REFERENCE**



**Hestan Commercial Corporation**

3375 E. La Palma Ave.  
Anaheim, CA 92806  
(888) 905-7463