

4K/UHD 6 Input Multi-Format Switcher with Mirrored HDMI and HDBaseT Outputs, PoE, and Auto-Switching

AT-UHD-CLSO-601

User Manual



Please check <http://www.atlona.com/AT-UHD-CLSO-601>
for the most recent **firmware
update** or **manual**

Table of Contents

| | |
|-------------------------------|-------|
| 1. Introduction | 3 |
| 2. Package Contents | 3 |
| 3. Features | 3 |
| 4. Wall/Rack mounts | 3 |
| 5. Panel Descriptions | |
| a. Front Panel | 4 |
| b. Back Panel | 4 |
| 6. Category cable | 5 |
| 7. Analog Multi-Format Inputs | 6 |
| 8. Audio Connections | 7 |
| 9. Microphone | 8 |
| 10. On Screen Display | 9-11 |
| 11. TCP/IP and GUI | 12-23 |
| 12. IR | 24 |
| 13. RS-232 | |
| a. Connection | 25 |
| b. Set Up | 25 |
| c. Commands | 26-30 |
| e. Control Diagram | 31 |
| 14. Control Drivers | 31 |
| 15. CLSO-601 Updating | 31 |
| 16. Connection Diagram | 32 |
| 17. Specifications | 33 |
| 18. Safety | 34 |
| 19. Warranty | 35-36 |
| 20. Registration | 36 |

Introduction

Easy to integrate, the CLSO-601 was designed for conference and classrooms with inputs near the switcher. Displays can be up to 328 feet (100 meters) from the switcher with HDBaseT outputs. Local HDMI and multifunction analog inputs work with any source. Combined with great features such as: 4K up/down scaling, microphone ducking, and audio control, this is the core component of your AV presentation system.

Package Contents

- 1 x AT-UHD-CLSO-601
- 16 x Female Captive Screw Connector
 - 6 pin: audio (x3) - 5 pin: IR (x1) - 3 pin: RS-232 (x8) - 3 pin: MIC/Line (x1) - 2 pin: power (x1)
- 1 x 48V/3.125A DC power supply adaptor
- 1 x Pair of dual purpose wall/rack mounts
- 1 x IR Remote Control
- 1 x User manual


Features

- Four HDMI inputs (accepts DVI and DisplayPort with adaptors)
- Multifunctional VGA ports for RGBHV, component, S-Video, and composite signals
- Microphone (dynamic, phantom, and line) input with ducking
- HDBaseT output mirrored to HDMI output
- PoE output to power compatible receivers (**e.g.** AT-UHD-EX-100CE-RX)
- Auto switching - automated switching to last connected source without using a control system
- Balanced audio inputs for embedding audio
- EDID management options including internal and learned EDID
- Balanced (-10 dbu) analog audio output for de-embedding audio to amplifiers or audio systems
- Upscaling and downscaling to ensure compatibility with any display up to 4K @ 30Hz resolution
- Control via RS-232, IR, TCP/IP, WebGUI, front panel, and multi-language On-Screen Display
- Multi-channel audio pass through up to Dolby TrueHD or DTS-HD Master Audio
- Master and sub volume control
- Adjust treble and bass of audio output to ensure the best speaker performance
- IP to RS-232 conversion enables TCP/IP commands to be sent using RS-232 ports
- Independent audio switching enables analog audio inputs to be embedded on any video input
- Multiple RS-232 ports for source control
- HDCP Compliant and management

Wall/Rack mounts

A pair of mounts have been included for quick and easy installation to a rack or wall.


To install the CLSO-601 in a rack, use the screws already in the case (A-pictured below)

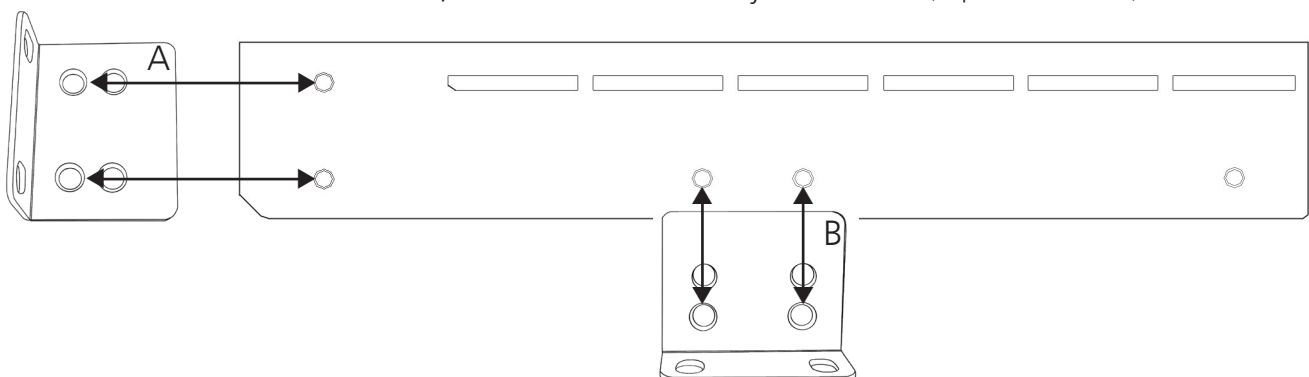

To install the CLSO-601 on a wall or under a desk/table, use the screws already in the case (B - pictured above)


Panel Description

Front Panel

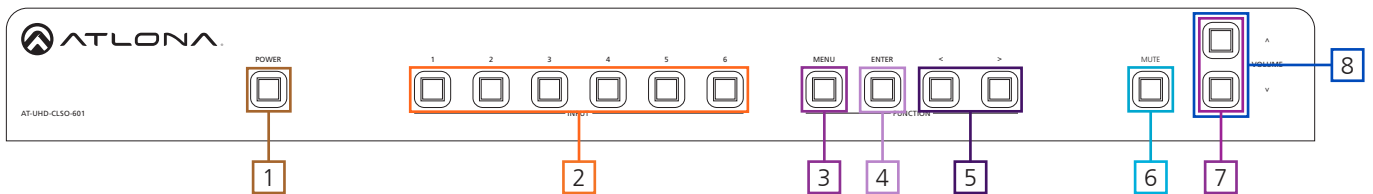

1. Power - Use to turn the unit on or place into standby. LED will illuminate blue for on and red for standby
2. Input - Switch between inputs - current input is blue
 - 1 - HDMI input 1 - Used while updating MCU firmware
 - 2 - HDMI input 2 - Used while updating OSD firmware
 - 3 - HDMI input 3 - Used while updating FPGA firmware
 - 4 - HDMI input 4
 - 5 - Multifunction analog input 5
 - 6 - Multifunction analog input 6
3. Menu - Access the OSD menu - also used as a back button within the OSD
4. Enter - Select options within the OSD menu
5. < and > - Changes values of the currently select option (**e.g.** contrast to 50)
6. Mute - Silences all audio output from the CLSO-601
8. ^ and v Use to navigate between selections within the OSD menu
7. Volume up/down - Adjusts output master volume

Back Panel

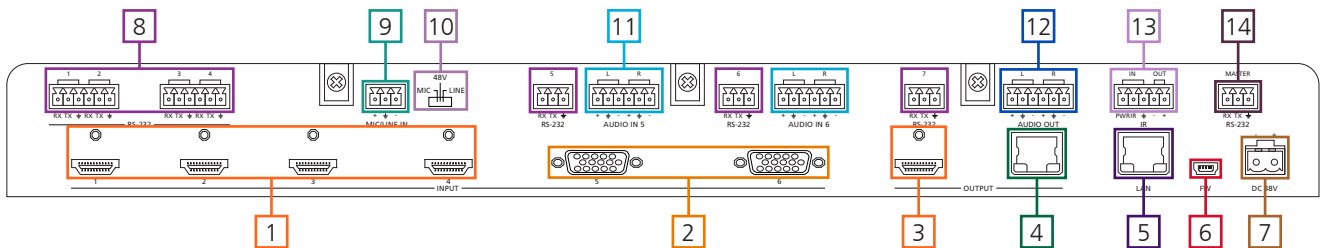


1. HDMI 1 through 4 - Connect HDMI sources here (DVI or DisplayPort compatible with adaptors)
2. VGA 5 and 6 - Connect analog video sources here

Note: Compatible with component, composite, and S-Video signals
3. HDMI Output - Connect to local display or extenders (**e.g.** AT-UHD-EX-100CE-KIT)
4. HDBaseT Output - Connect to compatible HDBaseT displays or compatible receivers (**e.g.** AT-UHD-EX-100CE-RX, etc)

Note: Compatible PoE receivers do not need power
5. LAN port - TCP/IP (Ethernet) port, connect to router, computer, or control device
6. Firmware port - Connect to a PC with a USB cable for firmware updating
7. DC 48V port - Connect included power supply here
8. RS-232 ports - Control for sources - can send RS-232 or TCP/IP commands out to sources
9. MIC/LINE IN - Connect a microphone to this port
10. MIC Switch - Match microphone input to type of microphone in use
11. Audio In - Connect audio sources here to be embedded to any video input
12. Audio Out - Audio output to audio amplifiers (**e.g.** AT-PA100-G2) or audio systems
13. IR IN/OUT - Switcher IR control ports
14. Master RS-232 - Connect control system or PC here to control the switcher

Category Cable

For the category cables used in the installation of these products, please be sure to use a 568B termination as pictured below:

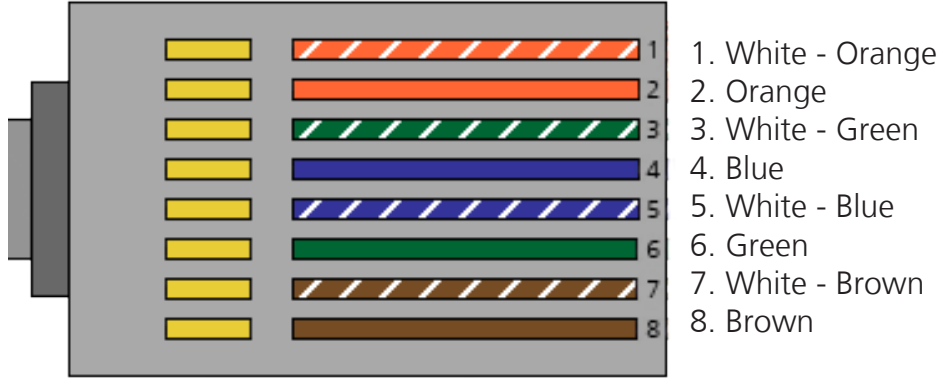

Use the table below to verify the best category cable for the installation.

| Performance Rating | | Type of LAN cable | |
|---|--------------------|---|---------|
| Wiring | Shielding | CAT5e/6 | CAT6a/7 |
| Solid | Shielded (STP/FTP) | *** | **** |
| | UnShielded (UTP) | ** | N/A |
| Stranded - Patch cable (Not recommended) | Unshielded (UTP) | * | N/A |
| | Shielded (STP/FTP) | * | N/A |
| Termination | | Please use EIA/TIA-568-B termination | |

Important! 4K (UHD) signals are sensitive to cable quality and installation technique. It is recommended to use CAT6a/7 solid core cables for best results.

Note: For cable distances see the specifications on page 28

Connector

Connector type and size is very important to ensure extenders work correctly. Please use the matching cable type with the correct RJ45 connector.

CAT5e and CAT 6 cables should use only CAT5e RJ45 connectors

CAT6a cables should use only CAT6a connectors

CAT7 cables should use only CAT7 connectors

Using the wrong size of connectors may result in interference causing loss of signal.

Important! "EZ RJ45 connectors" are not recommended with HDBaseT extenders. Doing so may result in stray EMI/RFI signals to be picked up and interfere with audio and video transmission.

Analog Multi-Function Inputs

The CLSO-601 multi-function analog inputs (Input 5 and 6) can be used with most analog video signal formats including VGA (with DDC), RGBHV (without DDC), component (YUV), S-Video, or composite video. Balanced analog audio can be input and embedded using the provided captive screw connectors.

Each format can be directly accessed from RS-232, IR, or IP control. Front panel buttons sequentially progress through each input format. The last format used is the first source selected when returning to these inputs. Unused formats can be removed from the sequence using WebGUI, RS-232, or IP.

VGA (m) to BNC, VGA (m) to RCA, and S-Video to 2 BNC adaptors can be used to connect sources to these inputs.

VGA

Use a VGA to VGA cable to ensure that the Preferred Resolution DDC is communicated to your source.

RGBHV

Use a HD-15 (VGA) to 5 BNC breakout cable for this format. An existing RGBHV analog matrix switch can be connected here to maintain full function of the analog matrix.

Component

YUV (YPbPr) signal from DVD (or other sources) can be input to the CLSO-601 using the green (Y), blue (Pb), and red (Pr) connections on a HD-15 (VGA) to 5 BNC breakout cable or with a common VGA (m)-Component (3 RCA m) adaptor.

S-Video

YC signal from a VCR or teleconference system can be input to the CLSO-601 using the blue (Y), and green (C) connections on a HD-15 (VGA) to 5 BNC (m) breakout cable and a common S-Video (m) to 2 BNC (f) adaptor

Composite

NTSC, PAL, or Secam video signals can be input to the CLSO-601 using the blue connection on a HD-15 (VGA) to 5 BNC (m) breakout cable.


A common application for this type of input would be to connect a RGBHV matrix switcher to the CLSO-601. Then each input to the matrix could be connected to a different format analog signal. A 3rd party control system could ensure the correct format is selected to match the input to the switcher.

Analog Audio

A captive screw analog audio connector is provided to ensure a more reliable and secure connection. The captive screw connector supports balanced and unbalanced audio output.


Balanced audio connections use two signal wires and a ground to minimize interference to an audio signal over longer cable runs. Unbalanced audio connections use two wires for connection with consumer audio components.

Audio can be routed to any input for use with DVI or other sources. View page 22 for commands.

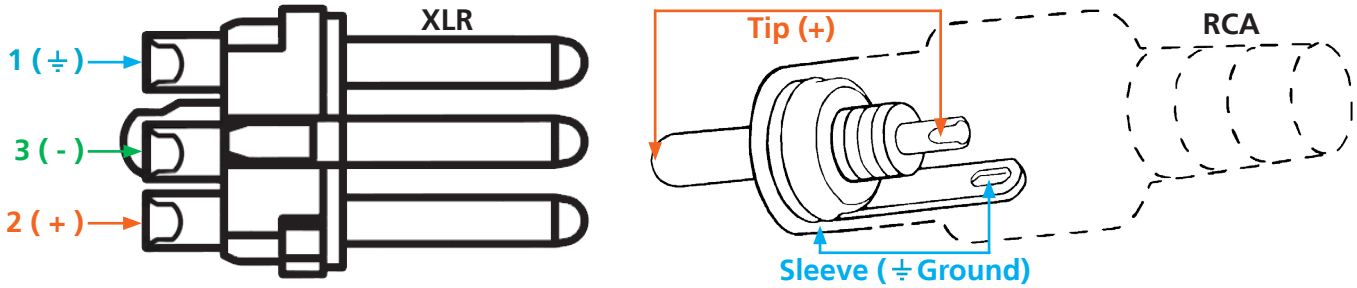

Note: Pin outs may vary, please refer to the audio device's manual to ensure a correct connection.


Important! When terminating cables, please ensure exposed adjacent wires do not touch. This may result in a short that can damage connected devices.

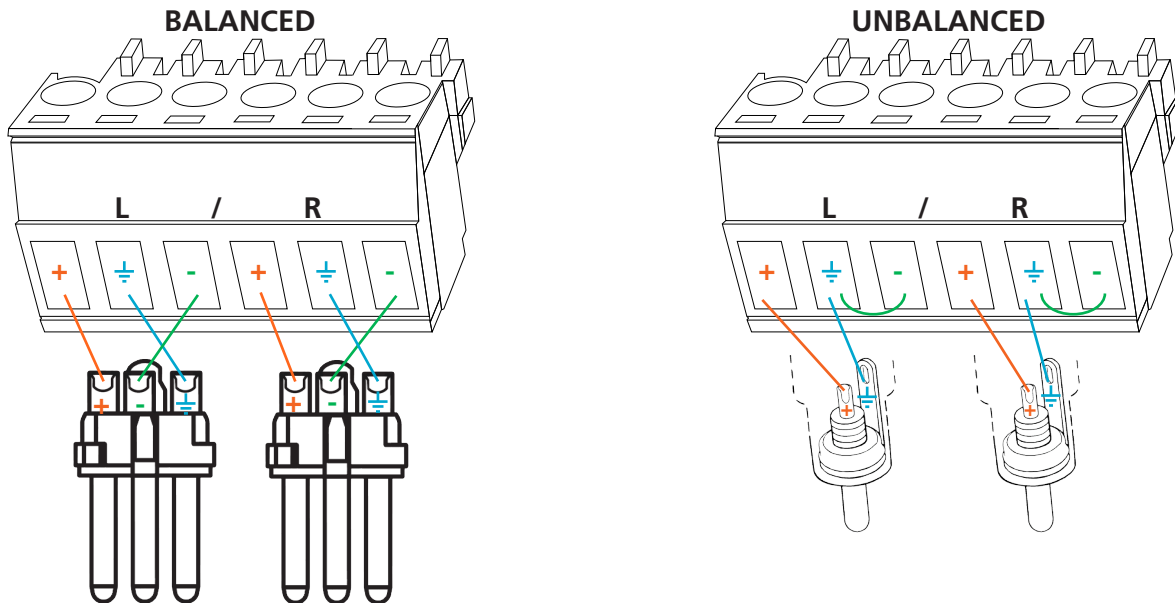


Important! With unbalanced connections a jumper is needed between ground and negative to reduce noise

Microphone Connection


MIC (Dynamic MIC)

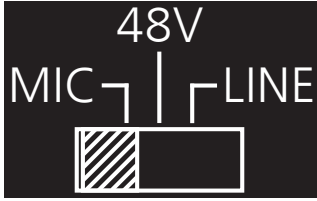


Connect dynamic or self-powered microphones in this mode.

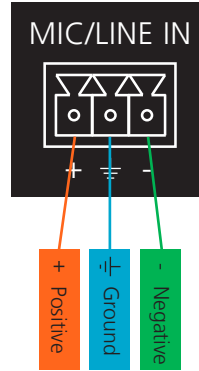


MIC
Balanced

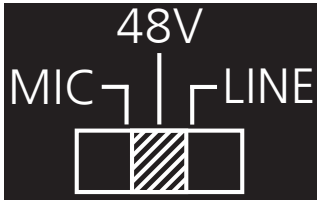


Use this setting for phantom powered microphones. Supplies 48 volts.

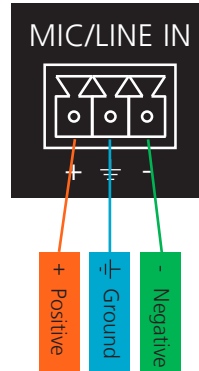


MIC
Balanced

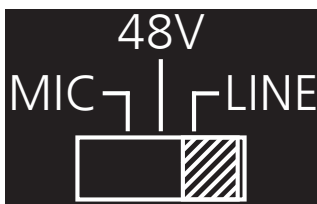

Connect wireless microphone receivers (or other sources) with line level outputs using this setting. Either balanced or unbalanced connections may be used.

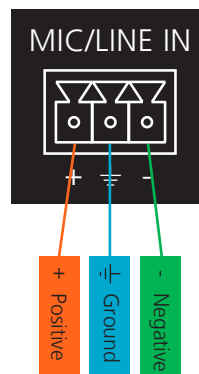

LINE
Balanced

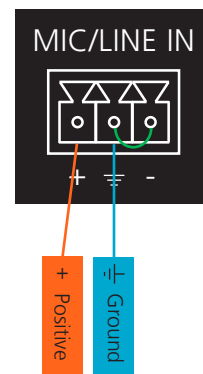

LINE
Unbalanced

On Screen Display (OSD)

| | | | | |
|--------------|--------------|--------------|----------|--------------|
| Input | Input 1 | HDMI 1 | | |
| | Input 2 | HDMI 2 | | |
| | Input 3 | HDMI 3 | | |
| | Input 4 | HDMI 4 | | |
| | Input 5 | VGA 1 | | |
| | | Component 1 | | |
| | | Composite 1 | | |
| | | S-Video 1 | | |
| | Input 6 | VGA 2 | | |
| | | Component 2 | | |
| | | Composite 2 | | |
| | | S-Video 2 | | |
| | Audio | Volume | Master | -80 to +10db |
| | | | Sub | HDMI 1 |
| HDMI 2 | | | | -80 to +10db |
| HDMI 3 | | | | -80 to +10db |
| HDMI 4 | | | | -80 to +10db |
| Analog 1 | | | | -80 to +10db |
| Analog 2 | | | | -80 to +10db |
| Microphone | | | | -80 to +10db |
| Line In | | -80 to 0db | | |
| Bass | | -10 to 12 dB | | |
| Treble | -10 to 12 dB | | | |
| Video | Contrast | 0 to 100 | | |
| | Brightness | 0 to 100 | | |
| | Sharpness | 0 to 30 | | |
| | Color | 0 to 100 | | |
| | Tint | 0 to 100 | | |
| | H Position | 0 to 40 | | |
| | Phase | 0 to 63 | | |
| | NR | BNR | Disabled | |
| | | | Low | |
| | | | Medium | |
| | | | High | |
| | | MNR | Disabled | |
| | | | Low | |
| | | | Medium | |
| | | | High | |
| | | RNR | Disabled | |
| | | | Low | |
| | | | Medium | |
| | | | High | |
| | Scale | Full | | |
| Overscan | | | | |
| Underscan | | | | |
| Letterbox | | | | |
| Panscan | | | | |
| Follow Input | | | | |

| | | | |
|----------|----------------|-------------------|------------------------|
| Setup | Language | English | |
| | | Spanish | |
| | | French | |
| | | German | |
| | OSD Settings | Transparency | |
| | | Position | Horizontal Vertical |
| | | Menu Timer | 10 sec |
| | | | 30 sec |
| | | | 60 sec |
| | Info Banner | On Off | |
| | Output Format | HD | Pass Through |
| | | | 480i@60 (NTSC) |
| | | | 480p@60 |
| | | | 720p@60 |
| | | | 1080i@60 |
| | | | 1080p@60 |
| | | | 576i@50 (PAL) |
| | | | 576p@50 |
| | | | 720p@50 |
| | | | 1080i@50 |
| | 1080p@50 | | |
| 1080p@24 | | | |
| | Native | | |
| UHD | | 3840x2160p@24 | |
| | | 3840x2160p@25 | |
| | | 3840x2160p@30 | |
| | | 4096x2160p@24 | |
| | | 4096x2160p@30 | |
| PC-1 | | 640x480@60 | |
| | | 640x480@72 | |
| | | 640x480@75 | |
| | | 800x600@60 | |
| | | 800x600@72 | |
| | | 800x600@75 | |
| | | 1024x768@60 | |
| | 1024x768@72 | | |
| | 1024x768@75 | | |
| PC-2 | | 1280x768@60 | |
| | | 1280x800@60 | |
| | | 1280x960@60 | |
| | | 1280x1024@60 | |
| | | 1360x768@60 | |
| | | 1366x768@60 | |
| | | 1400x1050@60 | |
| | | 1440x900@60 | |
| | | 1600x900@60 | |
| | | 1600x1200@60 | |
| | | 1920x1200@60 | |
| Network | Network Status | MAC Address | |
| | | xx-xx-xx-xx-xx-xx | |
| | | IP Address | |
| | | xxx.xxx.x.xxx | |
| | | Subnet | |
| | xxx.xxx.xxx.x | | |
| | Gateway | | |
| | xxx.xxx.x.x | | |
| | DHCP | ON OFF | |

Note: After selecting a new language, close the menu and reopen it for the change to take effect.

| | | | |
|------------|---------------|--------------------|----------------------|
| Status | System Info | Software Revision | x.x.xx (e.g. 1.0.01) |
| | | OSD Revision | x.x.x (e.g. 1.0.0) |
| | | FPGA Revision | x.x.x (e.g. 1.0.0) |
| | | On-Time (h-m) | x:xx (e.g. 1:15) |
| | Video Info | Input | xxxx (e.g. HDMI 1) |
| | | Signal Type | xxxx (e.g. HDMI) |
| | | Video Format | xxxx (e.g. 1080i@60) |
| | | Aspect | xxxx (e.g. 16x9) |
| | | Color Space | xxxx (e.g. YUV) |
| | | Color Depth | xxxx (e.g. 24) |
| Audio Info | Input | xxxx (e.g. HDMI 1) | |
| | Audio Format | xxxx (e.g. PCM) | |
| | Sampling Rate | xxxx (e.g. 48 KHz) | |
| | Channels | xxxx (e.g. 2-Ch) | |

TCP/IP

For convenience, the CLSO-601 comes with DHCP on. This enables the switcher to be connected to a network without concern for overlapping IP addresses with other devices on the network. If your network does not support DHCP, this feature may be turned off and the IP address set using RS-232 commands or the WebGUI.


Note: If your system is controlled using IP, it is strongly recommended that you disable DHCP and select a unused IP address so that your system controller doesn't lose contact with the switcher.

TCP/IP WebGUI


Atlona has created an easy to use WebGUI for initial setup and later changes to the configuration of the CLSO-601.

To begin, connect the LAN port of the CLSO-601 to your network. Type the IP address of the CLSO-601 into the web browser of a PC connected to the same network (as seen below).

To find the switcher IP: Select "Network Status" within the OSD menu or use RS-232 command "IPCFG".

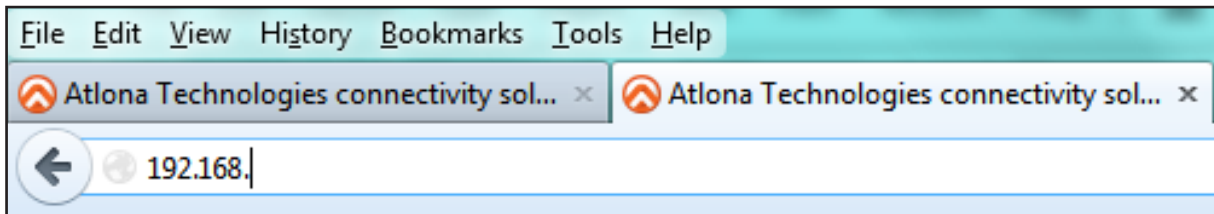

Important: If any stability issues are experienced, disable any anti-virus or firewall that may interfere with network communication to the switcher. Once set up is done and the switcher GUI is no longer being used, the firewall and anti-virus can be re-enabled.

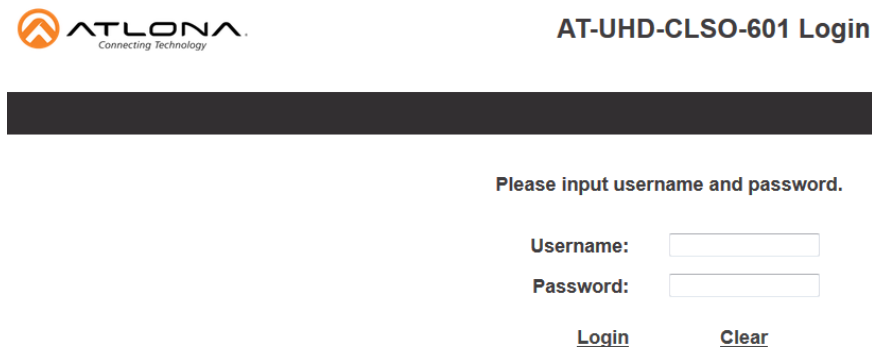A screenshot of the AT-UHD-CLSO-601 Login screen. At the top left is the Atlona logo. At the top right is the title 'AT-UHD-CLSO-601 Login'. Below the title is a large black rectangular area. Underneath this is the instruction 'Please input username and password.' followed by two input fields: 'Username:' and 'Password:'. Below the input fields are two buttons: 'Login' and 'Clear'.

A login screen will appear (this is the same log in for admin and general users). For the first log in (and future admin changes) the username is "root" and password is "Atlona".

Note: Only the admin password can be changed (see page 17). The username will always remain "root".

Home Network Setup Settings Config EDID Audio Control Update

| System Info. | |
|--------------------|-----------------|
| Model: | AT-UHD-CLSO-601 |
| Software Revision: | 0.2.12 |
| FPGA Revision: | 0.0.1 |
| OSD Revision: | 0.1.1 |
| On-Time(h-m): | 14:01 |

| Video Info. | |
|---------------|--------------|
| Input: | HDMI 1 |
| Signal Type: | HDMI |
| Video Format: | 3840x2160@30 |
| Aspect: | 16x9 |
| Color Space: | RGB |
| Color Depth: | 24 |

| Audio Info. | |
|----------------|--------|
| Input: | HDMI 1 |
| Audio Format: | PCM |
| Sampling Rate: | 48KHz |
| Channels: | 2-ch |

The home screen tab will display the general system information. If an HDMI port is the current input, audio will display (see image above). If an analog port is selected then no audio information will be displayed. (see below)

ATLONA Connecting Technology AT-UHD-CLSO-601

Home Network Setup Settings Config EDID Audio Control Update

| System Info. | |
|--------------------|-----------------|
| Model: | AT-UHD-CLSO-601 |
| Software Revision: | 0.2.08 |
| FPGA Revision: | 0.0.1 |
| OSD Revision: | 0.1.1 |
| On-Time(h-m): | 0:11 |

| Video Info. | |
|---------------|-------|
| Input: | VGA 1 |
| Signal Type: | -- |
| Video Format: | -- |
| Aspect: | -- |
| Color Space: | -- |
| Color Depth: | -- |

| Home | Network Setup | Settings | Config | EDID | Audio | Control | Update |
|-------------|--|----------|--------------------------------------|------|-------|---------|--------|
| DHCP | <input checked="" type="radio"/> ON | | <input type="radio"/> OFF | | | | |
| IP Address | <input type="text" value="192.168.000.058"/> | | | | | | |
| Subnet | <input type="text" value="255.255.255.000"/> | | | | | | |
| Gateway | <input type="text" value="192.168.000.001"/> | | | | | | |
| Telnet Port | <input type="text" value="23"/> | | | | | | |
| Login Mode | <input type="radio"/> ON | | <input checked="" type="radio"/> OFF | | | | |
| MAC Address | B8-98-B0-00-00-58 | | | | | | |

The network set up page will allow the IP information to be changed. When a change is made the screen will grey and the ability to save or cancel will display at the bottom (see below).

Note: When DHCP is on, the IP address cannot be configured. Turn DHCP off to enable IP configuration.

Note: For a stable connection when using a control system, it is best to set up a static IP. When selecting an IP address, make certain no other devices on your network are using that IP address.


Note: Be sure to save all changes before moving to the next page.

| | | | | | | | |
|------------------------------|--|--|---------------------------|------------------------|--|--|--|
| DHCP | <input checked="" type="radio"/> ON | | <input type="radio"/> OFF | | | | |
| IP Address | <input type="text" value="192.168.000.117"/> | | | | | | |
| Subnet | <input type="text" value="255.255.255.000"/> | | | | | | |
| Gateway | <input type="text" value="192.168.000.001"/> | | | | | | |
| Telnet Port | <input type="text" value="23"/> | | | | | | |
| Login Mode | <input checked="" type="radio"/> ON | | <input type="radio"/> OFF | | | | |
| MAC Address | B8-98-B0-00-00-01 | | | | | | |
| Save Setting | | | | Cancel | | | |

Login Mode has been added to provide a secure telnet login. Once Login Mode has been turned on a username and password will be required on all IP connections to the switcher.

Note: Login mode should be in off position when the CLSO is used with control systems that do not support passwords. If your control system supports password protection, set the login mode to on. The GUI always requires a password.

Note: The username and password used in IP Login Mode will be the same login information as the WebGUI.

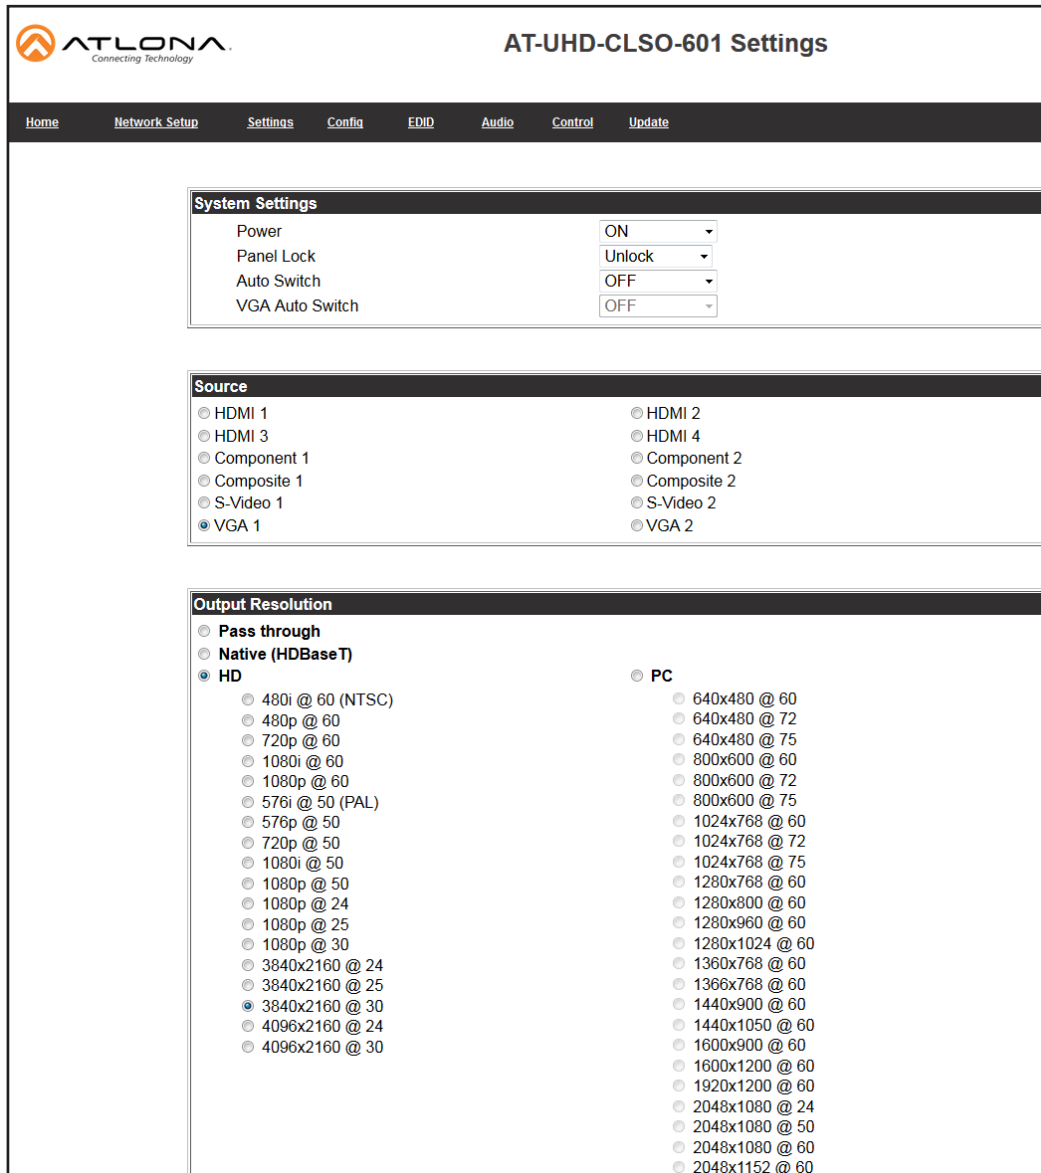

The settings page is used to set front panel and video options. Select the source from the first menu. If VGA is selected, more video options will display. (see top of page 16)

System Settings

- Power - Turn the switcher on and off
- Panel Lock - Locks/unlocks the front panel buttons
- Auto Switch - Turns auto switching between HDMI inputs on/off
- VGA auto switch - Turns VGA auto switching on/off

Note: VGA auto switching is only available on VGA and will not work with component, composite, and S-Video
 Component, composite, and S-Video poll settings will grey out when VGA auto switching is on

Output Resolution

Switch between multiple video output resolutions:

- Pass through - Input video will pass to the display without being scaled
- Native - Upscales/downscales the output signal to match the HDBaseT display's preferred resolution
- HD - Will upscale/downscale the output signal to match the selected HD resolution
- PC - Will upscale/downscale the output signal to match the selected PC resolution

Note: When the output is set to UHD resolutions, UHD sources are passed through without scaling. Frame rates are not changed. (e.g. if 3840x2160@30Hz input is received, output will remain 30Hz even if output is set to 24Hz)

| Video Settings | |
|----------------|--------|
| Scale | Full |
| BNR | Medium |
| MNR | Medium |
| RNR | Medium |
| Contrast | 50 |
| Brightness | 50 |
| Sharpness | 15 |
| Color | 50 |
| Tint | 0 |
| H Position | 20 |
| Phase | 0 |

| Poll Settings | |
|---|---|
| <input checked="" type="checkbox"/> VGA 1 | <input checked="" type="checkbox"/> VGA 2 |
| <input checked="" type="checkbox"/> Component 1 | <input checked="" type="checkbox"/> Component 2 |
| <input checked="" type="checkbox"/> Composite 1 | <input checked="" type="checkbox"/> Composite 2 |
| <input checked="" type="checkbox"/> S-Video 1 | <input checked="" type="checkbox"/> S-Video 2 |

| OSD Display Setting | |
|---------------------|----|
| OSD func. | ON |
| OSD info. | ON |

Video Settings

Set the output video settings:

Scale - Sets video output aspect ratio - Full, overscan, letter box, pan and scan, or follow input

Full - Sources always fill the screen, regardless of source aspect ratio

Overscan - Image is slightly zoomed in so that broadcast data at edges is masked

LetterBox - Used to create 16:9 aspect ratio on 4:3 aspect ratio TVs

Pan and Scan - Used to create 4:3 aspect ratio on 16:9 aspect ratio TVs

Follow Input - Aspect ratio on TV matches source aspect ratio

BNR - Block noise reduction - Disabled, low, medium, or high

MNR - Mosquito noise reduction - Disabled, low, medium, or high

RNR - Random noise reduction - Disabled, low, medium, or high

Contrast* - Sets output white levels - 0 up to 100

Brightness* - Sets output black levels - 0 up to 100

Sharpness* - Sets output sharpness - 0 up to 30

Color* - Sets output color saturation - 0 up to 100

Tint* - Sets output hues - 0 up to 100

*Only available when outputs 5 and 6 (VGA 1 & VGA 2) are selected

Poll Settings

Turn analog input options on and off. If a selection is unchecked it will not display as an input option when switching to input 5 or 6.

e.g. In the above picture, only VGA and S-Video would show as a source option

Note: Component, composite, and S-Video poll settings will grey out when VGA auto switching is on

OSD Display Settings

OSD func - Turns the CLSO's display OSD menu on/off

OSD info - Turns the source information on the display on/off when switching


Factory Default

It will reset parameters. Confirm Cancel

Factory Default

Select to reset CLSO back to factory settings.

Note: This will reset the switcher to factory default, including: resolutions, audio settings, HDCP settings, etc.

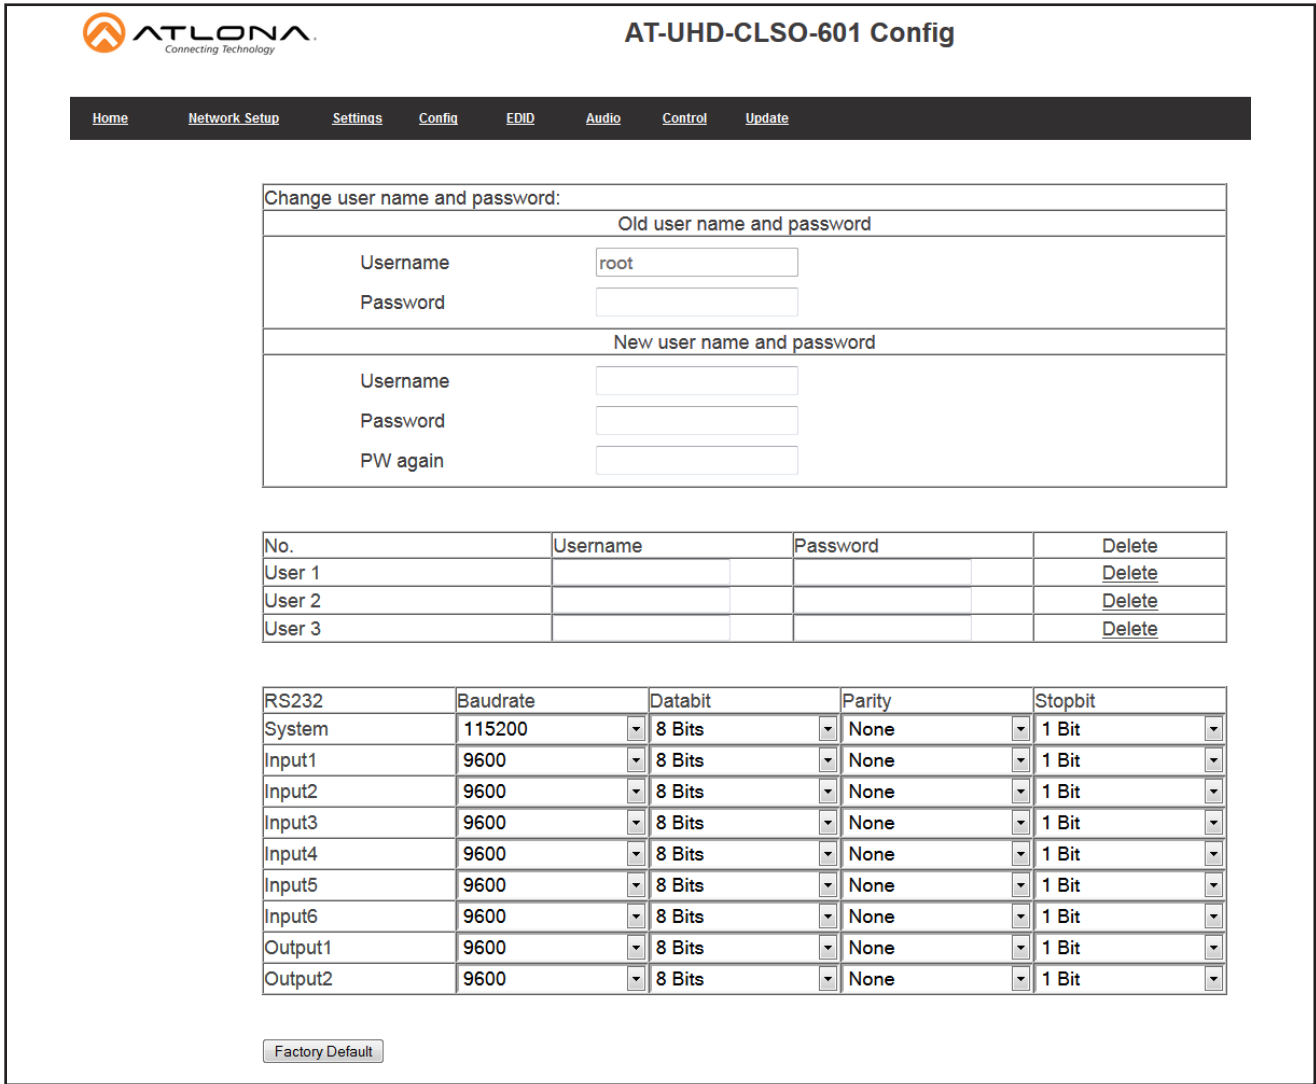

AT-UHD-CLSO-601 Config

Home
Network Setup
Settings
Config
EDID
Audio
Control
Update

Change user name and password:

| Old user name and password | |
|----------------------------|-----------------------------------|
| Username | <input type="text" value="root"/> |
| Password | <input type="password"/> |
| New user name and password | |
| Username | <input type="text"/> |
| Password | <input type="password"/> |
| PW again | <input type="password"/> |

| No. | Username | Password | Delete |
|--------|----------------------|----------------------|------------------------|
| User 1 | <input type="text"/> | <input type="text"/> | Delete |
| User 2 | <input type="text"/> | <input type="text"/> | Delete |
| User 3 | <input type="text"/> | <input type="text"/> | Delete |

| RS232 | Baudrate | Databit | Parity | Stopbit |
|---------|----------|---------|--------|---------|
| System | 115200 | 8 Bits | None | 1 Bit |
| Input1 | 9600 | 8 Bits | None | 1 Bit |
| Input2 | 9600 | 8 Bits | None | 1 Bit |
| Input3 | 9600 | 8 Bits | None | 1 Bit |
| Input4 | 9600 | 8 Bits | None | 1 Bit |
| Input5 | 9600 | 8 Bits | None | 1 Bit |
| Input6 | 9600 | 8 Bits | None | 1 Bit |
| Output1 | 9600 | 8 Bits | None | 1 Bit |
| Output2 | 9600 | 8 Bits | None | 1 Bit |

Factory Default

The config page will allow the admin password to be changed, users to be added, and the RS-232 ports to be configured (CLSO-601 system port and the RS-232 I/O ports can be adjusted individually).












Note: User information will display for the admin only.





Note: Only the admin password can be changed. The admin username will always remain "root". If the admin password is lost the system must be returned to factory settings and setup repeated.

| | | | |
|----------------------|--|----------------------|--|
| Prefer Timing(HDMI): | <input type="text" value="Default"/> | Prefer Timing(HDMI): | <input type="text" value="Default"/> |
| Prefer Timing(VGA): | <input type="text" value="Default"/> | Prefer Timing(VGA): | <input type="text" value="Default"/> |
| Input1 HDCP: | <input type="text" value="Compliant"/> | Input1 HDCP: | <input type="text" value="1280 x 800"/> |
| Input2 HDCP: | <input type="text" value="Compliant"/> | Input2 HDCP: | <input type="text" value="1920 x 1080"/> |
| Input3 HDCP: | <input type="text" value="Compliant"/> | Input3 HDCP: | <input type="text" value="1024 x 768"/> |
| Input4 HDCP: | <input type="text" value="Compliant"/> | Input4 HDCP: | <input type="text" value="1280 x 720"/> |
| | | | <input type="text" value="1920 x 1200"/> |
| | | | <input type="text" value="1366 x 768"/> |
| | | | <input type="text" value="800 x 600"/> |
| | | | <input type="text" value="1600 x 900"/> |
| | | | <input type="text" value="2560 x 1440"/> |
| | | | <input type="text" value="3840 x 2160"/> |

The EDID page enables the input preferred timing to be selected and HDCP compliance reporting to be set. This function is controllable through RS-232 as well.





- Note:** CLSO-601 protects HDCP encoded content and will not pass HDCP content to a non-HDCP compliant device.
- Note:** Some devices flag all content as protected when connected to an HDCP compliant display. This prevents what should be non-protected content from reaching devices (i.e. teleconference system) through the CLSO-601.
- Note:** When HDCP reporting is non-compliant, only user created content is transmitted. Protected content from all sources (e.g. BluRay, AppleTV, etc) is blocked.

| Volume Settings | | |
|-----------------|-------------------------------------|--|
| Master | <input type="text" value="-22"/> dB |  |
| HDMI 1 | <input type="text" value="0"/> dB |  |
| HDMI 2 | <input type="text" value="0"/> dB |  |
| HDMI 3 | <input type="text" value="0"/> dB |  |
| HDMI 4 | <input type="text" value="0"/> dB |  |
| Analog 1 | <input type="text" value="0"/> dB |  |
| Analog 2 | <input type="text" value="0"/> dB |  |
| Microphone | <input type="text" value="-10"/> dB |  |
| Line In | <input type="text" value="-10"/> dB |  |
| Bass | <input type="text" value="0"/> dB |  |
| Treble | <input type="text" value="0"/> dB |  |

| Ducking Settings | | |
|------------------|--------------------------------------|---|
| Microphone | <input type="text" value="ON"/> | |
| Attack Time | <input type="text" value="450"/> ms |  |
| Release Time | <input type="text" value="2000"/> ms |  |
| Trig Level | <input type="text" value="-55"/> dB |  |
| Program Decrease | <input type="text" value="20"/> dB |  |

Audio settings adjust output volume for all sources including the microphone.
 Master - Affects all sources at the same time
 Inputs - Used to balance levels from each source.

Note: For best results, gains should be balanced between master and source levels.

| Ducking Settings | | | |
|------------------|---------|--|--|
| Microphone | ON | | |
| Attack Time | 450 ms |  | |
| Release Time | 2000 ms |  | |
| Trig Level | -55 dB |  | |
| Program Decrease | 20 dB |  | |

Microphone ducking uses the audio level from the microphone to decrease the program level so the speaker may be heard.

Note: Proper set up is critical for satisfactory operation. If program levels are too high they can trigger the ducking process.

Note: Setting the microphone volume too high may result in feedback.

It is recommended that a handheld or headset microphone be used with ducking to reduce feedback and maximize the difference between voice and program levels.

Best results are received with the following sequence:

1. Set master volume to 0. (This is 10 db below maximum)
2. Raise appropriate microphone (or line in) volume until just below feedback or adequate volume is reached (whichever setting is lower). - Master level and amplifier gains may be increased to get appropriate levels
 - Note:** If feedback occurs and volume is not adequate, move the speakers and/or microphone to eliminate feedback.
3. Raise source "sub" volumes to appropriate levels without talking
4. Set attack time to minimize popping, but still fast enough that initial talking sounds are heard.
5. Set release time so that program levels do not increase between sentences.
 - Note:** Shorten time so that the microphone doesn't interfere with the program.
6. Set the trigger level so that words spoken at a normal level trigger the ducking process
 - Note:** Set the trigger level too sensitive and the program will trigger the ducking. Set too low and the speaker will have to talk very loudly to trigger ducking. The further right the slider is, the more sensitive the setting.
7. Set program decrease to ensure when ducking is triggered the program level is low enough the speaker can be heard.

Fine tuning these settings will help achieve the best results.

| Button Control Selection | |
|--------------------------|-------------|
| Power | None ▾ |
| Volume/Mute | Audio Out ▾ |
| Display Mode | Always ON ▾ |

| CEC Control | |
|-------------|--|
| Power | <input type="button" value="on"/> <input type="button" value="off"/> |

The Control Page includes settings which enable display controls by the switcher. It provides a way to program button functions, turn auto switching on/off, and determine the type of control commands (TCP/IP or RS-232) sent out.

Button Control Selection

Power - Set which device the power button controls

None: Power button will turn the UHD-CLSO-601 on and off

RS-232: Power button will send power on/off command over HDBaseT using RS-232 to compatible receivers and displays

IP: Power button will send power on/off command over Ethernet using either the LAN connection or the HDBaseT connection

CEC: Sends CEC command over HDBaseT to the HDMI output of the receiver

Volume/Mute

Audio Out: Volume and mute buttons will control volume output of the switcher

RS-232: Volume/Mute buttons will send the commands over HDBaseT using RS-232 to compatible receivers and displays

IP: Volume/Mute buttons will send the commands over Ethernet using either the LAN connection or the HDBaseT connection

Display Mode - Sets functionality of the power button

DispSW AVon: Display switches on/off, source audio/video signal always on

DispSW AVSW: Display switches on/off, source audio/video signal switches on/off

AV SW: Display is always on, source audio/video signal switches on/off

Always ON: No function

Note: Must be in DispSW AVon or DispSW AVSW for RS-232 display control to work

CEC Control

Power

On - Sends a command over HDBaseT to the HDMI output of the connected receiver to turn the connected display on

Off - Sends a command over HDBaseT to the HDMI output of the connected receiver to turn the connected display off

Note: CEC may not work with every display type

| System Settings | | |
|-------------------------------|-------------------------------------|-----------------|
| Display Auto Power On | <u>Enabled</u> | <u>Disabled</u> |
| Display Auto Power Off | <u>Enabled</u> | <u>Disabled</u> |
| Power Button Lock | <u>Enabled</u> | <u>Disabled</u> |
| Lamp Cool Down Timer (0~300) | <input type="text" value="0"/> Sec | <u>Save</u> |
| Auto Power Off Timer (1~240) | <input type="text" value="20"/> Sec | <u>Save</u> |
| Display Warm Up Timer (0~300) | <input type="text" value="0"/> Sec | <u>Save</u> |
| Control Type | IP ▾ | |
| Feedback Verify | ON ▾ | |
| Display Mode | DispSW AVSW ▾ | |

System Settings

Display Auto Power On - When enabled, the unit will send a programmed command to the display to turn on after detecting an A/V signal

Display Auto Power Off - When enabled, the unit will send a command to the display to turn off after not detecting an A/V signal

Lamp Cool Down Timer (0-300) - Used with a projector whose lamp cannot be turned on for up to 5 minutes after being shut off. Match settings with lamp delay on projector

Auto Power Off Timer (1-240) - Sets the period of time between the loss of A/V signal and when the "Display Off" command is sent

Note: LED will blink red for the auto power off time period then go solid

Note: All functionality remains, only the HDBaseT output is turned off

Display Warm Up Timer (0-300) - Sets the period of time after the display is turned on, that the power button will be locked

Note: LED will blink green for the warm up timer period and then stay solid

Note: When timers are set to 0 seconds, they will disable the timers' functions

Control Type - Select whether the display on/off commands are sent using RS-232, TCP/IP, or CEC

Feedback Verify

On: If receiving no feedback, the product will send the command up to 4 times

Off: The command will only be sent once, whether feedback is received or not

Display Mode -

DispSW AVon: Display switches on/off, source audio/video signal always on

DispSW AVSW: Display switches on/off, source audio/video signal switches on/off

AV SW: Display is always on, source audio/video signal switches on/off

Note: Must be in DispSW AVon or DispSW AVSW for RS-232 display control to work

| TCP/IP Settings of Controlled Device | |
|--------------------------------------|--|
| IP Mode | Non-Login <input type="button" value="Save"/> |
| IP Address | 192.168.0.43 <small>Please set your device to static IP address.</small> |
| Port | 2002 |
| Username | root |
| Password | Atlona |

| RS-232/IP Commands | |
|--|-------------------------------------|
| <input checked="" type="radio"/> ASCII <input type="radio"/> Hex | <input type="button" value="Save"/> |
| <input type="button" value="Test"/> On | |
| PW 1,,in2 | None ▾ |
| Feedback | |
| PW 1 | None ▾ |
| <input type="button" value="Test"/> Off | |
| PW 0,,,45 | None ▾ |
| Feedback | |
| PW 0 | None ▾ |
| <input type="button" value="Test"/> Volume+ | |
| VOL+ | None ▾ |
| <input type="button" value="Test"/> Volume- | |
| VOL- | None ▾ |
| <input type="button" value="Test"/> Mute | |
| MUTE | None ▾ |
| Feedback | |
| MUTE | None ▾ |

TCP/IP Settings of Controlled Device

This option sets the IP for display control. The static IP set here should match the display's static IP. To set or view the display's IP address, check the display's user manual.

Note: The switcher and the display must be on the same network for these commands to work

Note: Be sure the static IP address set for the display does not match any other device on the network

IP Mode

Non-login: Does not require a username and password when using TCP/IP to control the display

Login: Requires a username and password to control the display through TCP/IP

IP Address & Port - Set to match the display's static IP

Username & Password - Required when in login mode

Save - Saves the IP settings for accessing the controlled device

RS-232/IP Commands


ASCII/Hex - Set which type of commands are sent to the display

On/Off/Volume+/Volume-/Mute - Enter the specific commands and feedback that will be sent/received when using any of the control options

Note: Individual commands will be found in the display's manual

End of line symbols - None, CR, LF, CR-LF, Space, STX, ETX, Null - Select the appropriate symbol from the drop down list. Carriage return, line feed, and carriage return with line feed are the most commonly used symbols.

Note: Be sure to check the display's manual for the correct symbol

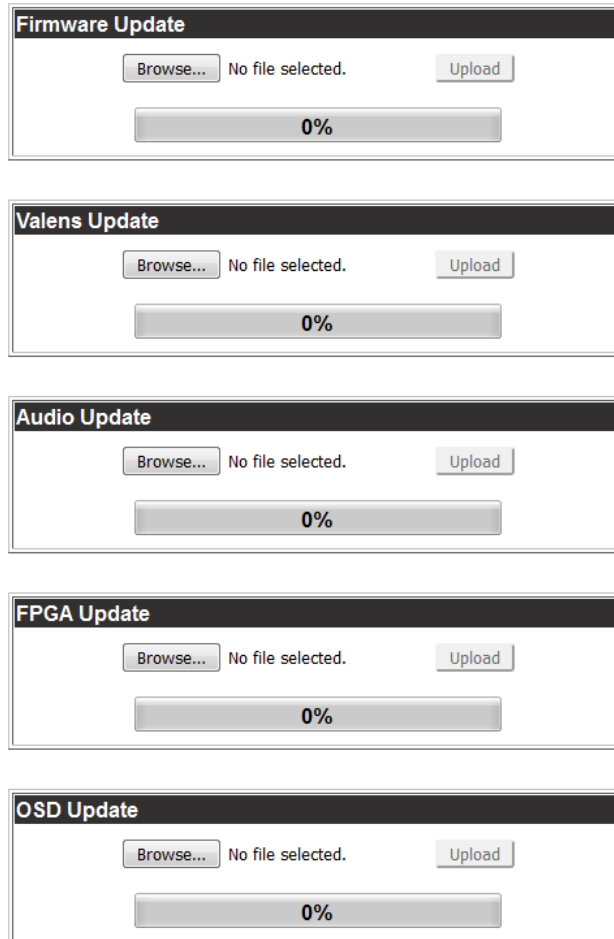

The screenshot displays five update sections, each with a 'Browse...' button, 'No file selected.' text, an 'Upload' button, and a progress bar at 0%.

- Firmware Update**
- Valens Update**
- Audio Update**
- FPGA Update**
- OSD Update**

The firmware page provides an area to update the switcher, Valens, audio, FPGA, and OSD firmwares.


- Select the browse button for the type of firmware to be updated
 - Firmware Update - MCU/Main firmware
 - Valens Update - Valens firmware
 - Audio Update - DSP firmware
 - FPGA Update - FPGA firmware
 - OSD Update - OSD firmware
- Select the new firmware file that was downloaded either from atlona.com or box.com
- Press the update button

A progress bar will display as the update is completed. After the update is complete, if a restart is required, the webGUI will display a prompt. The firmware update is now complete and the switcher is ready to be used.

Remote

Power
 On - turns CLSO-601 on
 Off - sets CLSO-601 into standby

Controls
 Menu - Pulls up on screen display menu - also serves as back button
 Exit - Closes on screen display menu
 Arrows - Use to navigate the on screen display menu and adjust volume
 OK - Enter button, use to select choices within the on screen display menu
 Mute - Silences all audio outputs
 Auto - Auto VGA setup

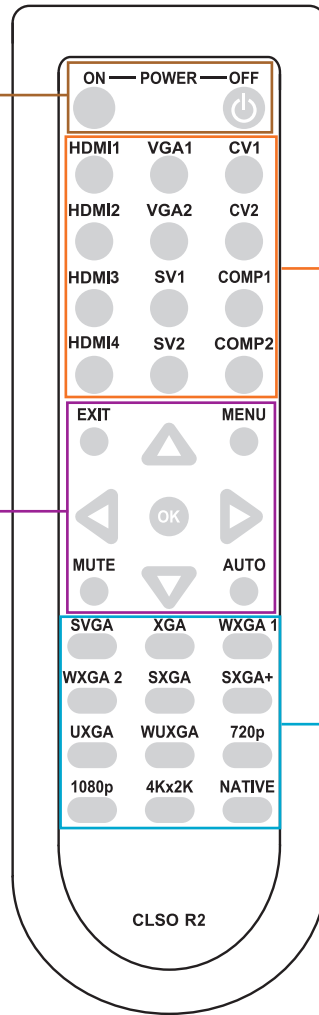



Source Selection
 HDMI1 - Input 1
 HDMI2 - Input 2
 HDMI3 - Input 3
 HDMI4 - Input 4
 VGA1 - Input 5
 VGA2 - Input 6
 SV1 - Input 5 (S-Video 1)
 SV2 - Input 6 (S-Video 2)
 CV1 - Input 5 (Composite 1)
 CV2 - Input 5 (Composite 2)
 COMP1 - Input 5 (Component 1)
 COMP2 - Input 6 (Component 2)

Output Resolution Selection
 SVGA - 800x600
 XGA - 1024x768
 WXGA1 - 1280x800
 WXGA2 - 1360x768
 SXGA - 1280x1024
 SXGA+ - 1440x900
 UXGA - 1600x1200
 WUXGA - 1920x1200
 720p
 1080p
 4Kx2K - 3840x2160
 Native - Upscales/downscales the output signal to match the HDBaseT display's preferred resolution


System IR is typically used to connect to control system processors. This input is used to control the CLSO-601.

Note: The IR receiver is optional for the UHD-CLSO-601. The compatible IR receiver (AT-IR-CS-RX) can be purchased through atlon.com.



The wires of the emitter and receiver have been marked to differentiate the pin outs.

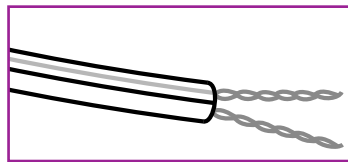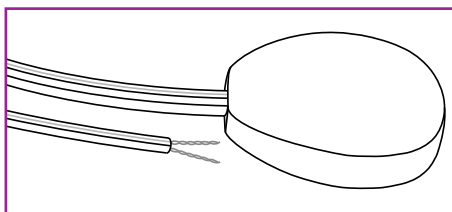

— Signal (S)
 — Ground (G)

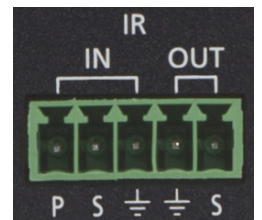

The included IR emitter has two wires: signal and ground. Signal will have a solid line and ground will be blank. The IR emitter will plug into the IR OUT ports.

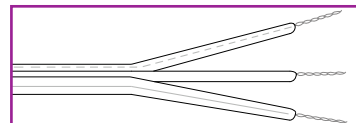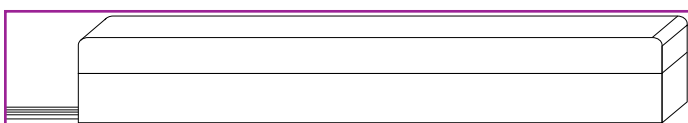



— Signal (S)
 — Ground (G)
 — Power (P)

There are three wires on the IR receiver (sold separately): signal, ground, and power. Signal has a dotted line, ground will be blank, and power will have a solid line. The IR receiver will plug into the IR IN ports.

RS-232

Connection


RS-232 pin out will be determined by the RS-232 cable and will connect as Rx (receiver), Tx (transmitter), and \perp (ground). (See picture 1)

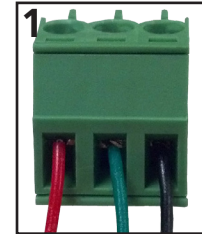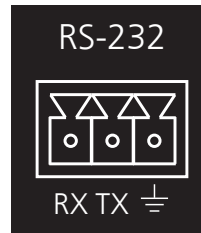

Wire color will differ by cable manufacturer.

RS-232 is often connected through a DB 9-pin to captive screw connector. The pins will have functions associated with them, some will be unassigned.

Note: Typical DB9 connectors use pin 2 for TX, pin 3 for RX, and pin 5 for ground. On some devices functions of pins 2 and 3 are reversed.

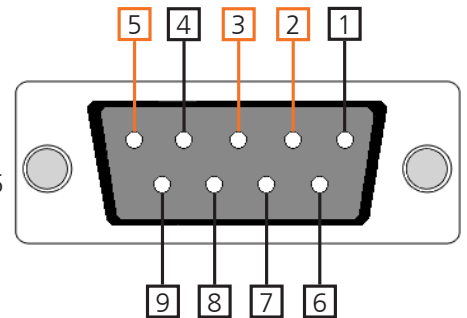

Set Up


To set up the RS-232 hyperterminal (if not using 3rd party software) use the following steps:

1. Connect the CLSO-601 to a PC using a 3 pin to USB cable
2. Go to the Device Manager folder (see picture A)
3. Find the CLSO-601 COM port and right click with a mouse and select properties (see picture B)

Note: If unsure which COM port is the CLSO-601, unplug the cable and plug it back in. It will disappear and reappear on the COM port list.

4. Under the properties menu select the port settings tab and update the menu to the **CLSO-601 default settings of:** Bits Per Second: 115200, Data Bits: 8, Parity: None, Stop Bits: 1 and Flow Control: None. (see picture C)

Set up is done and any hyperterminal program may be used to control the CLSO-601 now.

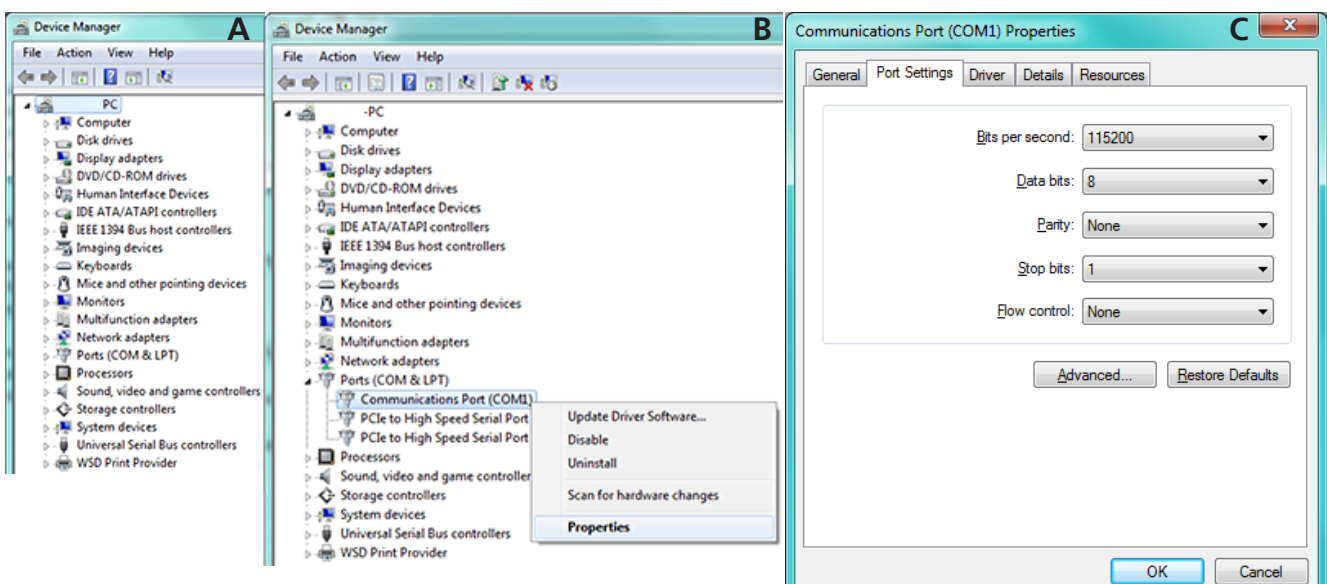

Commands

The command codes are case sensitive, do not change capitalization, spacing, or lettering.

| Command | Feedback | Description |
|---------------------------------|------------------------------------|--|
| PWON | PWON | Power ON |
| PWOFF | PWOFF | Stand-by |
| PWSTA | PWON/PWOFF | Get system power status |
| RS232zone[X][Y] | RS232zoneX[Y] | RS232zoneX[Y], X: 1-8. [Y] is the command string sent to the display device or source through the RS-232 port |
| RS232para[X][Y] | RS232paraX[Y] | RS232paraX[baudrate,databit,parity,stopbit] X is 1-8. [Y] is the parameter for RS-232 |
| CSpara[Y] | CSpara[Y] | Set RS232 parameter [Y] is the parameter for RS-232. |
| VOL+ | VOL(xx) | Turns the volume up one level |
| VOL- | VOL(xx) | Turns the volume down one level |
| VOL(xx) | VOL(xx) e.g. VOL(10) | Turns volume to the specified level <xx: 10 ~ -80> Read the volume current level status => VOL e.g. Adjusts the master volume level to -23dB => VOL(-23) |
| MVOL+ | MVOL(xx) | Turns the MIC volume up one level |
| MVOL- | MVOL(xx) | Turns the MIC volume down one level |
| MVOL(xx) | MVOL(xx) e.g. MVOL(30) | Turns MIC5V volume to the specified level <xx: 30 ~ -80> Read the MIC5V volume current level status => MVOL |
| MICx [Y] | MICx [Y] e.g. MICatime 20 | Sets up MIC values x = on / off / sta / atime (attack time) / rtime (background release time) / sens (microphone sensitivity level) / reduce (background reduce level) Y = value (ex. 20) |
| LVOL+ | LVOL(xx) | Turns the Line volume up one level |
| LVOL- | LVOL(xx) | Turns the Line volume down one level |
| LVOL(xx) | LVOL(xx) e.g. LVOL(0) | Turns Line volume to the specified level <xx: 0 ~ -80> Read the Line volume current level status => LVOL |
| SnVOL+ | SnVOL(xx) | Turns the Sub volume up one level <n: 1-6> (n = input number) e.g. Adjusts the HDMI 4 volume to up => S4VOL+ |
| SnVOL- | SnVOL(xx) | Turns the Sub volume down one level <n: 1-6> (n = input number) e.g. Adjusts the VGA1 volume to down => S5VOL- |
| SnVOL(xx) | SnVOL(xx) e.g. S2VOL(-15) | Turns Sub volume to the specified level <n: 1-6, xx: 0 ~ -80> Read the Sub volume current level status => SnVOL e.g. Adjusts the HDMI1 volume level to -10dB => S1VOL(-10) |
| VOLMute [Y] | VOLMute [Y] | VOLMute [on/off/sta]. Set volume to mute on. => VOLMute on |
| Menu[X] | Menu[X] e.g. MenuDown | Control OSD interface, [X]: Sw/Up/Down/Left/Right/Info/Sel e.g. Select OSD option => MenuSel |
| Lock | Lock | Locks the front panel |
| Unlock | Unlock | Unlocks the front panel |
| Version [Y] e.g. Version osd | Version [Y] e.g. Version x.x.xx | Brings up the software versions: ex. Version mcu firmware [mcu] OSD menu [osd] DSP [dsp] FPGA [fpga] |
| Type | AT-UHD-CLSO-601 | Brings up the model information |
| Mreset | Mreset | Reset device to manufacture default |

| Command | Feedback | Description |
|-------------|-------------------------------|---|
| EQB+ | EQB(xx) | Turns EQ bass up one level |
| EQB- | EQB(xx) | Turns EQ bass down one level |
| EQB(xx) | EQB(xx) | Turns EQ bass to the specific level xx: (xx: -10 to 12) |
| EQT+ | EQT(xx) | Turns EQ treble up one level |
| EQT- | EQT(xx) | Turns EQ treble down one level |
| EQT(xx) | EQT(xx) | Turns EQ treble to the specific level xx: (xx: -10 to 12) |
| ManHPos+ | ManHPos(xx) | Sets horizontal position one pixel to the right |
| ManHPos- | ManHPos(xx) | Sets horizontal position one pixel to the left |
| ManHPos(xx) | ManHPos(xx) | Sets horizontal position to a specific setting (xx: 0-40) |
| ManPha+ | ManPha(xx) | Adjusts pixel phase up one level |
| ManPha- | ManPha(xx) | Adjusts pixel phase down one level |
| ManPha(xx) | ManPha(xx) | Adjusts pixel phase to a set amount (xx: 0 to 63) |
| VFmtRes [Y] | VFmtRes XX e.g. VFmtRes 09 | Set output video format to any of the [Y] resolutions below e.g. Set output video format to 1080p@60 => VFmtRes 06 e.g. Read the list of video format => VFmtRes List |

[Y] resolution list -

| | | |
|------------------------|------------------------|------------------------|
| 00 Pass-Through | 01 640x480p60 | 02 720x480i60 |
| 03 720x480p60 | 04 1280x720p60 | 05 1920x1080i60 |
| 06 1920x1080p60 | 07 720x576i50 | 08 720x576p50 |
| 09 1280x720p50, | 10 1920x1080i50 | 11 1920x1080p50 |
| 12 1920x1080p24 | 13 1920x1080p25 | 14 1920x1080p30 |
| 15 640x480p72 | 16 640x480p75 | 17 800x600p60 |
| 18 800x600p72 | 19 800x600p75 | 20 1024x768p60 |
| 21 1024x768p72 | 22 1024x768p75 | 23 1280x768p60 |
| 24 1280x800p60 | 25 1280x960p60 | 26 1280x1024p60 |
| 27 1360x768p60 | 28 1366x768p60 | 29 1440x900p60 |
| 30 1600x1200p60 | 31 1920x1200p60 | 32 2048x1080p24 |
| 33 2048x1080p50 | 34 2048x1080p60 | 35 2048x1152p60 |
| 36 3840x2160p24 | 37 3840x2160p25 | 38 3840x2160p30 |
| 39 4096x2160p24 | 40 4096x2160p30 | 41 1400x1050p60 |
| 42 1600x900p60 | 254 Native | |

| Command | Feedback | Description |
|--|--|---|
| Input [X] [Y] | Input [X] [Y] Input HDMI 2 | Input [interface]* [index]*. Select input source video. e.g. Select input to HDMI 2 video => Input HDMI 2 |
| HDCPSetX [Y] e.g. HDCPSet2 off | HDCPSetX Y e.g. HDCPSet2 off | Sets HDCP mode of the HDMI ports X = 1 / 2 / 3 / 4 Y = on / off / sta |
| PrefTimg [X] | PrefTimg [X] | Set preferred timing to EDID. X is 1-10 & sta |
| VGAPrefT [X] | VGAPrefT [X] | Set preferred VGA timing to EDID. X is 1-8 & sta |
| BNR [Y] | BNR [Y] | BNR [off/low/medium/high/sta]. Configure video block noise reduction |
| MNR [Y] | MNR [Y] | MNR [off/low/medium/high/sta]. Configure video mosquito noise reduction |
| RNR [Y] | RNR [Y] | RNR [off/low/medium/high/sta]. Configure video random noise reduction |
| PollAddInX [Y] | PollAddInX [Y] | PollAddIn [VGA/COMP/CVBS/SVIDEO]. Add source of analog polling. e.g. Add COMP & SVIDEO => PollAddIn COMP,SVIDEO If only command "IPAddUser" is used, it will display all user list |
| PollDelInX [Y] | PollDelIn [Y] | PollDelIn [VGA/COMP/CVBS/SVIDEO]. Delete source of analog polling. e.g. Delete VGA & CVBS & COMP => PollDelIn VGA,CVBS,COMP |
| OSD [Y] | | OSD [func/logo/info][on/off/sta] |
| Aspect [Y] | Aspect [Y] | Aspect [full/overscan/underscan/letterbox/panscan/follow/sta] Sets video aspect function |
| OutAMute [Y] | OutAMute [Y] | OutAMute [on/off/sta] Sets output audio mute of HDMI and HDBT |
| AUD In[X] Ai[Y] | AUD In[X] Ai[Y] | AUD In[X] Ai[Y] x: 1-6 Y: 5-6 or P Replaces the selected input's audio with the selected analog input (5 or 6) or sets it to pass through (p) normally e.g. Replace input 2's audio with analog 6 - Aud In2 Ai6 e.g. Pass through input 3's audio normally - Aud In3 AiP |
| AutoSW [Y] | AutoSW [Y] | AutoSW [on/off/sta/VGAon/VGAoff/VGAsta] Sets auto switch mode status Factory Default: Sets auto switch to on with VGA auto switch to off |
| ASwPrePort [Y] | ASwPrePort [Y] | ASwPrePort [HDMI1/HDMI2/HDMI3/HDMI4/Previous] Sets default auto switch port or sets to previous input |
| ASwOutTime [Y] | ASwOutTime [Y] | ASwOutTime [sec] Sec: 1-600 (default is 1 second) Sets the delay time for how long the auto switching receives no signal from the input before switching ports e.g. Sets the auto switching delay time to 1 minute with no signal before changing ports - ASwOutTime60 |

[Interface] index -

| | | |
|----------|--------|----------|
| HDMI 1 | HDMI 2 | HDMI 3 |
| HDMI 4 | COMP 1 | COMP 2 |
| CVBS 1 | CVBS 2 | SVIDEO 1 |
| SVIDEO 2 | VGA 1 | VGA 2 |

[X] preferred timing -

| | | |
|---------------------|------------------------|--------------------|
| 1 1280x800 | 2 1920x1080 | 3 1024x768 |
| 4 1280x720 | 5 1920x1200 | 6 1366x768 |
| 7 800x600 | 8 1600x900 | 9 2560x1440 |
| 10 3840x2160 | sta Read status | |

VGA [X] preferred timing -

| | | |
|-------------------|--------------------|------------------------|
| 1 1280x800 | 2 1920x1080 | 3 1024x768 |
| 4 1280x720 | 5 1920x1200 | 6 1366x768 |
| 7 800x600 | 8 1600x900 | sta Read status |

IP Commands

| Command | Feedback | Description |
|----------------------|--|---|
| IPCFG | IP Addr : x.x.x.x Netmask : x.x.x.x Gateway : x.x.x.x IP Port : x | Displays IP address configure |
| IPQuit | IPQuit | Telnet Logout |
| IPAddUser [X] [Y] | IPAddUser [X] [Y] | IPAddUser [name] [password]. Add user of telnet. If only command write "IPAddUser", it will display all user list. => IPAddUser |
| IPDelUser [Y] | IPDelUser [Y] | IPDelUser [name]. Del user of telnet |
| IPDHCP [Y] | IPDHCP [Y] | IPDHCP [on/off/sta]. Set DHCP mode status and auto reset telnet. e.g. Set DHCP mode is on => IPDHCP on |
| IPStatic [X] [Y] [Z] | IPStatic [X] [Y] [Z] | IPStatic [Address] [Netmask] [Gateway]. Set static IP address and auto reset telnet. e.g. Set static IP address is 192.168.1.1 255.255.255.0 192.168.1.254 => IPStatic 192.168.1.1 255.255.255.0 192.168.1.254 |
| IPPort [Y] | IPPort [Y] | IPPort [port]. Set telnet port and auto reset telnet e.g. Set telnet port 80 => IPPort 80 |
| IPLogin [Y] | IPLogin [Y] | IPLogin [on/off/sta]. Set telnet login status. e.g. Set telnet login is on => IPLogin on |
| Broadcast [Y] | Broadcast [Y] | Broadcast [on/off/sta]. Broadcast switch. e.g. Set broadcast mode is on => Broadcast on |
| IPTimeout [Y] | IPTimeout [Y] | IPTimeout [Sec]. Set telnet idle timeout time. Default is 2 minute. e.g. Set telnet idle timeout 10 minutes => IPTimeout 600 |

Each command is terminated with a carriage return.

Feedback is terminated with a carriage return and line feed.

Note: If the command fails or is incorrect the feedback should be "Command FAILED"

Baud Rate

Default baud rate to control the switcher is 115200 and default baud rate to control the display or projector is 9600.

Note: For the display's actual baud rate, refer to the owner's manual

To change the baud rate of the switcher (for switcher control) or the zone output (for display/source control), the commands below will be needed

Switcher baud command

CSpara[baudrate,data-length,parity,stop-bit] (*data-length, parity, and stop-bit for switcher must be 8,0,1*)

Example: To change the baud rate to 38400 use **CSpara[38400,8,0,1]**

Note: Use this command if the connected control system does not output 115200

Zone output baud commands (for display control)

RS232para1[baudrate,data-length,parity,stop-bit]

Example: To change the output baud rate to 19200 use **RS232para1[19200,8,0,1]**

Note: Use this command if the connected display uses a different baud rate

RS232zone1[command]

Once the switcher and zone output have been set up for the best communication, commands can be sent to control the display. The commands will come from the user manual of the display or projector. The commands and any carriage returns/line feeds in the commands will need to be placed in the bracket.

Example: To turn the display or projector on if the command is PWRON carriage return, use the command:
RS232zone1[PWRON carriage return]

| | | |
|--|---|--|
| SetCmd X[Y] e.g. SetCmd on[PWR ON] | SetCmd X[Y] e.g. SetCmd on[PWR ON] | Sets the RS-232 or IP command for the selected button or function X= on, off, vol+, vol-, and mute Y= command e.g. Set the on command to send the command PWR ON |
| SetStrgType X | SetStrgType X | Sets the command string type X= ascii, hex, sta |
| SetEnd X[Y] e.g. SetEnd off[CR-LF] | SetEnd X[Y] e.g. SetEnd off[CR-LF] | Sets the line termination for the chosen command X= on, off, vol+, vol-, mute, fbkon, fbkoff, fbkmute Y= None, CR, LF, CR-LF, Space, STX, ETX, and null e.g. Set the command off to have a carriage return and line feed |
| SetFbVerify X e.g. SetFbVerify on | SetFbVerify X e.g. SetFbVerify on | Verifies the device is receiving commands X= on, off, sta e.g. Sends command up to 4 times until feedback verifies command was received with feedback |
| TrigCEC X e.g. TrigCEC on | TrigCEC X e.g. TrigCEC on | Triggers the stored CEC command to turn the display on and off X= on, off |
| TrigRS X e.g. TrigRS vol+ | TrigRS X e.g. TrigRS vol+ | Triggers the RS-232 command from RS-232 or IP X= on, off, vol+, vol-, and mute |
| TrigIP X e.g. TrigIP vol- | TrigIP X e.g. TrigIP vol- | Triggers the IP command from RS-232 or IP X= on, off, vol+, vol-, and mute |
| CtlType X e.g. CtlType rs-232 | CtlType X e.g. CtlType rs-232 | Sets the control type X= ip, rs-232, cec e.g. Set the control type to RS-232 |
| CliMode X e.g. CliMode non-login | CliMode X e.g. CliMode non-login | Sets the control device's IP mode X= sta, login, non-login e.g. Sets the IP mode to non-login |
| CliUser X e.g. CliUser | CliUser X e.g. CliUser admin | Sets the IP username for login X= username, (blank) e.g. Display the IP username by leaving x blank |
| CliPass X e.g. CliPass AtlonA | CliPass X e.g. CliPass AtlonA | Sets the IP password for login X= password, (blank) e.g. Set the IP password to AtlonA |
| CliIPAddr X e.g. CliIPAddr sta | CliIPAddr X e.g. CliIPAddr 192.168.0.23 | Sets the IP address of the controlled device X= ip, sta e.g. Display the IP address of the controlled device |
| CliPort X e.g. CliPort 24 | CliPort X e.g. CliPort 24 | Sets the IP port of the controlled device X= port, sta e.g. Set the IP port to 24 |
| AutoDispOff X | AutoDispOff X | Enable or disable display auto off X= on, off, sta |
| AutoDispOn X | AutoDispOn X | Enable or disable display auto on X= on, off, sta |
| APwrOffTime X | APwrOffTime X | Sets how long after receiving no signal to trigger auto display off X= 1-240, sta |
| ProjSWMode X | ProjSWMode X | Set delay time for the display on command to be sent X= 0-300, sta Note: Match the timing to the projector's delay settings |
| ProjWarmUpT X | ProjWarmUpT X | Set period of time after the display is turned on that the power command will not send X= 0-300, sta |
| VolKeyOPT X | VolKeyOPT X | Set the control type/device the volume button sends out X= 0-2 |
| DispKeyOPT X | DispKeyOPT X | Set the control type/device the display button sends out X=0-3 |
| DispKeyLock X | DispKeyLock X | Locks/unlocks the front panel display key X= on, off, sta |
| DispRS X | DispRS X | Sets the display command type to RS-232 X= on, off, sta |
| DispCEC X | DispCEC X | Sets the display command type to CEC X= on, off, sta |
| DispIP X | DispIP X | Sets the display command type to TCP/IP X= on, off, sta |
| Display X e.g. Display on | Display X e.g. Display on | Triggers the currently set command type to send display commands e.g. if RS-232 is selected the RS-232 on command will send |

Each command is terminated with a carriage return.

Feedback is terminated with a carriage return and line feed.

Note: If the command fails or is incorrect the feedback should be "Command FAILED"

Volume Key


0 HDVS 1 RS-232 2 IP

Display Key

0 HDVS 1 RS-232 2 CEC 3 IP

Control Diagram

- Video
- HDBaseT
- Control

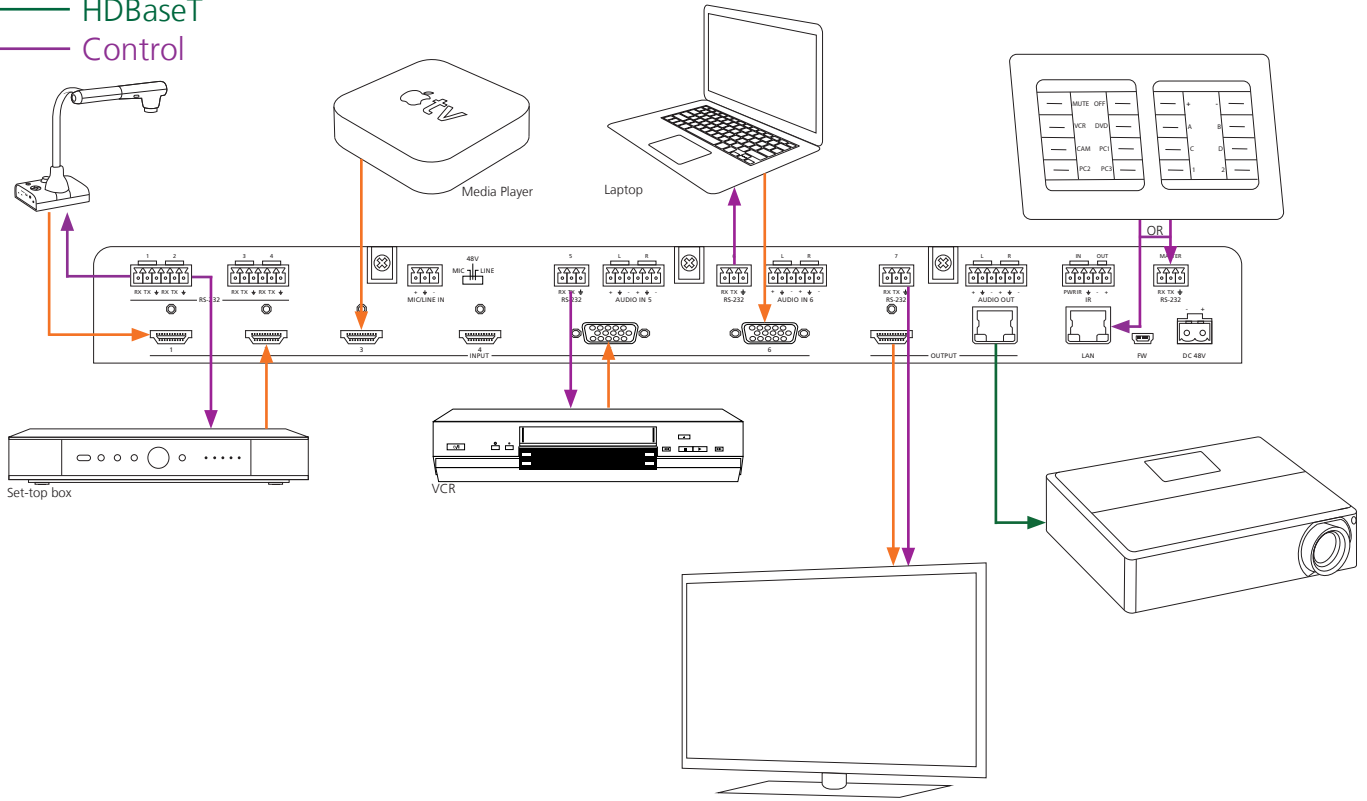

Control Drivers


Visit the **Control Drivers** tab at <http://www.atlona.com/AT-UHD-CLSO-601/> to download the control drivers for the CLSO-601.

CLSO-601 Updating

Visit the **Firmware Update** tab at <http://www.atlona.com/AT-UHD-CLSO-601/> to download the current updates and instructions for the CLSO-601: OSD and Firmware.

Note: Atlona is constantly improving and updating features and stability. It is recommended that you check to make sure you are on the most current firmware before installation, especially when using a control system.

Connection Diagram

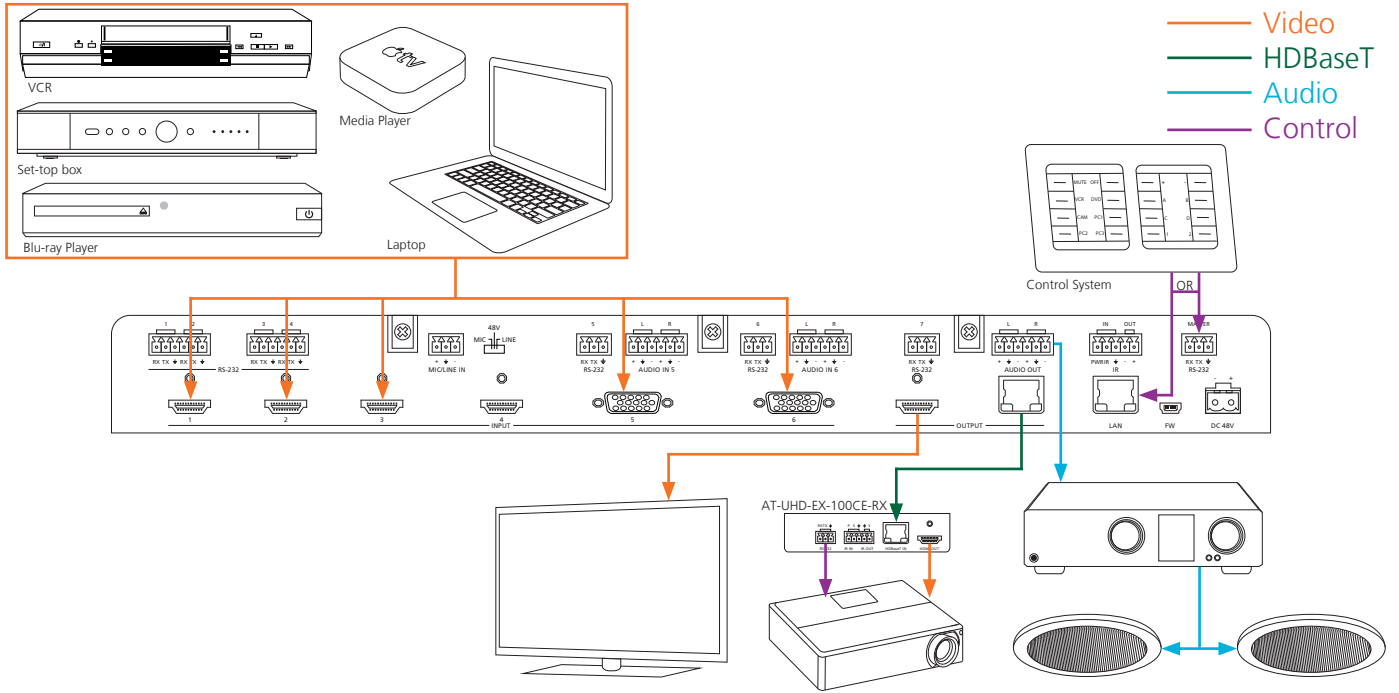

Specifications

Video Resolutions

| | | |
|--------------------|---|--|
| IN | 4096x2160@24/30Hz, 3840x2160@24/25/30Hz, 1080p@23.98/24/25/29.97/30/50/59.94/60, 1080i@50/59.94/60Hz, 720p@25/29.97/30/50/59.94/60Hz, 576p, 576i, 480p, 480i 2560x1440, 2048x1152, 2048x1080, 1920x1200, 1680x1050, 1600x1200, 1600x900, 1440x1050, 1440x900, 1366x768, 1360x768, 1280x1024, 1280x960, 1280x800, 1280x768, 1024x768, 800x600, 640x480 | |
| OUT | 4096x2160@24/30Hz, 3840x2160@24/25/30Hz, 1080p@24/25/30/50/60Hz, 1080i@50/60Hz, 720p@50/60Hz, 576p, 576i, 480p, 480i 2048x1152, 2048x1080, 1920x1200, 1600x1200, 1600x900, 1440x1050, 1440x900, 1366x768, 1360x768, 1280x1024, 1280x960, 1280x800, 1280x768, 1024x768, 800x600, 640x480 | |
| Composite/S-Video | NTSC, NTSC4, PAL, PAL-M, PAL-N, SECAM | |
| Colorspace | YUV, RGB | |
| Chroma Subsampling | 4:4:4, 4:2:2, 4:2:0 | |
| Color depth | 8-bit, 10-bit, 12-bit | |

Audio

| | | |
|------------------|---|--|
| Analog OUT | PCM 2Ch (de-embedded) | |
| HDMI/HDBaseT OUT | PCM 2Ch, supports DTS and Dolby pass through | |
| Sample Rate | 32kHz, 44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz, 192kHz | |
| Bit rate | up to 24-bit | |

Distance

| | | |
|---------------------|-----------------|---------------|
| CAT5e/6 @ 4K | up to 70M | up to 230 ft |
| CAT5e/6 @ 1080p | up to 100M | up to 328 ft |
| CAT6a/7 @ 4K | up to 100M | up to 328 ft |
| HDMI @ 4K | up to 5 meters | up to 15 feet |
| HDMI IN/OUT @ 1080p | up to 10 meters | up to 30 feet |

Signal

| | | |
|-----------|--|--|
| Bandwidth | 10.2 Gbps | |
| HDCP | Switchable - Compliant / Non-compliant | |

Temperature

| | | |
|-----------|--------------------------|---------------|
| Operating | 0°C to 50°C | 32°F to 122°F |
| Storage | -20°C to 60°C | -4°F to 140°F |
| Humidity | 20 to 90% non-condensing | |

Power

| | | |
|------------------|---|--|
| Consumption | 33W | |
| Idle Consumption | 3.1W | |
| Supply | Input: AC 100~240V 50/60Hz Output: DC 48V 3.125A | |

Dimension

| | | |
|-----------|--------------------------|-----------------------------|
| H x W x D | 44 x 433.8 x 255 (mm) | 1.73 x 17.08 x 10.04 (inch) |
| w/feet | 55.15 x 433.8 x 255 (mm) | 2.17 x 17.08 x 10.04 (inch) |
| Rack Unit | 1U | |

Weight

| | | |
|--------|---------|---------|
| Device | 3.12 kg | 6.9 lbs |
|--------|---------|---------|

Certification

| | | |
|--------------|--------------------------------|--|
| Power Supply | CE, FCC, cULus, RoHS, CCC, RCM | |
| Product | CE, FCC | |

Safety Information

Safeguards



To reduce the risk of electric shock, do not expose this product to rain or moisture



Do not modify the wall plug. Doing so will void the warranty and safety features.



If the wall plug does not fit into your local power socket, hire an electrician to replace your obsolete socket.



This equipment should be installed near the socket outlet and the device should be easily accessible in the case it requires disconnection.

Precautions

FCC regulations state that any unauthorized changes or modifications to this equipment, not expressly approved by the manufacturer, could void the user's authority to operate this equipment.

Operate this product using only the included external power supply. Use of other power supplies could impair performance, damage the product, or cause fires.

In the event of an electrostatic discharge this device may automatically turn off. If this occurs, unplug the device and plug it back in.

Protect and route power cords so they will not be stepped on or pinched by anything placed on or against them. Be especially careful of plug-ins or cord exit points from this product.

Avoid excessive humidity, sudden temperature changes or temperature extremes.

Keep this product away from wet locations such as bathtubs, sinks, laundries, wet basements, fish tanks, and swimming pools.

Use only accessories recommended by Atlona to avoid fire, shock, or other hazards.

Unplug the product before cleaning. Use a damp cloth for cleaning and not cleaning fluid or aerosols. Such products could enter the unit and cause damage, fire, or electric shock. Some substances may also mar the finish of the product.

Never open, remove unit panels, or make any adjustments not described in this manual. Attempting to do so could expose you to dangerous electrical shock or other hazards. It may also cause damage to your product. Opening the product will void the warranty.

Do not attempt to service the unit. Disconnect the product and contact your authorized Atlona reseller or contact Atlona directly.

Atlona, Inc. (“Atlona”) Limited Product Warranty Policy

Coverage

Atlona warrants its products will substantially perform to their published specifications and will be free from defects in materials and workmanship under normal use, conditions and service.

Under its Limited Product Warranty, Atlona, at its sole discretion, will either:

- A) repair or facilitate the repair of defective products within a reasonable period of time, restore products to their proper operating condition and return defective products free of any charge for necessary parts, labor and shipping
- OR**
- B) replace and return, free of charge, any defective products with direct replacement or with similar products deemed by Atlona to perform substantially the same function as the original products
- OR**
- C) refund the pro-rated value based on the remaining term of the warranty period, not to exceed MSRP, in cases where products are beyond repair and/or no direct or substantially similar replacement products exist.

Repair, replacement or refund of Atlona’s products is the purchaser’s exclusive remedy and Atlona’s liability does not extend to any other damages, incidental, consequential or otherwise.

This Limited Product Warranty extends to the original end-user purchaser of Atlona’s products and is non-transferrable to any subsequent purchaser(s) or owner(s) of these products.

Coverage Periods

Atlona’s Limited Product Warranty Period begins on the date of purchase by the end-purchaser. The date contained on the end-purchaser’s sales or delivery receipt is the proof purchase date.

Limited Product Warranty Terms – New Products

- 10 years from proof of purchase date for hardware/electronics products purchased on or after June 1, 2013
- 3 years from proof of purchase date for hardware/electronics products purchased before June 1, 2013
- Lifetime Limited Product Warranty for all cable products

Limited Product Warranty Terms – Refurbished (B-Stock) Products

- 3 years from proof of purchase date for all Refurbished (B-Stock) hardware and electronic products purchased on or after June 1, 2013

Remedy

Atlona recommends that end-purchasers contact their authorized Atlona dealer or reseller from whom they purchased their products. Atlona can also be contacted directly. Visit www.atlona.com for Atlona’s contact information and hours of operation. Atlona requires that a dated sales or delivery receipt from an authorized dealer, reseller or end-purchaser is provided before Atlona extends its warranty services. Additionally, a return merchandise authorization (RMA) and/or case number, is required to be obtained from Atlona in advance of returns.

Atlona requires that products returned are properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization or case number will be refused. Atlona, at its sole discretion, reserves the right to reject any products received without advanced authorization. Authorizations can be requested by calling 1-877-536-3976 (US toll free) or 1-408- 962-0515 (US/international) or via Atlona’s website at www.atlona.com.

Exclusions

This Limited Product Warranty excludes:

- Damage, deterioration or malfunction caused by any alteration, modification, improper use, neglect, improper packing or shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature.
- Damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Atlona to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.
- Equipment enclosures, cables, power supplies, batteries, LCD displays, and any accessories used in conjunction with the product(s).
- Products purchased from unauthorized distributors, dealers, resellers, auction websites and similar unauthorized channels of distribution.

Disclaimers

This Limited Product Warranty does not imply that the electronic components contained within Atlona's products will not become obsolete nor does it imply Atlona products or their electronic components will remain compatible with any other current product, technology or any future products or technologies in which Atlona's products may be used in conjunction with. Atlona, at its sole discretion, reserves the right not to extend its warranty offering in instances arising outside its normal course of business including, but not limited to, damage inflicted to its products from acts of god.

Limitation on Liability

The maximum liability of Atlona under this limited product warranty shall not exceed the original Atlona MSRP for its products. To the maximum extent permitted by law, Atlona is not responsible for the direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

To the maximum extent permitted by law, this limited product warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral or written, express or implied. To the maximum extent permitted by law, Atlona specifically disclaims all implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose. If Atlona cannot lawfully disclaim or exclude implied warranties under applicable law, then all implied warranties covering its products including warranties of merchantability and fitness for a particular purpose, shall provide to its products under applicable law. If any product to which this limited warranty applies is a "Consumer Product" under the Magnuson-Moss Warranty Act (15 U.S.C.A. §2301, ET SEQ.) or other applicable law, the foregoing disclaimer of implied warranties shall not apply, and all implied warranties on its products, including warranties of merchantability and fitness for the particular purpose, shall apply as provided under applicable law.

Other Conditions

Atlona's Limited Product Warranty offering gives legal rights, and other rights may apply and vary from country to country or state to state. This limited warranty is void if (i) the label bearing the serial number of products have been removed or defaced, (ii) products are not purchased from an authorized Atlona dealer or reseller. A comprehensive list of Atlona's authorized distributors, dealers and resellers can be found at www.atlona.com.

Atlona, Inc Product Registration

Thank you for purchasing this Atlona product. - We hope you enjoy it and will take an extra few moments to register your new purchase.

Registration creates an ownership record if your product is lost or stolen and helps ensure you'll receive notification of performance issues and firmware updates.

At Atlona we respect and protect your privacy, assuring you that your registration information is completely secure. Atlona product registration is completely voluntary and failure to register will not diminish your limited warranty rights.

To register go to: <http://www.atlona.com/registration>