
INSTALLATION INSTRUCTIONS

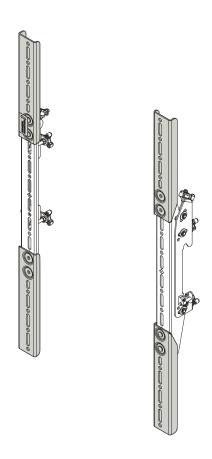

Portrait Menu Board Interface Kit



FMSIML-P

FMSIML-P Installation Instructions

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Legrand AV Inc.

DEFINITIONS

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

ACCESSORY: AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

COMPONENT: A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera, CPU, screen, display, projector, etc.

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all parts are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which the mounting system is attached can support five times the combined weight of all equipment.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located on the accessory does not exceed the 125 lbs (56.7 kg) or the weight limit of the mounting system to which it is attached.


WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this accessory if it is damaged. Return the accessory to a service center for examination and repair.


WARNING: Do not use this accessory outdoors.

--SAVE THESE INSTRUCTIONS--

DIMENSIONS

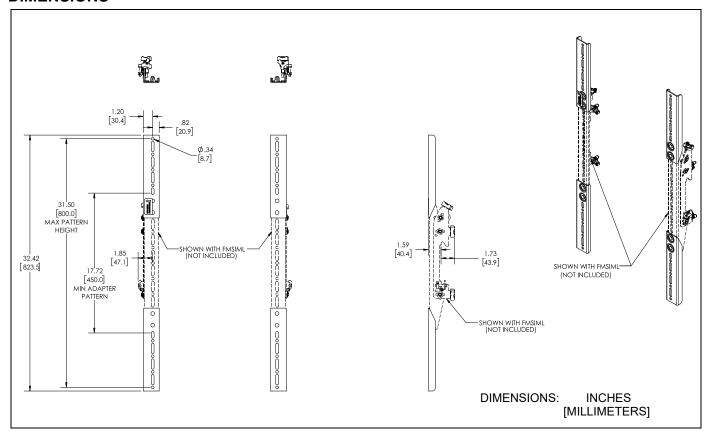


LEGEND

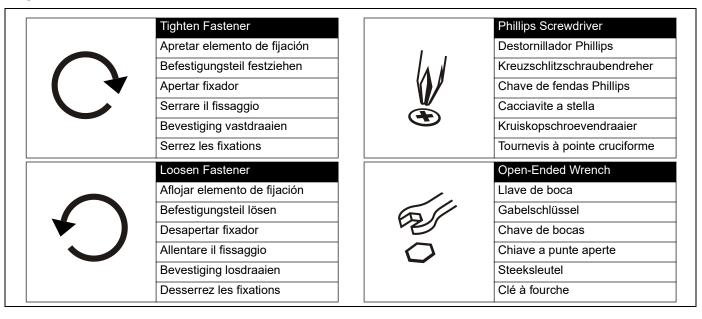


FMSIML-P Installation Instructions

 TOOLS REQUIRED FOR INSTALLATION



PARTS

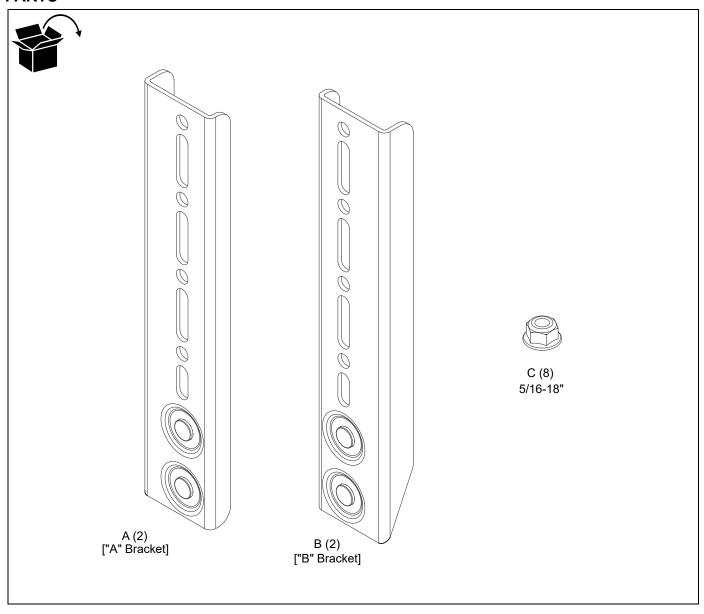

Assembly and Installation

Installation to Brackets

 Use two 5/16-18" lock nuts (C) to attach each bracket (A and B) to existing interface brackets (not included). (See Figure 1) Make sure the brackets are installed in the correct orientation.

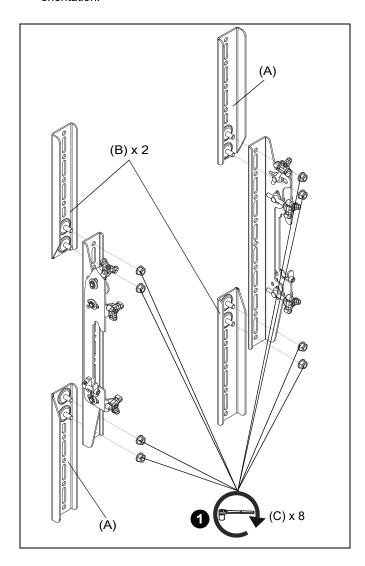


Figure 1

INSTALL INTERFACE BRACKETS TO DISPLAYS

1. Place displays face down on a soft, non-abrasive surface.

WARNING: IMPROPER INSTALLATION CAN LEAD TO DISPLAY FALLING CAUSING SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT! Using screws of improper size may damage your display. Properly sized screws will easily and completely thread into display mounting holes. If spacers are required, be sure to use longer screws of the same diameter.

- Select screw diameter by examining hardware (included with original uprights) and comparing with mounting holes on display. (See Figure 6)
- 3. Select spacers:
 - Spacers are <u>NOT</u> required if mounting holes are not recessed and interface brackets (A and B) can lay flat against display.
 - Spacers (included with original uprights) <u>ARE</u> required if mounting holes are recessed, or if protrusions prevent interface brackets (A and B) from laying flat.

- By hand, insert SHORTEST length screw of selected diameter (included with original uprights) through 1/4" washer (included with original uprights), bracket (A or B), selected spacer (included with original uprights, if required), into display mounting hole. Do NOT thread screw into hole at this time.
- Proper screw length requires base of screw head to protrude above flat washer a distance equal to or greater than the screw diameter. If screw length is inadequate, select longer screw. Select shortest screw which will protrude the required distance.
- 5. Align the center of the interface brackets (A and B) with center of screen. (See Figure 6)

NOTE: The diamond-shape hole in the bracket corresponds to the center of the mount.

- Use selected screws, washers and spacers, if necessary, to connect interface brackets (A and B) to back of display. (See Figure 6)
- 7. Complete installation of mounting system following installation instructions included with mounting system.

4. Select screw length: (See Figure 6)

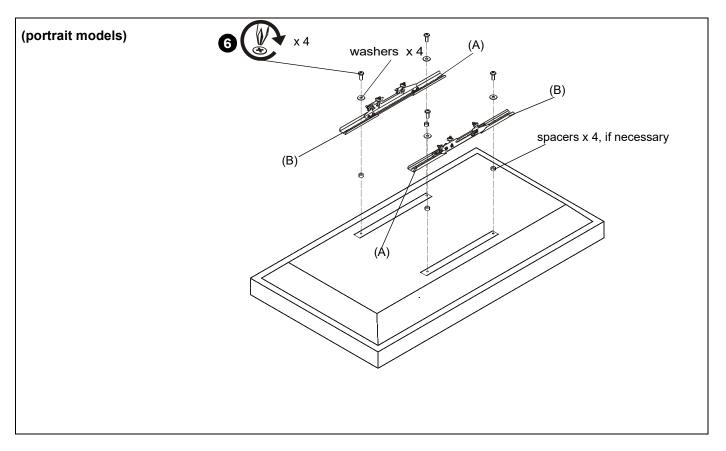


Figure 6

FMSIML-P Installation Instructions



A brand of Lilegrand

8800-003245 Rev00 ©2021 Legrand | AV www.legrandav.com 10/2021

Europe

USA/International A 6436 City West Parkway, Eden Prairie, MN 55344

800.582.6480 / 952.225.6000

F 877.894.6918 / 952.894.6918

A Franklinstraat 14, 6003 DK Weert, Netherlands

+31 (0) 495 580 852

+31 (0) 495 580 845

Asia Pacific

A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street

Fotan, Shatin, Hong Kong

P 852 2145 4099 F 852 2145 4477

