

CHRISTMAS TIME™

58" Dancing Mrs. Claus



Who's helping Santa and dancing along the way? Mrs. Claus from Christmas Time, that's who! Our dancing Mrs. Claus will dance right into your heart as she helps you greet your family, guests, or customers. Standing 58 inches tall and holding a basket filled with holiday greenery, she will be a delightful addition to your holiday decor in any home, office, or store.

When motion is detected, she will move her arms and sway her body to the music. Dressed in an elegant hooded cloak trimmed with rich brocade and white fleece, her friendly face and warm smile will fill you and yours with holiday cheer. She'll look perfect next to the tree or in the foyer.

- Motion sensor on the front of the base triggers dancing
- Animation switch and power jack on the back of the base
- Music speaker located on the top center of the base
- Adjustable music volume knob at the back of the base
- Dimensions: 15" D x 21" W x 58" H
- Assembly required - Collapsible for easy storage
- Recommended for indoor use only
- 1-year limited warranty

Model Number	UPC	Description
CT-AMC058D-23RED	840148714298	58" Dancing Mrs. Claus with Hooded Cloak and Gift Basket