

CHRISTMAS TIME™

58" Dancing Santa



I saw mommy dancing with Santa Claus! Our dancing Santa from Christmas Time will have everyone dancing and spreading holiday cheer. Standing 58 inches tall, Traditional Santa carries a holiday wreath and a toy sack full of goodies wearing his famous red and white suit.

When motion is detected, he will move his arms and sway his body to the song Jingle Bell Rock. His friendly face with open spectacles, round chubby cheeks, and a full beard will warm your heart. Place him in the foyer, near the fireplace, or next to the Christmas tree, and watch as everyone starts dancing.

- Motion sensor on the front of the base triggers dancing
- Animation switch and power jack on the back of the base
- Music speaker located on the top center of the base
- Adjustable music volume knob at the back of the base
- Dimensions: 15" D x 21" W x 58" H
- Assembly required - Collapsible for easy storage
- Recommended for indoor use only
- 1-year limited warranty

Model Number	UPC	Description
CT-ASC058-2RD3	840148714373	58" Traditional Dancing Santa Claus with Toy Sack and Wreath