

# CHRISTMAS TIME™

## 58" Dancing Santa



I saw mommy dancing with Santa Claus! Our dancing Santa from Christmas Time will have everyone dancing and spreading holiday cheer. Standing 58 inches tall, Santa carries gifts, his Naughty & Nice List, and a toy sack filled with holiday goodies.

When motion is detected, he will move his arms and sway his body to the song Jingle Bell Rock. Dressed in his fancy suit, his friendly face with open spectacles, round chubby cheeks, and a full beard will warm your heart. Place him in the foyer, near the fireplace, or next to the Christmas tree, and watch as everyone starts dancing.

- Motion sensor on the front of the base triggers dancing
- Animation switch and power jack on the back of the base
- Music speaker located on the top center of the base
- Adjustable music volume knob at the back of the base
- Dimensions: 15" D x 21" W x 58" H
- Assembly required - Collapsible for easy storage
- Recommended for indoor use only
- 1-year limited warranty

Model Number	UPC	Description
CT-ASC058D-11RED	840148714380	58" Dancing Santa Claus with Naughty & Nice List, Gifts, and Toy Sack