

CHRISTMAS TIME™

58" Dancing Santa Claus



I saw mommy dancing with Santa Claus! Our dancing Santa from Christmas Time will have everyone dancing and spreading holiday cheer. Standing 58 inches tall, Dancing Santa carries his toy sack and a teddy bear sitting on wrapped gifts.

When motion is detected, he will move his arms and sway his body to the song Jingle Bell Rock. Dressed in his fancy suit, Santa's friendly face with open spectacles, round chubby cheeks, and a full beard will warm your heart. Place him in the foyer, near the fireplace, or next to the family Christmas tree, and watch as everyone starts dancing.

- Motion-activated dancing Santa with music
- Motion sensor triggered from 1.5 to 5 feet
- Music speaker and volume knob are located on the base
- Enjoy animation without music via switch on the base
- Dimensions: 15" D x 21" W x 58" H
- Power Cord Length: 6-ft.
- Assembly required - Collapsible for easy storage
- 1-year limited warranty for indoor use

Model Number	UPC	Description
CT-SC058-2RD6	840148721371	58" Dancing Santa with Toy Sack, Teddy Bear, and Wrapped Gifts