



Thank you for your purchase of this quality holiday decoration. With proper use and care, your decoration will provide you with years of enjoyment.

If you should have any problem with your decoration, **DO NOT return it to the place of purchase**. Please call our toll-free number below and a customer service representative will assist you. Reference your model number of our item, which is printed on the side of your carton. Always use this number to identify your item.

Enjoy your holiday!

Customer Service: 1-855-591-7451 (9am to 5pm, Monday through Friday)

IMPORTANT SAFETY INSTRUCTIONS

 


Warnings

1. Do not place in direct sunlight.
2. This product is for decoration only and is not a toy. Please keep out of reach of small children.
3. Do not position the figurine near candles, sources of heat, or in direct sunlight.
4. The decoration cannot be connected to the power supply directly.
5. Do not break, cut, or alter the power cable.
6. Do not attempt to repair the wiring with staples or nails.
7. Do not place the cable under a carpet or rug as it may get damaged.
8. Ensure that the cable is in a secure location where it is not a hazard.
9. Do not connect the decoration to the power supply while it is still in the packaging.
10. Please switch off the transformer when not in use.
11. Do not leave electric decoration unattended while operating in the ON position.
12. Do not over load the transformer.
13. Decoration should be on a level, stable surface to prevent it from falling over

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.

INSTRUCTIONS

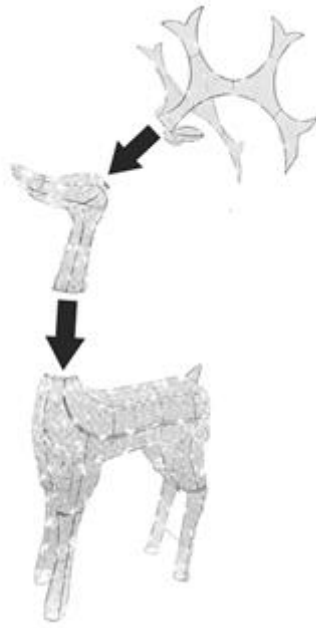

*Position of deer will slightly vary depending on model #.

1. Unbox all the pieces and lay flat on a clean surface
 - a. Note the transformer is in a small white box in the corner of the package.



2. Place the lower body of the deer on the floor and attach the transformer to the light string “terminal”.



3. Attach the neck to the lower body by inserting the metal hook into the metal hole. Secure the zip ties onto the item for stability.



4. Connect the light string terminals between the lower body to the neck.



5. Attach the (2) antlers to the top of the head by inserting the metal hook into the metal hole.



6. Connect the light string terminals from the antlers to the top of the head.



7. Plug the transformer and select 1 of the 8 light functions and enjoy!



Eight light functions include:

- 1) Combination
- 2) In waves
- 3) Sequential
- 4) Slo-glo
- 5) Chasing/flash
- 6) Slow fade
- 7) Twinkle/flash
- 8) Steady on



Thank you for your purchase of this quality holiday decoration. With proper use and care, your decoration will provide you with years of enjoyment.

If you should have any problem with your decoration, **DO NOT return it to the place of purchase**. Please call our toll-free number below and a customer service representative will assist you. Reference your model number of our item, which is printed on the side of your carton. Always use this number to identify your item.

Enjoy your holiday!

Customer Service: 1-855-591-7451 (9am to 5pm, Monday through Friday)

IMPORTANT SAFETY INSTRUCTIONS

 


Warnings

1. Do not place in direct sunlight.
2. This product is for decoration only and is not a toy. Please keep out of reach of small children.
3. Do not position the figurine near candles, sources of heat, or in direct sunlight.
4. The decoration cannot be connected to the power supply directly.
5. Do not break, cut, or alter the power cable.
6. Do not attempt to repair the wiring with staples or nails.
7. Do not place the cable under a carpet or rug as it may get damaged.
8. Ensure that the cable is in a secure location where it is not a hazard.
9. Do not connect the decoration to the power supply while it is still in the packaging.
10. Please switch off the transformer when not in use.
11. Do not leave electric decoration unattended while operating in the ON position.
12. Do not over load the transformer.
13. Decoration should be on a level, stable surface to prevent it from falling over

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.


INSTRUCTIONS

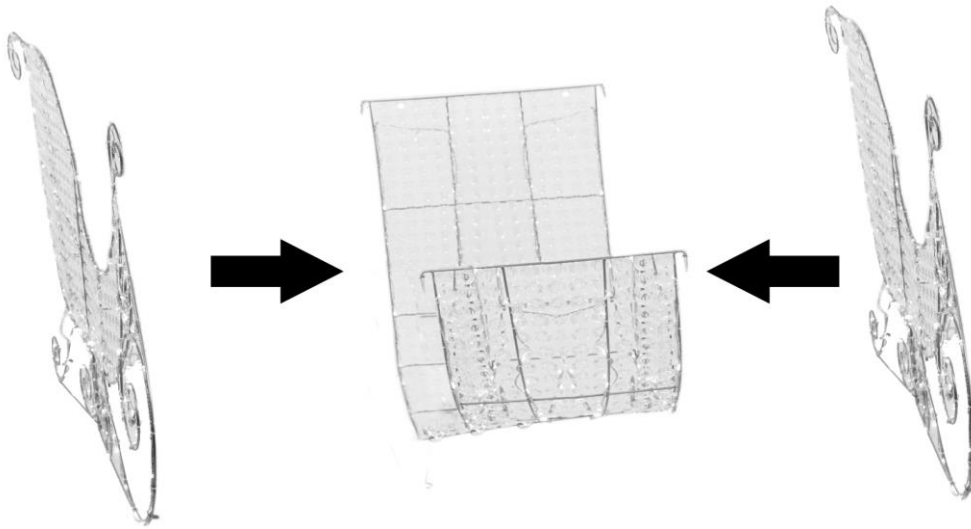

1. Unbox all the pieces and lay flat on a clean surface
 - a. Note the transformer is in a small white box in the corner of the package.



 2. Attach the transformer to the light string “terminal”.

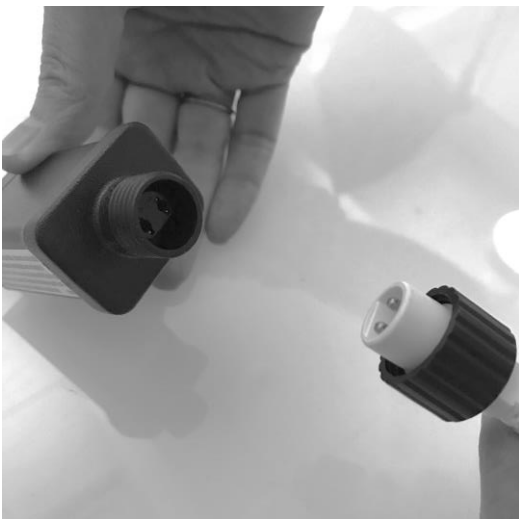

3. Align the middle portion of the sled with the sides.



4. Attach the middle section to one side of the sled by inserting the metal hook into the metal hole. Repeat for the other side.



5. Connect the light string terminals between the 3 pieces.



6. Plug the transformer and select 1 of the 8 light functions and enjoy!



Eight light functions include:

- 1) Combination
- 2) In waves
- 3) Sequential
- 4) Slo-glo
- 5) Chasing/flash
- 6) Slow fade
- 7) Twinkle/flash
- 8) Steady on