

1. Connect the LED Driver (B) to the figure (A).

**Seasonal-Use LED Driver used on the item:**

INPUT: 120---60Hz,0.14A

OUTPUT: 6V - 1A

**DO NOT CONNECT THE SUPPLY TO THE CHAIN WHILE IN PACKAGING.**

**TROUBLESHOOTING**

If the product does not light:

1. Make sure the LED Driver is connected to a power supply.
2. Make sure the product is properly connected to the LED Driver.

**SAVE THESE INSTRUCTIONS!**

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

**FOR INDOOR OR OUTDOOR USE**

- Do not use an extension cord.
- Do no install or use within 10 feet of water source (pool, bathtub, sink, etc.)
- Warning: Risk of Electric Shock, Mount higher than one foot from the ground surface.
- The product and its adaptor are intended for indoor and outdoor use. When product is used in outdoor applications, connect the adaptor belongs to the product to a Ground Fault Circuit Interrupter (GFCI) outlet available at your hardware store. If you desire a more permanent solution, please contact a qualified electrician for proper installation. This seasonal use product is not intended for permanent year round installation or use.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- **CAUTION:** This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Keep this product well ventilated. Do not cover product with cloth, paper or any material not part of the product when in use.
- Do not use with a voltage converter. Use only with adaptor plug provided.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the products or extension cords as this may damage the wire insulation.
- Never operate this product if the power cord or plug is damaged.
- In case the external flexible cable or cord of the adaptor is damaged:  
**DO NOT USE THAT DAMAGED ADAPTOR, DO NOT OPEN TO REWIRE! THROW ADAPTOR AWAY.**
- Use of product in extreme weather conditions if not recommended.

**USE AND CARE INSTRUCTIONS**

- Before using or reusing, inspect product carefully. Discard any product having cut, damaged or frayed wire insulation or cords, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.

This product is constructed with non-replaceable light bulbs.  
Retain carton and packing material for storage purposes.

**Power Cord Attachment**

Plug the power cord into the back side base. Twist cap to secure connection. Plug adaptor into other end of power cord. Twist cap to secure connection. Plug adaptor into a power supply.

**OPERATION (Figure 1)**

Controls are located on the side of the product

**Power/Volume Dial:** Turning to ON ( | ) position will illuminate lights and begin music playing. Music includes eight holiday songs that play in a loop until dial is turned to OFF position ( O ). This dial also controls volume, adjust as desired.

**Timer Dial:** Turning button to ON ( | ) position will set the timer to illuminate lights and play music for a period of six hours followed by 18 hours of lights and music off. To stop timed operation, turn dial to OFF position ( O ). Timed sequence will continually repeat until timer is turned to OFF position ( O ).

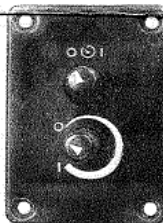


Figure 1

**SET CLOCK (Figure 2)**

1. Plug product into a power supply. Digital numbers flash indicating Standby mode.
2. To set Day, press A button, then press B button to increase number or C button to decrease number as necessary.
3. Press A button to move to Hour setting.
4. To set Hour, press A button, then press B button to increase number or C button to decrease number as necessary.
5. Repeat this procedure to set the Minutes and Seconds time.
6. Press A button to complete clock set.
7. Press C button to begin countdown.



Figure 2

## **IMPORTANT SAFETY INSTRUCTIONS**

### **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

#### **CAUTION:**

- Product is intended for INDOOR & OUTDOOR Use.
- LED Driver is intended for INDOOR & OUTDOOR Use.
- Do not mount or place the product near gas or electric heaters, fireplaces, candles or other similar sources.
- Do not use product outdoors in case of extreme weather conditions.
- Keep the product well ventilated. Do not cover product with cloth, paper or any material not part of the product when in use.
- Do not use with a voltage converter. Use only with the outdoor/indoor LED Driver that is provided.
- Do not leave product unattended when children are present.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Never operate the product if it has a damaged cord or plug. In case the external flexible cable or cord of the LED Driver is damaged: **DO NOT USE THE LED DRIVER. DO NOT OPEN TO REWIRE! THROW LED DRIVER AWAY.**
- Do not use this product for any purpose other than its intended use.
- Do not secure wiring of the product with sharp hooks or nails.
- Not intended for permanent installation.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.

#### **CARE AND MAINTENANCE**

- Before using or reusing, inspect product carefully. Discard any product that have cut, damaged or frayed wire insulation or cords, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.  
**Reminder: The LED lights on the product are not designed to be replaced.**