

# FRASER HILL FARM®

*Thank you for your Purchase!*

With proper use and care, this product will provide you with years of enjoyment. If you have any questions please contact us directly.

✉ [Holiday@FraserHillFarm.com](mailto:Holiday@FraserHillFarm.com) | Anytime

☎ 1 (855) 591-7451 | 9am-9pm EST (Mon-Fri) 9am-5pm EST (Sat-Sun)

Please follow the instructions on how to assemble your item.

If you should have any problems with your product, DO NOT return it to the place of purchase.

***Please do not return this item to the retailer.***

Please call our toll free number 1 (855) 591-7451 or email us at [Holiday@FraserHillFarm.com](mailto:Holiday@FraserHillFarm.com) and a customer service representative will assist you.

*Enjoy your Holiday!*

# FFRS033-SC3-RD – LED Lit Santa Countdown Clock

---

## IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

### CAUTION:


- Product is intended for INDOOR & OUTDOOR Use.
- LED Driver is intended for INDOOR & OUTDOOR Use.
- Do not mount or place the product near gas or electric heaters, fireplaces, candles or other similar sources.
- Do not use product outdoors in case of extreme weather conditions.
- Keep the product well ventilated. Do not cover product with cloth, paper or any material not part of the product when in use.
- Do not use with a voltage converter. Use only with the outdoor/indoor LED Driver that is provided.
- Do not leave product unattended when children are present.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Never operate the product if it has a damaged cord or plug. In case the external flexible cable or cord of the LED Driver is damaged: **DO NOT USE THE LED DRIVER. DO NOT OPEN TO REWIRE! THROW LED DRIVER AWAY.**
- Do not use this product for any purpose other than its intended use.
- Do not secure wiring of the product with sharp hooks or nails.
- Not intended for permanent installation.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.

### CARE AND MAINTENANCE

---

- Before using or reusing, inspect product carefully. Discard any product that have cut, damaged or frayed wire insulation or cords, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.  
**Reminder: The LED lights on the product are not designed to be replaced.**

# ASSEMBLY INSTRUCTIONS

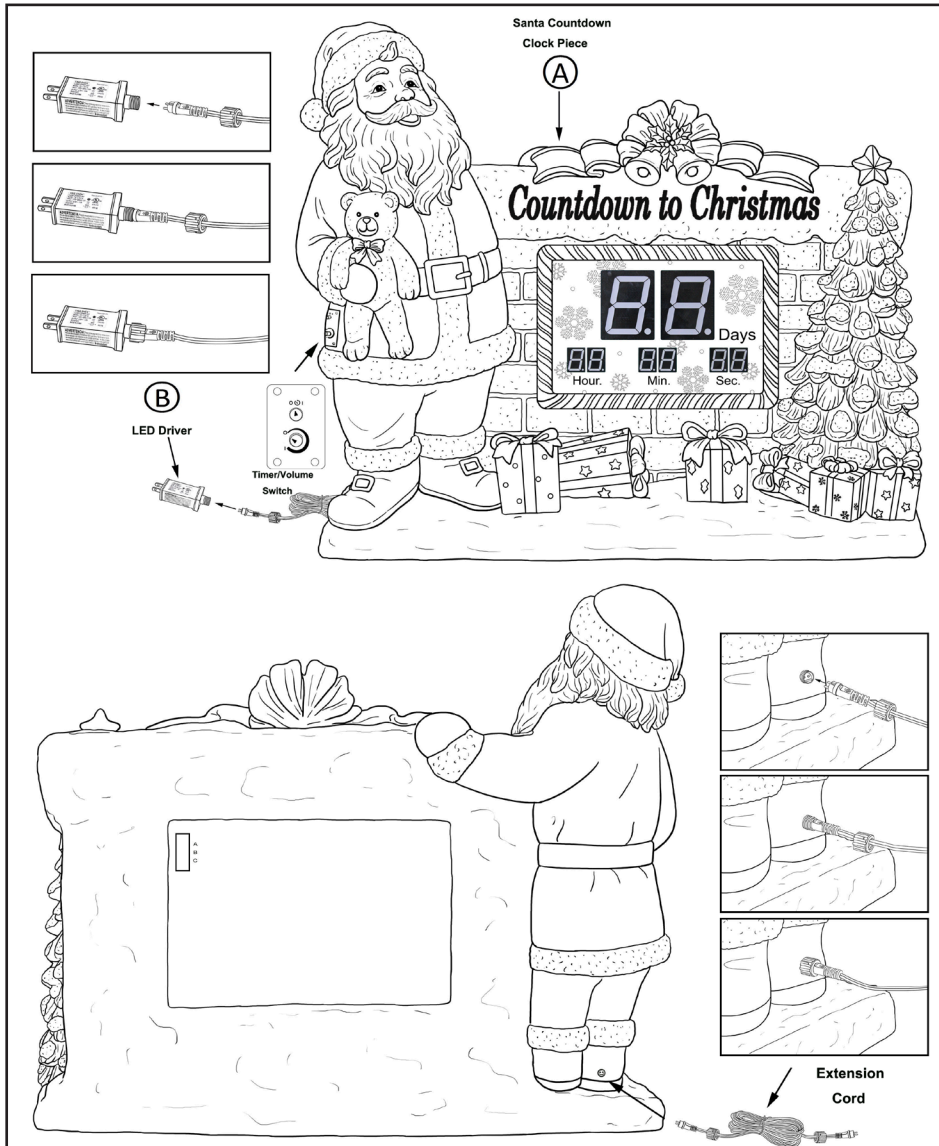

1. Connect the LED Driver (B) to the figure (A).

## SEASONAL-USE LED DRIVER USED ON THE ITEM:

INPUT: 120---60Hz,0.14A

OUTPUT: 4.5V - 1A

**DO NOT CONNECT THE SUPPLY TO THE CHAIN WHILE IN PACKAGING.**

## TROUBLESHOOTING

If the product does not light:

1. Make sure the LED Driver is connected to a power supply.
2. Make sure the product is properly connected to the LED Driver.

**SAVE THESE INSTRUCTIONS!**