

FRASER HILL FARM®

Thank you for your Purchase!

With proper use and care, this product will provide you with years of enjoyment. If you have any questions please contact us directly.

✉ Holiday@FraserHillFarm.com | Anytime

☎ 1 (855) 591-7451 | 9am-9pm EST (Mon-Fri) 9am-5pm EST (Sat-Sun)

Please follow the instructions on how to assemble your item.

If you should have any problems with your product, DO NOT return it to the place of purchase.

Please do not return this item to the retailer.

Please call our toll free number 1 (855) 591-7451 or email us at Holiday@FraserHillFarm.com and a customer service representative will assist you.

Enjoy your Holiday!

FFRS047-RD1-BRN - 47"H LED Lit Sitting Deer

IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

CAUTION:

- Product is intended for INDOOR & OUTDOOR Use.
- Transformer is intended for INDOOR & OUTDOOR Use.
- Do not mount or place the product near gas or electric heaters, fireplaces, candles or other similar sources.
- Do not use product outdoors in case of extreme weather conditions.
- Keep the product well ventilated. Do not cover product with cloth, paper or any material not part of the product when in use.
- Do not use with a voltage converter. Use only with the outdoor/indoor transformer that is provided.
- Do not leave product unattended when children are present.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Never operate the product if it has a damaged cord or plug. In case the external flexible cable or cord of the transformer is damaged: **DO NOT USE THE TRANSFORMER. DO NOT OPEN TO REWIRE! THROW TRANSFORMER AWAY.**
- Do not use this product for any purpose other than its intended use.
- Do not secure wiring of the product with sharp hooks or nails.
- Not intended for permanent installation.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.

CARE AND MAINTENANCE

- Before using or reusing, inspect product carefully. Discard any product that have cut, damaged or frayed wire insulation or cords, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.
Reminder: The LED lights on the product are not designed to be replaced.


BEFORE YOU START

* Check the carton and make sure you have all parts as listed below:

- Resin Product

- UL Transformer

ASSEMBLY INSTRUCTIONS

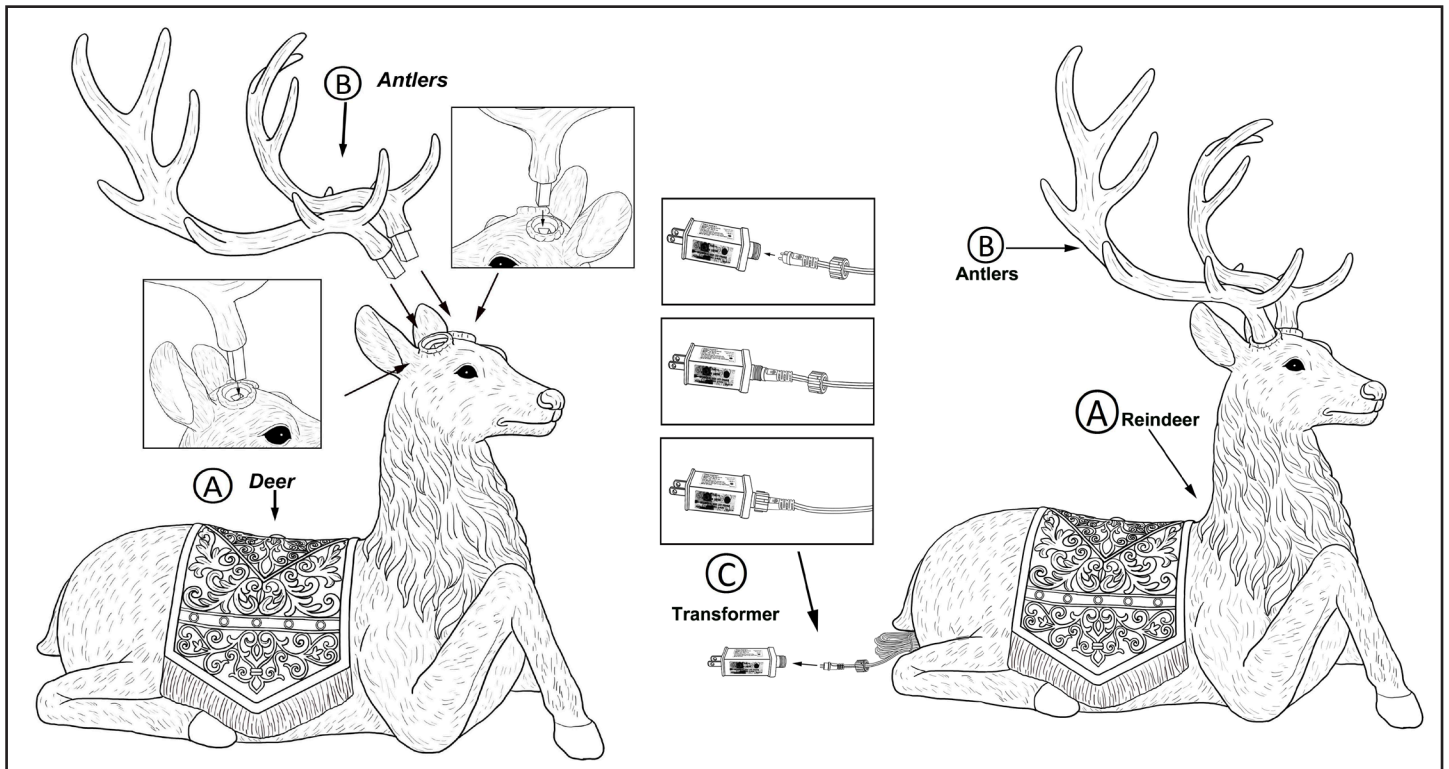

1. Insert Antlers (B) to the holes in deer's Head figure (A).
2. Connect Transformer (C) to the deer (A)

TRANSFORMER USED ON THE ITEM:

AC/AC Transformer

INPUT: 120V---60Hz 0.14A

OUTPUT: 6V --- 1A

CAUTION:DO NOT CONNECT THE SUPPLY TO THE CHAIN WHILE IN PACKAGING.

TROUBLESHOOTING

If the product does not light:

1. Make sure the transformer is connected to a power supply.
2. Make sure the product is properly connected to the transformer.

SAVE THESE INSTRUCTIONS!