


FRASER HILL FARM®

Holiday Décor Assembly, Use & Care Instructions

The model number of your item is printed on the side of your carton.
Always use this number to identify your product.

Thank you for your purchase of this quality Christmas item. With proper use and care, this product will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your product, DO NOT return it to the place of purchase. Please call our toll free number at **1-855-591-7451** or email us at **holiday@FraserHillFarm.com** and a Customer Service representative will assist you. Enjoy your Holiday!

Your product includes:

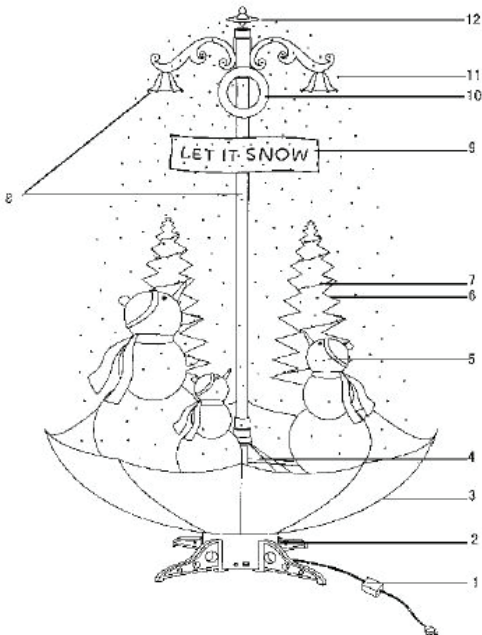

No.	Description	Quantity
1	Transformer	1 unit
2	Base support	1 set (4 pcs)
3	Umbrella-shaped base	1 set
4	Ring support	1 set (2 pcs)
5	Figures	1 set (3 pcs)
6	Christmas tree	2 trees
7	String	1 string(2 tips)
8	Street lamp (Combined type)	1 set
9	Brand	1 piece
10	Wreath	1 piece
11	Snow flakes	1 bag
12	Top	1 piece

STORAGE TIPS: We suggest saving the carton for storing your item. Store in a cool, dry area where the temperature does not exceed 100°F.

ASSEMBLY INSTRUCTIONS

1. Installation:

- Take out the umbrella-shaped base, base support, fixing screws, and transformer.
- Assemble the four base supports onto the base.
- Connect the transformer plug with the base socket.
- Unfold the umbrella-shaped base.
- Assemble the lamp post and connect the jack at the bottom.
- Assemble the ring support by fitting each item one by one to their serial number.
- Put the ring support on the umbrella support.
- Mount the figures and Christmas trees one by one onto the ring support.
- Arrange the Christmas trees and straighten the branches.
- Insert the Christmas tree plug into the number 2 jack on the base and arrange the lights on the trees.

2. Functionality test:

- All of the above instructions must be completed.
- Clean off all foreign matter in the umbrella-shaped container to avoid blocking the flow of snowflakes.
- Set the switch to OFF and connect the transformer with the power source.
- Place a small amount of snowflakes at the bottom of the snow container, and turn on the switch to see if flakes spout out from the top of the tree. Check that the music and lights function properly. If there are any issues, check the wiring again.

3. Pour in the flakes:

- Turn off the switch.
- Pour the snowflakes into the umbrella-shaped base and distribute evenly. Set some aside for later use.

4. Completion of assembly:

- Hang the wreath on the lamp post to complete the festive look.
- Turn on the switch. You will see snowflakes spouting from the top of the lamp post, sparkly lights, and hear the music starting. All assembling is now completed.

5. Adjust and enjoy:

- Adjust the wind switch to get the appropriate airflow for the best snow-flying effect and avoid flakes flying out of the container.
- Snow speed can be adjusted at the bottom of the base by the power button.

Music is controlled by the switch and can be turned off when not needed.

I—Music turned off, and other functions are normal

II—Music turned on, and all functions are normal

Lights are controlled by pressing the button to the 3 different settings described below.

I—Steady

II—Twinkle

III—Off

IMPORTANT SAFETY INSTRUCTIONS

WARNING

1. This product is for indoor use only. Do not place in direct sunlight.
2. This product is for decoration only and is not a toy. Please use caution with children under the age of 8.
3. Do not position the decoration near candles, sources of heat, or in direct sunlight.
4. The decoration cannot be connected to the power supply directly.
5. Do not break, cut, or alter the power cable.
6. Do not attempt to repair the wiring with staples or nails.
7. Do not place the cable under a carpet or rug as it may get damaged.
8. Ensure that the cable is in a secure location where it is not a hazard.
9. Do not connect the decoration to the power supply while it is still in the packaging.
10. Please switch off the transformer when not in use.
11. Do not leave electric decoration unattended while operating in the ON position.
12. Do not over load the transformer.
13. Decoration should be on a level, stable surface to prevent it from falling over.
14. This product is fragile and should be assembled with care.
15. The product is for indoor use only and is not suitable for outdoor or any location with drafts.
16. Please follow the below steps and requirements specified in the instruction to ensure safety and reliability during the installation.
17. Use caution with children under the age of 8. Children should keep a safe distance to avoid inhaling snow particles and possible suffocation.

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper, or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items may be charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER FRASER HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Holiday@FraserHillFarm.com

1-855-591-7451

www.FraserHillFarm.com