

Haunted Hill Farm®

Presents our ghoulish collection of Halloween décor from

FRASER HILL FARM

Thank you for choosing Haunted Hill Farm!
If you have any questions, concerns or suggestions, please
contact us directly.

Boo@HauntedHillFarm.com (Anytime)

1-888-840-4559

(9AM to 9PM Eastern Time, Monday - Friday)

(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

 
See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

www.HauntedHillFarm.com

INSTALLATION AND SETUP


Please read the product setup instructions carefully. Do not operate this product in windy conditions.

- 1 Find a flat area of either grass or gravel for your product. Do not set up your inflatable on a slope. Doing so may prevent the inflatable from inflating properly or standing correctly. It may also present a safety hazard. Be sure that the area is clear of leaves, loose dirt and/or standing water as any of these can stain the product or damage the fan.
- 2 Carefully remove the inflatable and included items from the box. Set the stakes, ropes and clips aside. You will need those after fully inflating your inflatable for the first time.

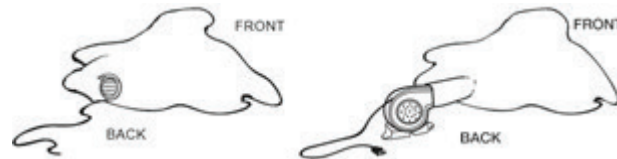


- 3 Lay your inflatable out on the ground. The fan will be on the back side of the inflatable. Ensure that the deflation zipper on the back of the inflatable is closed. Plug the fan into a Class A GFCI-protected receptacle to start inflating your inflatable.

 For your first inflation, you will need to help your inflatable inflate properly. Ensure that all of the extremities are positioned correctly, untwisting anything that may have become tangled during unpacking and setup. For taller inflatables, you will want to connect the tie downs to the upper fabric (or metal) loops before you fully inflate. Otherwise, the loops may be too high to reach.

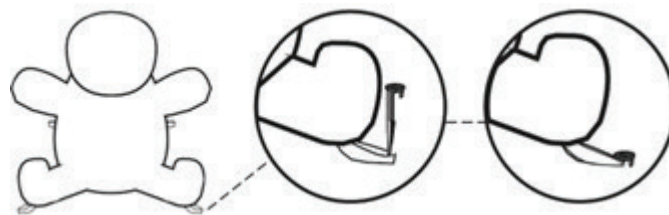


- 4 When fully inflated, locate all of the tie-down points around the base. Place a stake through the loop and press the stake about 2/3 of the way into the ground (you will insert these fully later). These stakes help hold the inflatable upright and prevent the wind from moving your inflatable.

 Note: If your inflatable is taller than 10 feet, you will need assistance to safely position and secure your inflatable.

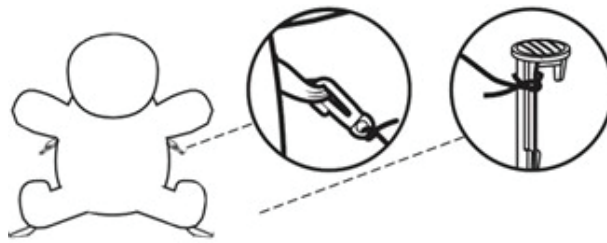

- 5** For inflatables under 9-feet tall, install at least three upper tie downs. For inflatables over 10-feet tall, you will need to install four or more upper tie downs, depending on the inflatable.

 
Attach each rope to a clip and attach the clip onto the upper fabric or metal loops. (If clips are not included, tie each rope to directly to the loop.) Tie the ropes to the additional ground stakes and secure the stakes about 2/3 of the way into the ground (you will insert these fully later).

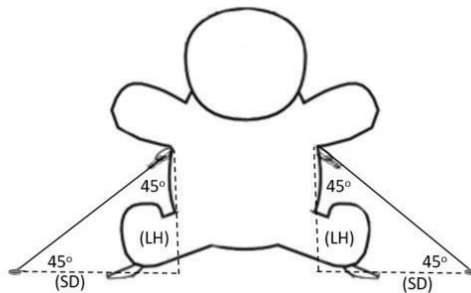

To achieve a proper 45° Angle, Stake Distance (SD) = Loop Height (LH)

For example, if the Loop Height (LH) is 6', the stake should be placed 6' away from the inflatable

 - 6** The angle of the rope to the ground should be 45 degrees (see diagram above). To achieve a 45-degree angle, the stake distance (SD) from the inflatable should be roughly equal to the loop height (LH) on the inflatable.

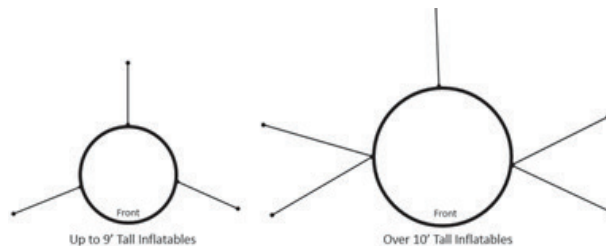

- 7** To properly secure your inflatable, install the upper tie downs according to the above graphic. Note that two of the side tie downs must angle forward by at least 30 degrees. Adjust stakes as needed to assure that the inflatable is fully upright and positioned correctly. When the inflatable is correctly positioned and all stakes have been placed, push all of the stakes fully into the ground.

NOTE: The provided empty plastic bags are intended to be filled with sand or water to stabilize the inflatable.



1-YEAR LIMITED WARRANTY

“Limited” Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm (“Manufacturer”) will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser’s sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold “as is” or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer’s option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Boo@HauntedHillFarm.com