



## Assembly & Care Guide

The model number of your lighting is printed on the side of your carton.

Always use this number to identify your lighting.

Thank you for your purchase of this quality lighting. With proper use and care, your lighting will provide you with years of use. Please follow the instructions on how to install your lighting. If you should have any problems with your lighting DO NOT return it to the place of purchase. Please call our toll free number: **877-397-5144** and a customer service representative will assist you.

**Please read all instructions completely** before installing your lighting.

NOTE: It is recommended to contact a licensed electrical contractor for hardwire installation.

**WARNING:** To reduce the risk of fire, electric shock, or personal injury:

- Turn off /unplug lamp and allow to cool before replacing bulb.
- Do not touch bulb when fixture is turned on.
- Do not look directly at lighted bulb.
- Keep materials that burn easily away from lighted bulb.

**CLEANING:**

Use only soft cloth to dust and clean fixture. Never use chemicals or abrasive cleaners as it may damage finish.


# Installation Instruction

Item No: HELEBEAD-5MC

**WARNING:** To avoid risk of electrical shock, be sure to shut off power while installing or servicing this fixture.

**NOTE:** We advise calling a qualified electrician when making the wire connections to the junction box.

## WARNING

1. Shut off the power to the area where you will be working
2. Use 60Watt maximum **type B bulb.** 
3. Do not use polish or cleaner on your lamp. just wipe with soft cloth.

## STEP 1--UNPACK

1. Carefully unpack your new fixture and lay out all the parts on a clear surface.
2. The bag includes round glass bead string(L)[5pcs], Crystal string(M1)[35pcs], metal tube(N)[5pc]

## STEP2--CHANDELIER ASSEMBLY

1. Thread the Loop (J) into the coupling (K2) until tight.
2. Hook the round glass bead string(L), the crystal string(M1) and the crystal Cone(M2) on small hole of the Iron frame.
3. Put the metal tube(N) onto socket and insert bulb(not included) into socket

## \*IMPORTANT NOTICE

THERE ARE 2 WAYS TO INSTALL THIS CHANDELIER-PORTABLE WIRE(STEP3) OR FIXED WIRE(STEP4) INSTALLATIONS. FOR FIXED WIRE INSTALLATION, WE ADVISE CALLING A QUALIFIED ELECTRICIAN WHEN MAKING THE WIRE CONNECTIONS TO THE JUNCTION BOX.

## STEP3--PORTABLE WIRE INSTALLATION(1<sup>st</sup> alternative)

- \*NOTE: CUT OFF THE FIXTURE COPPER GROUND WIRE.
- \*CAUTION:

1. INSTALLATION SHOULD NOT BE MADE ON A RADIANT-HEATING CEILING.
2. THE HOOKS ARE TO ENGAGE THE CHAIN ONLY AND NOT THE ELECTRIC WIRE.



## A.HOOK INSTALLATION(PACKET INCLUDED TWO HOOKS)

For plaster or plaster board ceilings

1. Drill a hole in the ceiling to the same diameter as the closed flaps of the enclosed TOGGLE BOLT assembly(A).
2. Insert flaps and bolt into the ceiling with the TOGGLE BOLT protruding through the ceiling lock the assembly by threading on the hook as shown.
3. Drape your chain to second hook or let it hang straight.

For wood or acoustic board ceilings(minimum thick size is 1-1/2 Inch).

1. Select a place on the ceiling where a wood beam exists.
2. Thread the steel screw(B) into hook(C).
3. Screw the assembly into the wood beam.
4. Drape your chain to second hook or let it hang straight.

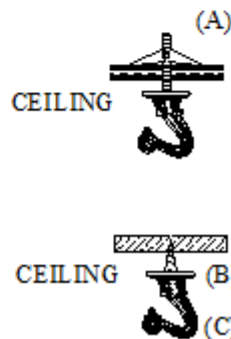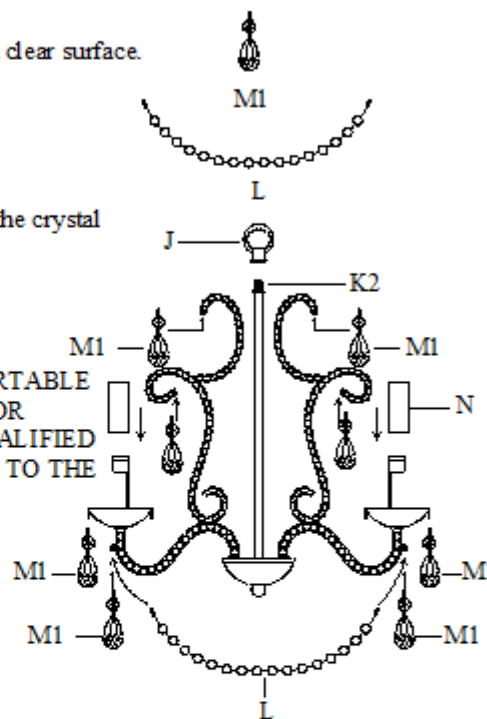

## B. HOOK THE CHANDELIER ASSEMBLY TO THE CHAIN

1. open the lock link(K1) provided, connect to the fixture Loop(J) and chain link & close the lock link(K1).
2. Once chain & wire are arranged, plug the wire plug into household electrical outlet.

### \*IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.

### STEP 4--FIX WIRE INSTALLATION(2<sup>ND</sup>

alternative)




\*We advise contacting a qualified electrician for this step.

1. Thread Nipple (C) into Loop(F) until snug.
2. Thread other end of Nipple(C) with loop attached into Crossbar(D) until snug.
3. Place lock Washer (B) over end of nipple protruding through crossbar and thread and thread hex nut (A) onto nipple until tight.
4. Take this crossbar assembly and mount to ceiling junction box with Junction box threads(E), Tighten thread securely with screwdriver.
5. Open the lock link(K1) provided, connect to the fixture Loop(J) and chain link & close the lock link(K1).
6. Place the fixture wires through the chain. Slip Loop Collar (H) over the chain, Then do the same with canopy(G).
7. Open the end Link (K) of the chain and hang the fixture on the loop(F), & close the link(K).
8. Cut the wire plug off, Feed the fixture wires through the Loop(F), & and Nipple(C) and pull until taut.
9. Connect fixture wire to the wire from junction box with wire connectors. See paragraph below.
10. Push canopy(G) up against ceiling and secure with loop collar(H).

### \*WIRE CONNECTION

FOR WIRE CONNECTION, BE SURE TO CONNECT, FIXTURE SMOOTH WIRE TO THE BLACK HOUSE WIRE, RIBBED WIRE TO THE WHITE HOUSE WIRE AND FIXTURE GROUND WIRE TO SUPPLY GROUND WIRE WITH WIRE CONNECTORS OR THE FIXTURE GROUND WIRE FROM THE FIXTURE TO THE GREEN GROUND SCREW ON THE MOUNTING BRACKET.

\*Your installation is now complete. turn power on.

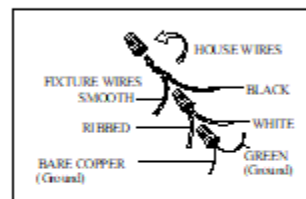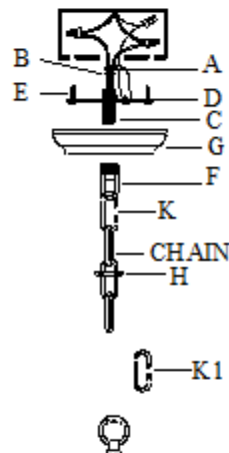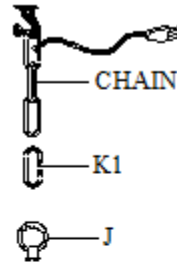



## 1-Year Limited Warranty

### “Limited” Warranty Program

For a period of one (1) year after purchase, Hanover Products (“Manufacturer”) will either repair or replace defective components in accordance with this Limited Warranty.

*Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.*

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser’s sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold or abrasion. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, breaks, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items will be charged actual freight costs plus \$15 for handling. Repairs or replacement will be made at the Manufacturer’s option.

**THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER AF LIGHTING, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.**

**Contact Warranty Services at:**

**1-877-397-5144**

**or**

**contactus@hanover-products.com**