

Haunted Hill Farm®

Presents our ghoulish collection of Halloween décor from

FRASER HILL FARM

Thank you for choosing Haunted Hill Farm!
If you have any questions, concerns or suggestions, please
contact us directly.

✉ **Boo@HauntedHillFarm.com** (Anytime)

☎ **1-888-840-4559**

(9AM to 9PM Eastern Time, Monday - Friday)

(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

See the full Haunted Hill Farm collection and get online support for assembly,
troubleshooting, care and maintenance at:

www.HauntedHillFarm.com

5-Ft. Spooky Dancing Tree with Micro LED & Sound
XHW050-6MORG
XHW050-6MPUR

IMPORTANT SAFETY INSTRUCTIONS

1. Please read and follow all instructions and warnings both on the instructions and on the product carefully before use.
2. Retain these instructions for future reference.
3. This product is to be used only as intended.
4. For indoor use only.
5. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
6. Do not secure the wiring of this product with staples or nails, or place on sharp hooks, nails, or in a manner that can cut or damage the wire or insulation.
7. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury, and electric shock it should not be played with or placed where small children can reach it.
8. Do not close doors or windows on the product or extension cords as this may damage the wire and insulation.

What's Included in the Box

- Top Tree Section
- Bottom Tree Section
- Metal Tree Stand w/ Thumb Screws
- Power Cord
- Transformer
- Motor Base



Storage Tips: We recommend saving the original carton to store the tree in or using a tree storage bag. Store tree in a cool, dry area where temperature does not exceed 100°F.

ASSEMBLY INSTRUCTIONS

1. Carefully unpack the parts listed on previous page from the carton and layout on a clean surface.
2. Remove any bubble wrap and pole caps from the branches and tree pole.
3. Adjust the legs on the tree stand to form an X shape, ensuring 90-degree angles between the legs, and loosely insert the thumb screws to secure the legs in place.
4. Place the bottom tree section in the motor base. The flat section will slide into the socket.
5. Insert the bottom of the tree with the motor base installed into the metal tree stand. Make sure the motor sensor is facing outward, then tighten the thumb screws to secure.
6. Place the top tree section into the bottom tree section. Locate the light plugs on each section, connect the two plugs, and tighten the nut.
7. Shape the tree branches to create a spooky, enchanted tree shape.
8. Your tree comes with two power cords, each requiring their own separate power source, one for motion and sound, and one for lights. Locate the power transformer and plug the connector end into the motor base, then plug it into the power source; this cord will control the motion and sound. Plug the lighting controller cord into the power source for the lighting function.

NOTE: The sound function has an on/off switch so your tree can dance without having sound.

NOTE: The motion and sound stay on for 45 seconds after the sensor is triggered.

1-YEAR LIMITED WARRANTY

“Limited” Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm (“Manufacturer”) will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser’s sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold “as is” or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items may be charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer’s option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Boo@HauntedHillFarm.com