

Haunted Hill Farm®

Presents our ghoulish collection of Halloween décor from

FRASER HILL FARM

Thank you for choosing Haunted Hill Farm!
If you have any questions, concerns or suggestions, please
contact us directly.

Boo@HauntedHillFarm.com (Anytime)

1-888-840-4559

(9AM to 9PM Eastern Time, Monday - Friday)

(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

www.HauntedHillFarm.com

12-Ft Pre-Lit Giant LED Spider Web

HHHELED144-WEB1

IMPORTANT SAFETY INSTRUCTIONS

 
When using outdoors, install only to a covered GFCI electrical outlet that is weatherproof. Make sure the outdoor adaptor and cord are assembled correctly and secured tightly to prevent water from entering the device.

1. Please read and follow all instructions and warnings both on the instructions and on the product carefully before use.
2. Retain these instructions for future reference.
3. This product is to be used only as intended its use.
4. For indoor/outdoor use.
5. If used outdoors, connect the product to a Ground Fault Circuit Interrupting (GFCI) receptacle.
6. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
7. Do not secure the wiring of this product with staples or nails, or place on sharp hooks, nails, or in a manner that can cut or damage the wire or insulation.
8. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
9. Do not close doors or windows on the product or extension cords as this may damage the wire and insulation.

Power supply: 30V adaptor, raintight Input:
120V AC 60Hz
Output: 30V AC .30A

PARTS INCLUDED

- A: Spider Web Light String - 1 PC**
B: Replacement Plastic Tie - 10 PCS
C: Ground Stake - 5 PCS

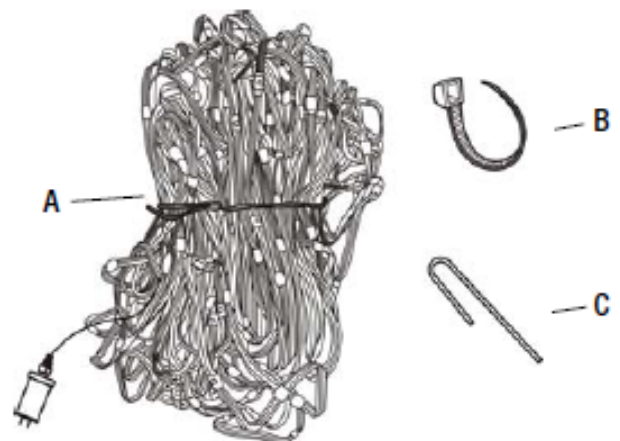

ASSEMBLY INSTRUCTIONS

 
Carefully remove all the parts from the box and place them on a clean surface. Many parts are connected by the light string that runs throughout the item. Take care not to pull, cut, or damage the light string. Read the entire assembly instruction guide prior to assembly and confirm all the parts are included in the box against the parts list.

It is recommended to assemble parts of the product while lying flat on the ground or on a flat surface. If any parts are missing or damaged do not attempt to assemble them but contact our customer service center.

Assembly may require more than one person.


1. Untie the Spider Web Light String

Remove the Spider Web Light String (A) from the box. It is tied into a bundle. Untie the twist tie around the bundled light string.

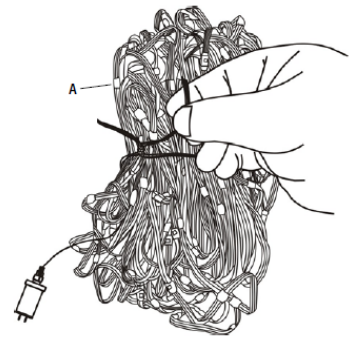

2. Unfold the Spider Web Light String and prepare for display

 Unfold the Spider Web Light String (A). Find the metal ring on the top and hang it to the desired structure. Straighten each light string down and away from each other with a desired space between. Insert the Ground Stakes (C) over the loops at the end of each light string then firmly into the ground.

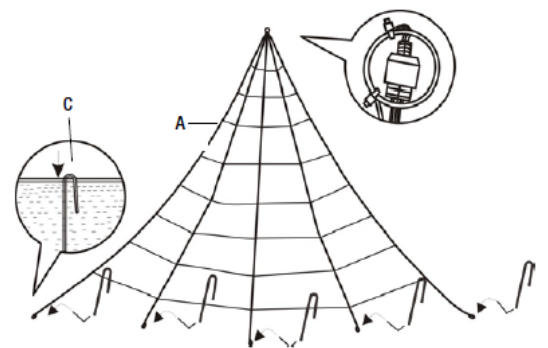

TROUBLESHOOTING

Problem	Solution
Unstable and hard to assemble	Make sure the ground or surface that the items sits on is flat and level.
Works improperly	Make sure to plug the item correctly into a wall outlet or a UL Listed Power Cord.
Hard to assembly	Make sure all parts are assembled properly as listed in the instruction manual.
The item does not light	Check for loose or broken bulbs and connection and all plugs. Check for broken or burned-out fuse in the plug.

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Boo@HauntedHillFarm.com