

Haunted Hill Farm®

Presents our ghoulish collection of Halloween décor from

FRASER HILL FARM

Thank you for choosing Haunted Hill Farm!
If you have any questions, concerns or suggestions, please
contact us directly.

Boo@HauntedHillFarm.com (Anytime)

1-888-840-4559

(9AM to 9PM Eastern Time, Monday - Friday)

(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

www.HauntedHillFarm.com

Please follow the step by step guide and enjoy your 8.5FT Ginormous Reaper!

HHROTRPR-1FLSA



The model number of your item is printed on the side of your carton.
Always use this number to identify your item.

Thank you for your purchase of this quality Halloween decor. With proper use and care, your Halloween decor will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your item, or you have any questions, **DO NOT** return it to the place of purchase. Please call our toll-free number: **1-888-840-4559** and a customer service representative will assist you. Enjoy your Holiday!

PARTS LIST

- A. Base x 1
 - B. Lower Support Poles x 2
 - C. Right Upper Support Pole x 1
 - D. Left Upper Support Pole x 1
 - E. Hip Hoop x 1
 - F. Torso Frame x 1
 - G. Shoulder Frame x 1
 - H. Rib Cage x 1
 - I. Costume x 1
 - J. Right Arm x 1
 - K. Left Arm x 1
 - L. Right Hand and Skull x 1
 - M. Left Hand x 1
 - N. Scythe Poles x 6
 - O. Scythe Blade x 1
 - P. Head x 1
 - Q. Adapter x 1
- Input: 100-240V AC 50/60Hz
Output: 5.9V 1.5A



BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT. CONTACT CUSTOMER SERVICE AT BOO@HAUNTEDHILLFARM.COM, OR BY PHONE FROM 9:00AM TO 5:00PM EST AT 1-888-840-4559.

CARE AND STORAGE INSTRUCTIONS


When the product not in use, store in its original packing after it is completely dry. Keep away from heat. Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. Recommended for ages 14 and up.


1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.
4. Colors, style and contents may vary slightly from those shown on the package.

ASSEMBLY INSTRUCTIONS

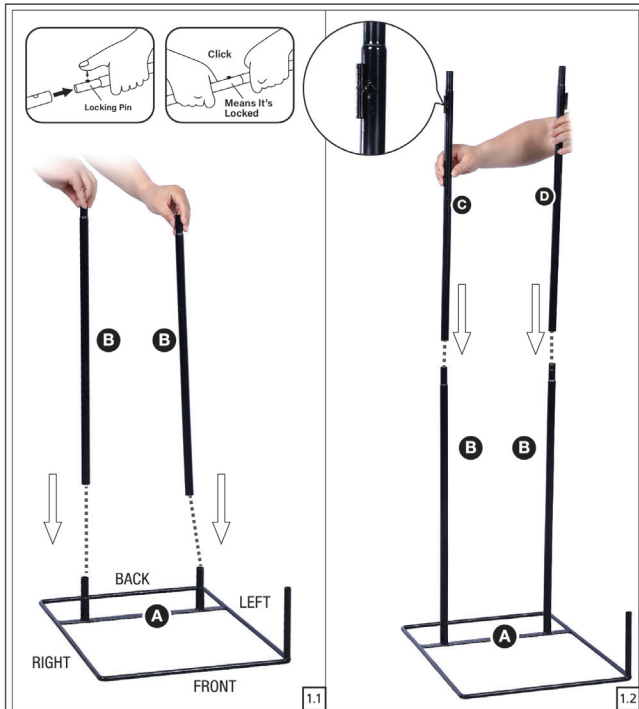

STEP 1


NOTE: Left and right are from the character's point of view. Connect the (B) Lower Support Poles to the (A) Base using the quick connect push buttons and pre-drilled holes as shown in Figure 1.1. Then assemble the (C) Right Upper Support Pole to the (B) Lower Support Pole on the right side of the assembly using the available quick connect push button and pre-drilled hole. Then attach the (D) Left Upper Support Pole to the remaining (B) Lower Support Pole using the available quick connect push button and pre-drilled hole as shown in Figure 1.2.

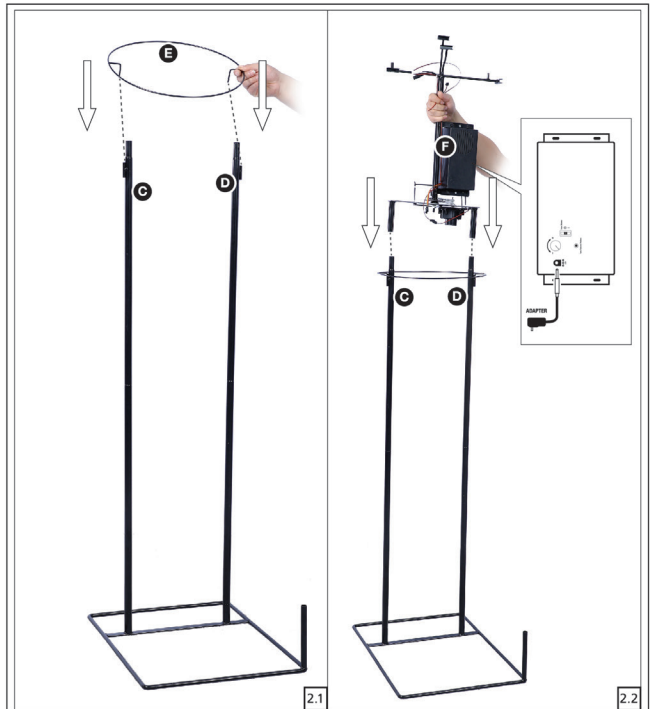

STEP 2


Slide the prongs of the (E) Hip Hoop into the housings available on both of the (C, D) Upper Support Poles as shown in Figure 2.1. Connect the (F) Torso Frame to the (C, D) Upper Support Poles using the available quick connect push buttons and pre-drilled holes as shown in Figure 2.2.

NOTE: Plug in your adapter to the receiving jack, but do not plug into an outlet until fully assembled.

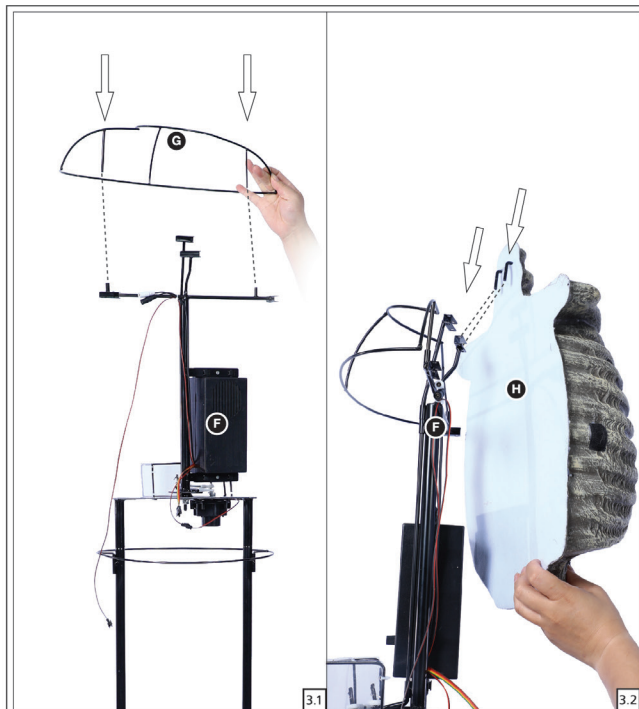

STEP 3

Slide the prongs of the (G) Shoulder Frame into the housings available at the top of the (F) Torso Frame as shown in Figure 3.1. Then slide the forked hook available on the (H) Rib Cage into the forked hook housing available at the front of the (F) Torso Frame as shown in Figure 3.2.

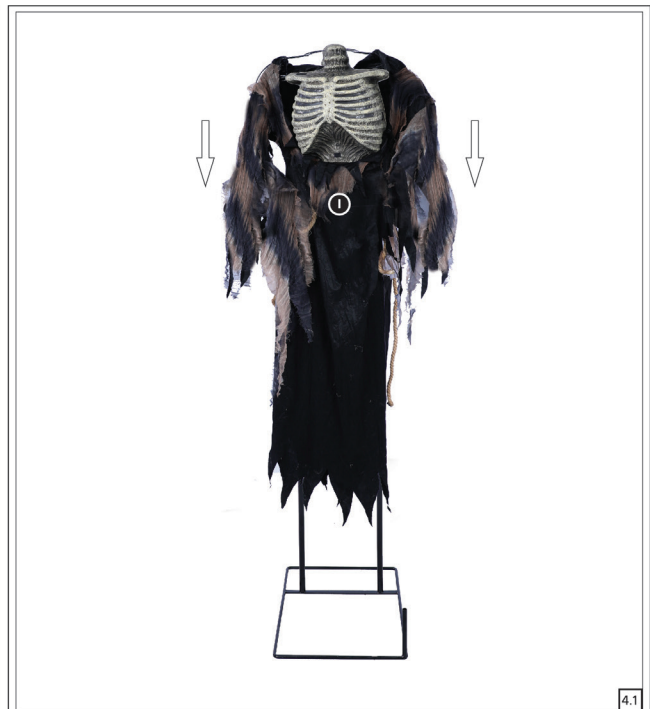

STEP 4


Slip the (I) Costume over the assembly as shown in Figure 4.1.



5.1

STEP 5

Slide the (J) Right Arm up the right sleeve of the (I) Costume and set the forked hook of the (J) Right Arm into the housing available on the right side of the (F) Torso Frame. Then slide the (K) Left Arm up the left sleeve of the (I) Costume and set the forked hook of the (K) Left Arm into the housing available on the left side of the (F) Torso Frame as shown in Figure 5.1.

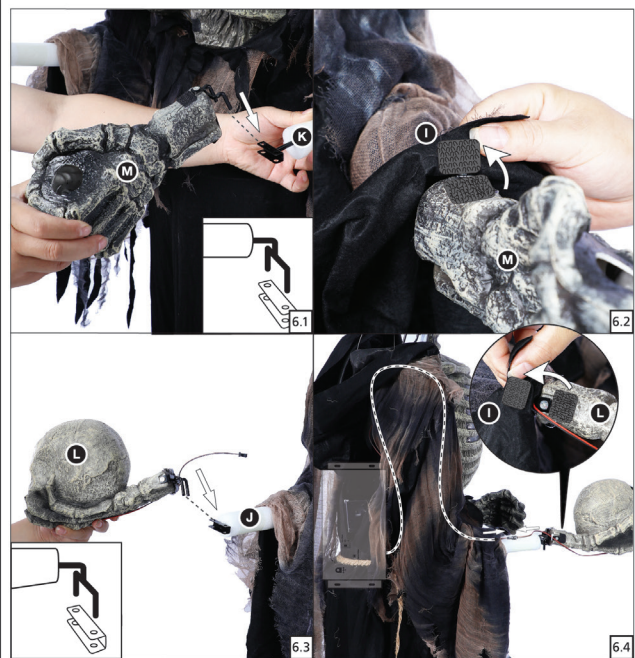

STEP 6

Slide the forked hook of the (M) Left Hand into the housing available at the end of the (K) Left Arm as shown in Figure 6.1. Then attach the hook & loop closure available between the left sleeve of the (I) Costume and wrist of the (M) Left Hand as shown in Figure 6.2. Then slide the forked hook of the (L) Right Hand and Skull into the housing available at the end of the (J) Right Arm as shown in Figure 6.3. Secure the (I) Costume to the (L) Right Hand and Skull using the available hook & loop closures as shown in Figure 6.4. Find the (L) Right Hand and Skull's corresponding wire from the Function Control Box. Thread this cable down through the right sleeve of the (I) Costume and connect it to the cable available from the (L) Right Hand and Skull.



7.1

7.2

STEP 7

Connect all the (N) Scythe Poles together using an insert and twist motion. Be sure to assemble the (N) Scythe Poles through the (M) Left Hand. Attach the (O) Scythe Blade to the top of the assembled (N) Scythe Poles using the insert and twist motion as shown in Figure 7.1. Then slide the forked hook of the (P) Head into the forked hook housing available at the top of the (F) Torso Frame as shown in Figure 7.2.



STEP 8

Connect the cables from the (P) Head to their corresponding cables available from the Function Control Box by color. Then connect the Sensor cables available from the Function Control Box and the (H) Rib Cage as shown in Figure 8.1. Then close up the back of the (I) Costume by securing the hook & loop closures at the back as shown in Figure 8.2.



STEP 9


Bring the hood of the (I) Costume up over the (P) Head and secure in place using the available hook & loop closure as shown in Figure 9.1. Then tie the rope belt available on the (I) Costume in front of the assembly using any preferred knot. Then secure all hook & loop closures between the (H) Rib Cage and (I) Costume as shown in Figure 9.3. Your Animated Life-sized Rotting Reaper is now fully assembled. Plug in and turn on to let the fun begin!




OPERATING INSTRUCTIONS

1. Plug the power adapter into a standard power outlet and adjust the settings on the function control box, located on the torso frame, as desired.

2. Settings:

Sensor /Détecteur	This switch mode will activate sound and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
○	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one audio cycle with each Try Me activation.
I	This switch mode will continuously operate the sound and animation of the item.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

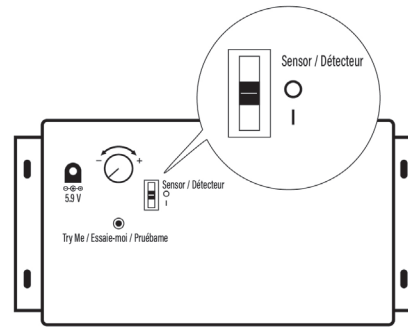

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and(2)this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures; Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK CAREFULLY FOLLOW THESE INSTRUCTIONS

The important safety instructions shall be provided with a power unit and include those items in the following list that are applicable. The statement "**READ AND FOLLOW ALL SAFETY INSTRUCTIONS**" shall be prominently displayed and precede the list, and the statement "**SAVE THESE INSTRUCTIONS**" shall be prominently displayed and follow the list. The word "**WARNING**" shall be entirely in upper case letters.

When using electrical products, basic precautions should always be practiced including the following:
READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

Read and follow all instructions that are on the product or provided with the product.

For a cord-connected or direct plug-in power unit, do not use an extension cord.

Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

IMPORTANT SAFETY INSTRUCTIONS



Warnings

- This product is for decoration only and is not a toy. Small parts and choking hazard. Use caution with children under the age of 14.
- Do not position the decoration near candles, sources of heat, or in direct sunlight.
- The decoration cannot be connected to the power supply directly.
- Decoration should be on a level, stable surface to prevent it from falling over.
- This product is fragile and should be assembled with care.
- Surface washable only.
- Please follow the steps and requirements specified in the instruction to ensure safety and reliability during the installation.

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Boo@HauntedHillFarm.com