

LMVH1711ST

QUICK INSTALL & CLEARANCES

For full installation directions/clearances please refer to the corresponding User Manual and Installation Guide.

DIMENSIONS	
Cavity (WxHxD)	21-1/4" x 9-7/16" x 14-3/16"
Exterior (WxHxD)	29-15/16" x 16-7/16" x 15-3/8"
Net Weight	69 lbs.
Shipping Weight	79 lbs.

 Locate the oven away from strong draft areas, such as windows, doors, and strong heating vents. BE SURE you have enough space. See below for minimum vertical and horizontal clearance.

ELECTRICAL CONNECTION


Locate the grounded electric outlet for this oven in the cabinet above the oven, as shown

NOTE: The outlet should be on a circuit dedicated to the microwave oven (120V, 60 Hz., AC only) with a 15 or 20A fused electrical supply.

IMPORTANT: If you do not have the proper wall outlet, you MUST have one installed by a qualified electrician.


You will cut the hole for the power supply cord later when you prepare the wall and upper cabinet in.

NOTE: Do not use an extension cord. Keep the power cord dry and do not pinch or crush it.

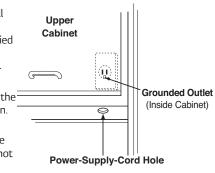

MARNING

AVOID ELECTRIC SHOCK! THIS APPLIANCE MUST BE GROUNDED! Improper grounding could result in electric shock or other personal injury.

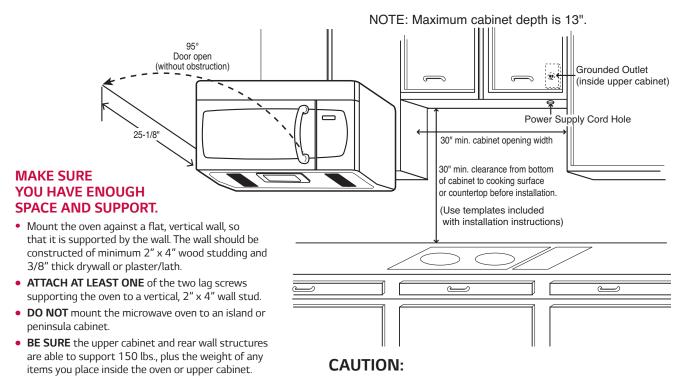

Before you begin installing the oven, PLACE A PIECE OF THE CARTON OR OTHER HEAVY MATERIAL (a blanket) over the countertop or cooktop to protect it. Do not use a plastic cover. Failure to protect these surfaces could result in property

LG Brand_ALL_Microwaves Fin_1.indd 18 8/21/17 3:44 PM