


**INSTRUCTION SHEET**  
**LD SERIES**  
**LCD MONITORING DESK**

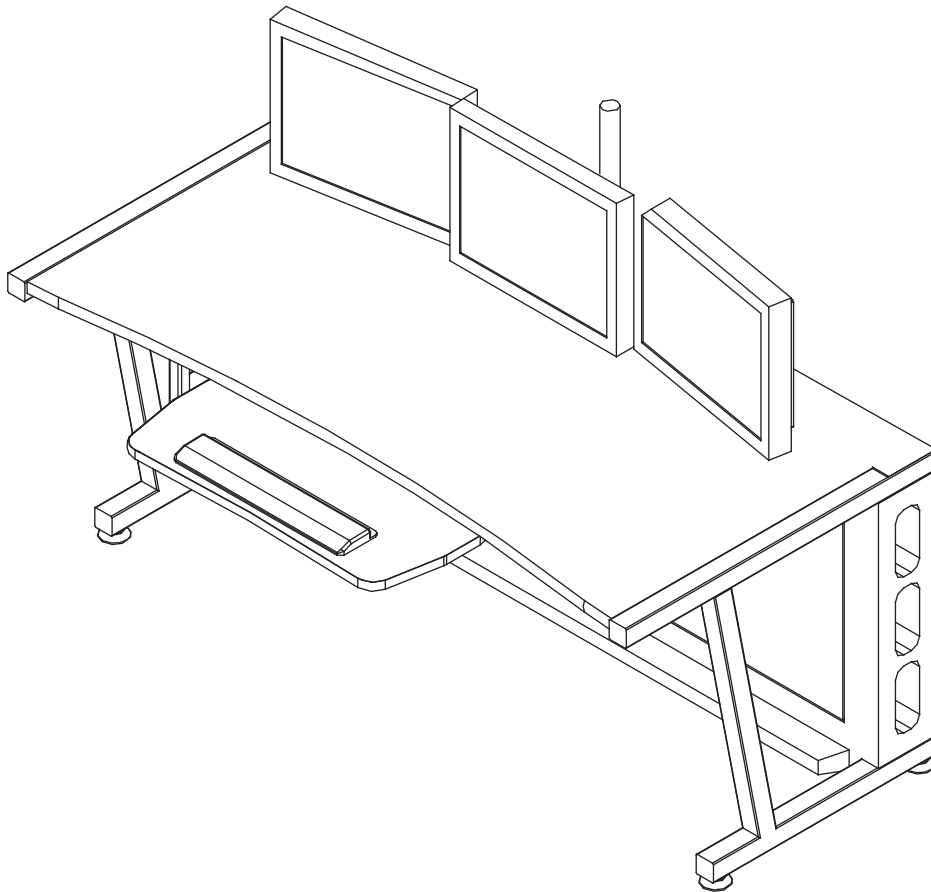

**THANK YOU**

Thank you for purchasing the LD Series LCD Monitoring Desk. Please read these instructions thoroughly before assembling this product.

**PRODUCT FEATURES**

- Modular Design allows economical additions and limitless design possibilities
- Power distribution and cable management cabinet features integral front door and rear doors for access

## ASSEMBLY


### CAREFULLY REMOVE ALL CONTENTS FROM CRATE BEFORE BEGINNING ASSEMBLY

1) Lay desktop upside down on a flat surface. Using the two screws provided, attach cabinet to work surface. Do not tighten screws. **(FIGURE A)**

**NOTE:** For ease of installation, keep desk flipped over until assembly of desk and accessories is complete.


**NOTE:** Bottom of desktop has mounting holes for accessories. Bottom of cabinet does not have mounting holes. Cabinet direction is correct when hole plugs and mounting holes on cabinet line up with hole plugs and mounting holes on desktop.

**TIP:** Remove the doors from the cabinet during assembly and remove the hole plugs from the back of the cabinet.

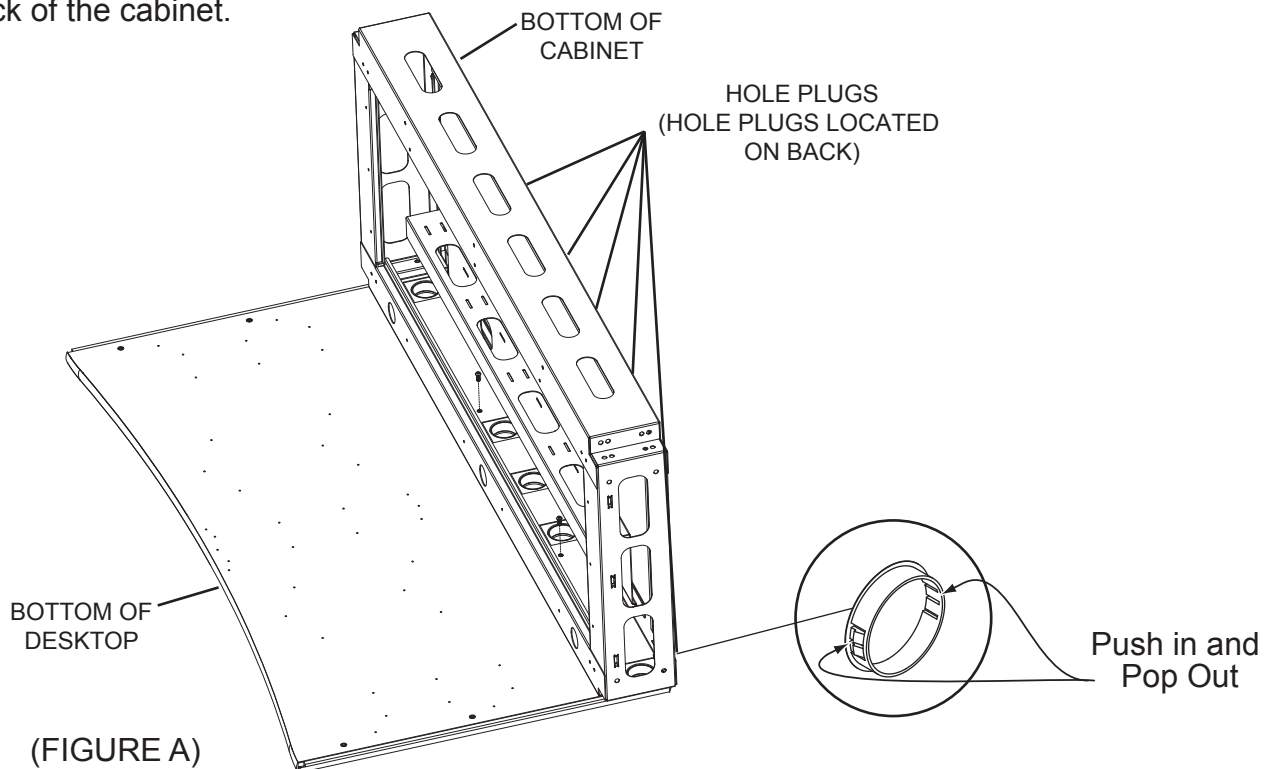


2) Attach toe kick to cabinet by using three screws provided. **(FIGURE B)**

**NOTE:** Hole plugs from bottom rear of desk can be removed for easier access to tighten toe kick screws. Remaining hole plugs from rear can be removed to run cables through or left in place if not used.

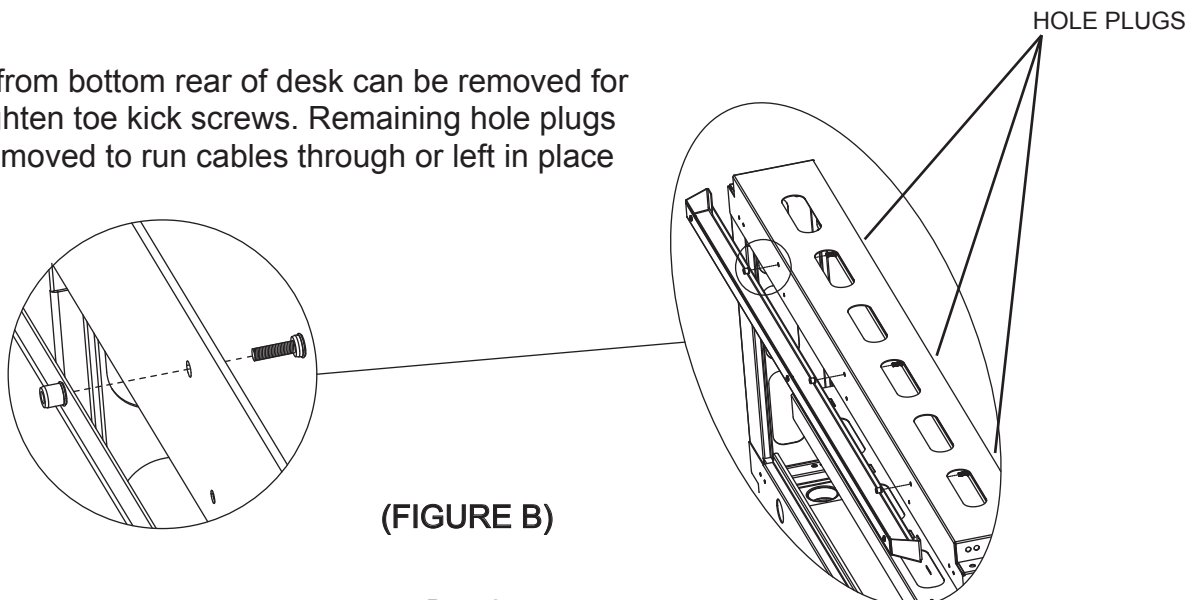

## ASSEMBLY


- 3) Identify the right leg and the left leg by referring to labels. Attach legs to the desktop by sliding the legs into the grooves on the work surface. Install four screws into each leg from the inside of the cabinet (two on top, two on bottom). Do not tighten. (FIGURE C)

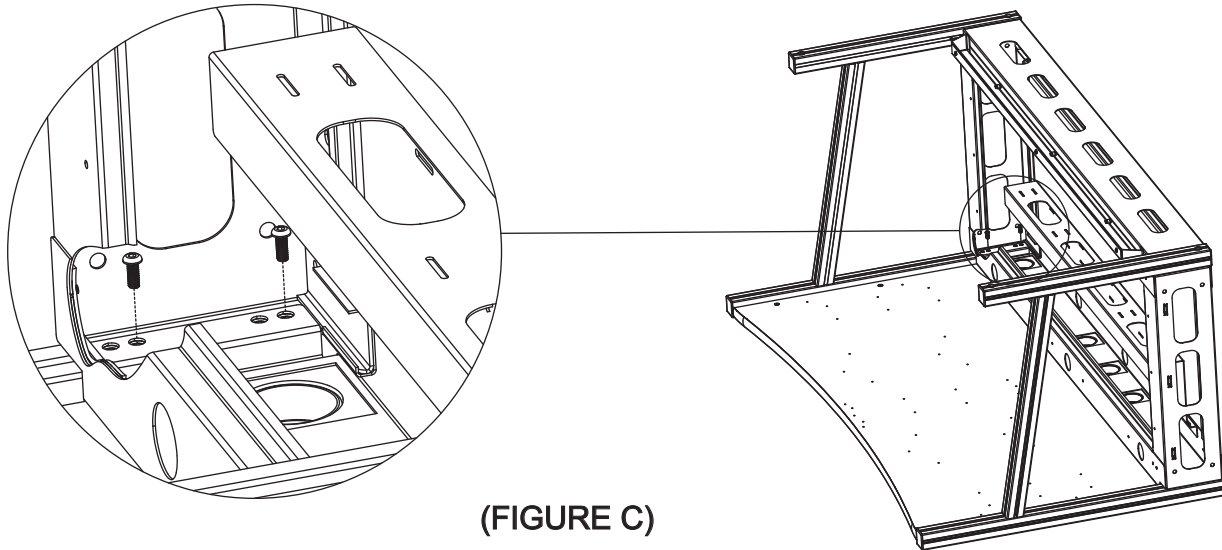

(FIGURE C)


- 4) Attach support brackets by installing four screws in each bracket. Do not tighten.

**NOTE:** Sliding nuts are dropped into leg channel and can be positioned into place using a thin tool to align with holes in mounting bracket. (FIGURE D)

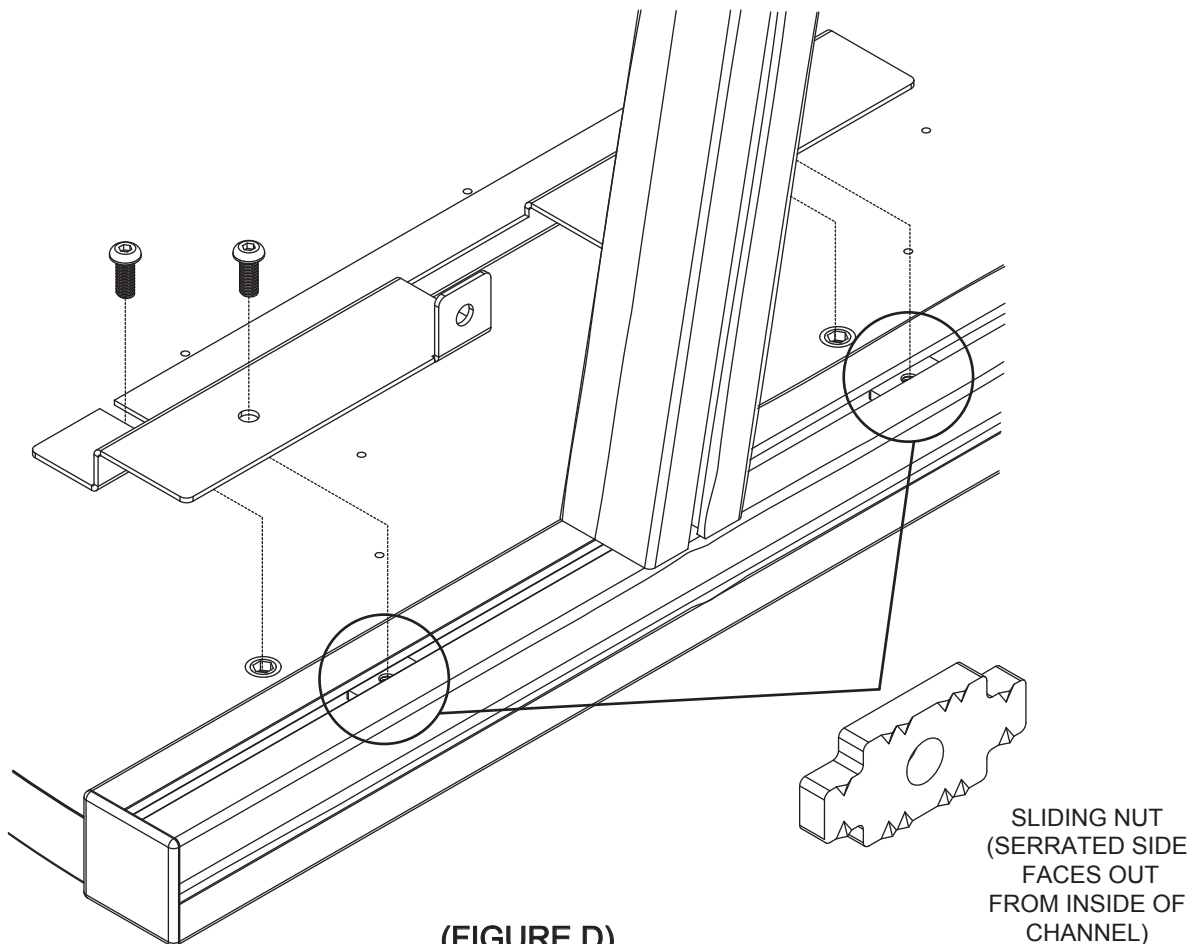


(FIGURE D)

- 5) Check alignment and gently tap side of leg with rubber mallet to make sure it is in securely **(FIGURE E)**. Tighten all screws.

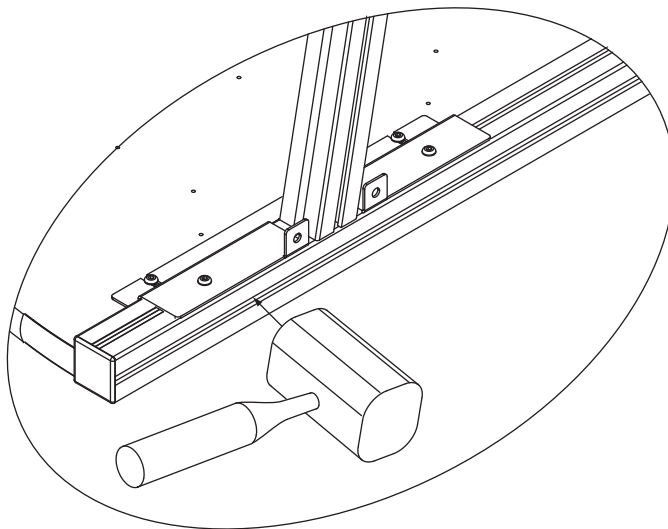

**(FIGURE E)**

- 6) Install leveling feet by screwing into bottom of legs, two on each leg. **(FIGURE F)**. Adjust as needed.

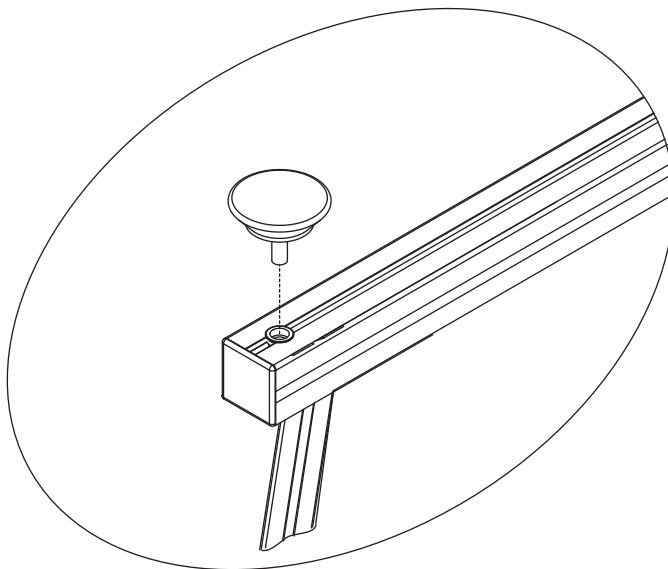


**(FIGURE F)**

## INSTALLATION OF OPTIONAL POWER STRIP (SOLD SEPARATELY)


**NOTE:** Disregard instruction sheet that came with power strip and follow the instructions below.

Middle Atlantic Products recommends the use of the PD-815SC or PD-815SC-NS slim 8 outlet power strip with the LCD monitoring desk. The desk has been optimized to accommodate up to two power strips.


- 1) Install mounting brackets with screws provided with PD-815SC or PD-815SC-NS power strip using acorn nuts included with desk. **(FIGURE H)**

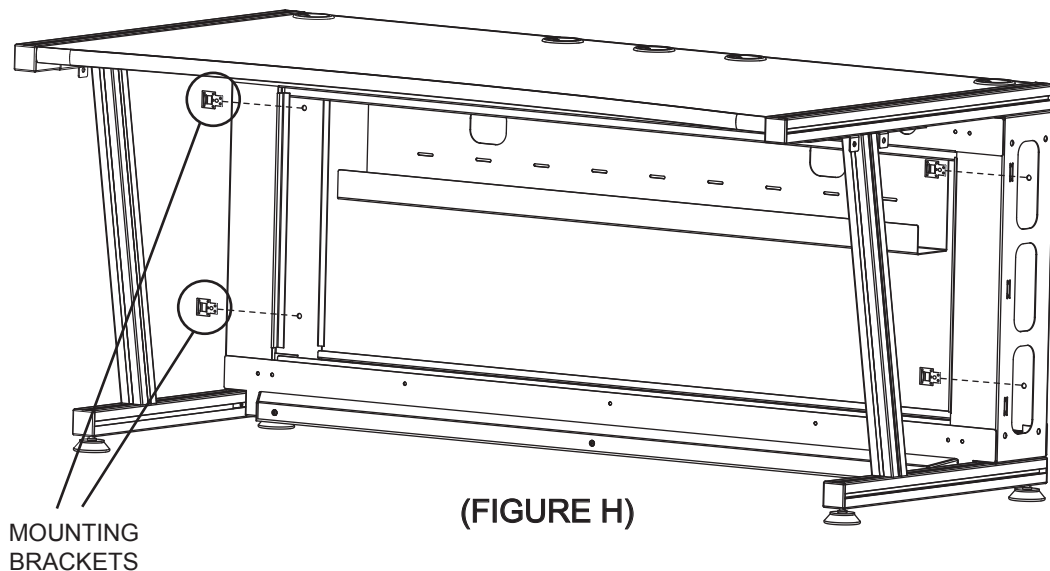


- 2) Attach power strip to mounting bracket by snapping in place. **(FIGURE J)**

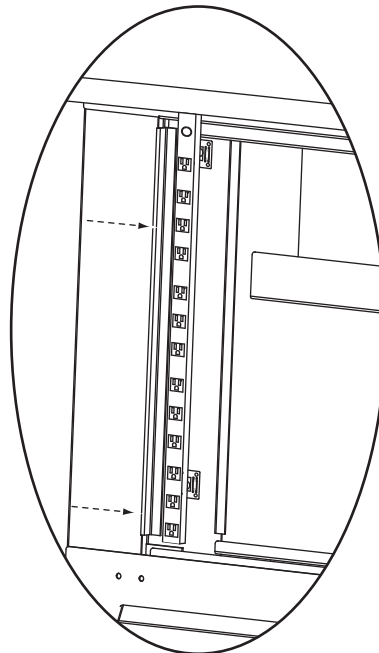

LD-48 (48" DESK): Work Surface Accessory Mounting Points

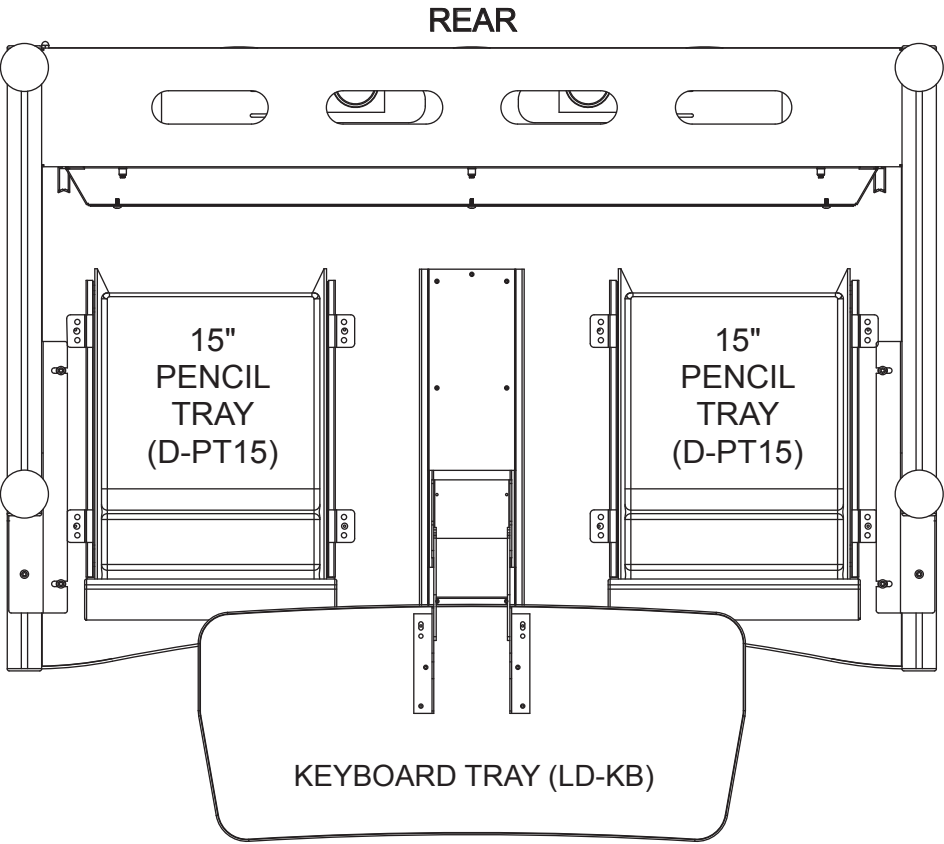


PART #	NUMBER OF MOUNTING HOLES
Pencil Tray (D-PT15, D-PT22)	4
Keyboard Tray (LD-KB)	8


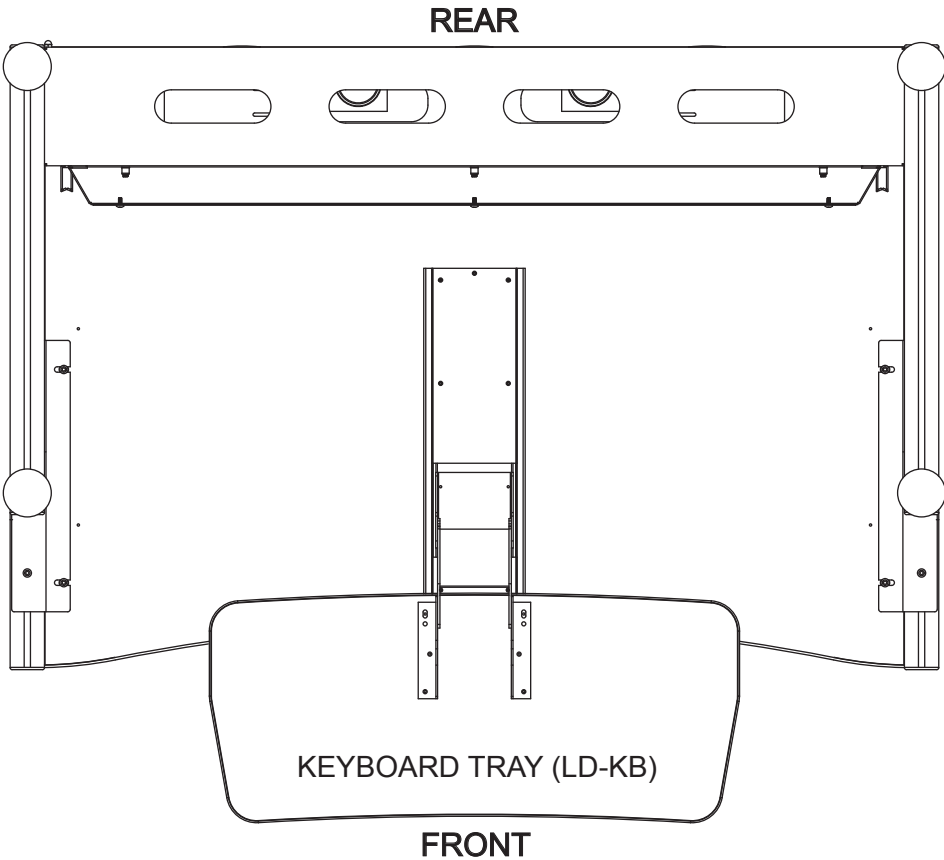


**NOTE:** 22" pencil tray (D-PT22) does not fit on 48" desk (LD-48)

LD-64 (64" DESK): Work Surface Accessory Mounting Points

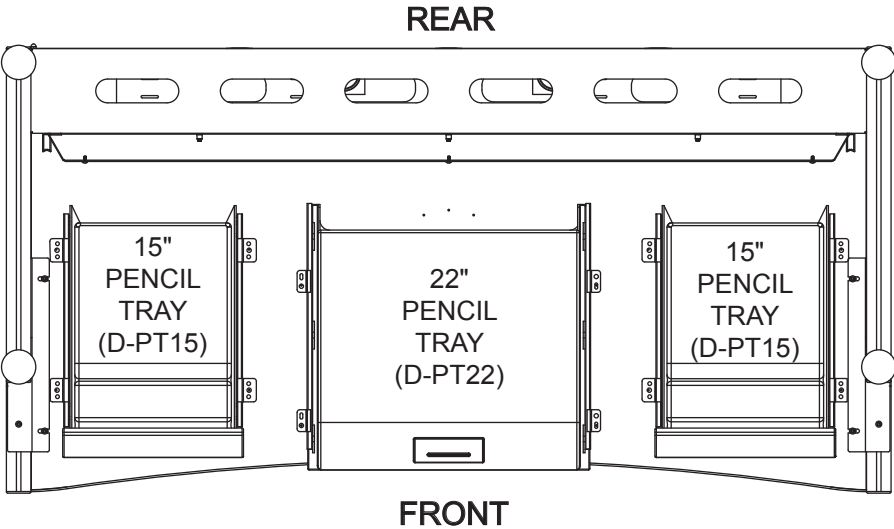

PART #	NUMBER OF MOUNTING HOLES
Pencil Tray (D-PT15, D-PT22)	4
Keyboard Tray (LD-KB)	8

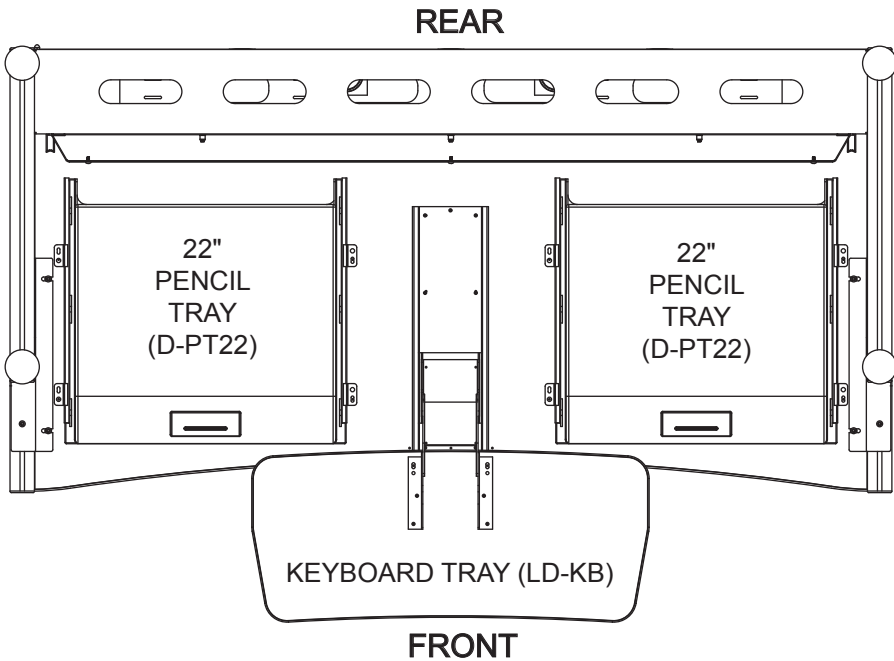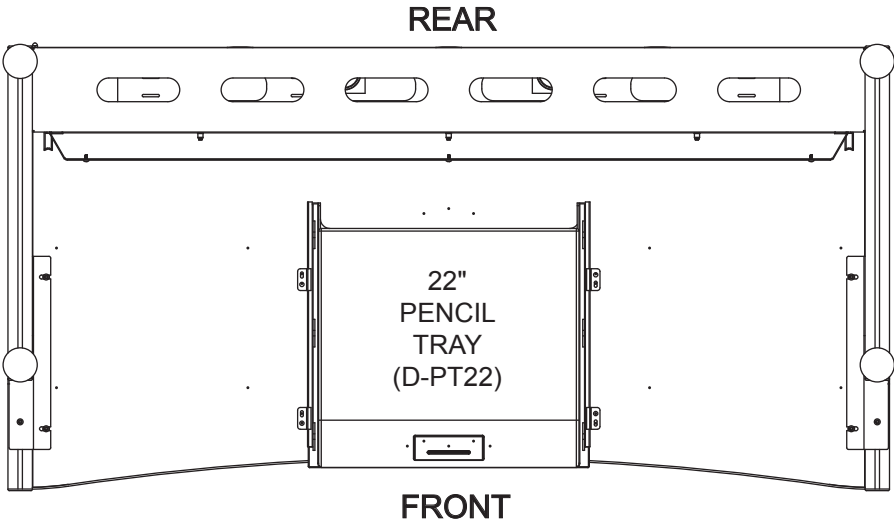

## **WARRANTY**

Middle Atlantic Products, Inc. (the "Company") warrants the LD Series LCD Monitoring Desk to be free from defects in material or workmanship under normal use and conditions for a period of (3) three years from date of shipment by the Company.

The Company's entire liability to the purchaser, and the purchaser's (or any other party's) sole and exclusive remedy, under this warranty shall be limited, at the Company's option, to either (a) return of and refund of the price paid for, or (b) repair or replacement at the Company's factory of the products purchased, or any part or parts thereof, which the Company has determined to be defective after inspection thereof at the Company's factory.

This warranty does not cover damage due to acts of God, accident, misuse, abuse or negligence by parties other than the Company, or any modification or alteration of the products. In addition, this warranty does not cover damage due to improper handling, assembly, installation or maintenance.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF THE PRODUCTS PURCHASED, EVEN IF THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE COMPANY'S LIABILITY TO THE PURCHASER (OR ANY OTHER PARTY) HEREUNDER, IF ANY, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCTS PAID TO THE COMPANY.

### **Corporate Headquarters**

Corporate Voice 973-839-1011 - Fax 973-839-1976  
International Voice +1 973-839-8821 - Fax +1 973-839-4982  
middleatlantic.com - info@middleatlantic.com

### **Middle Atlantic Canada**

Voice 613-836-2501 - Fax 613-836-2690  
middleatlantic.ca - customerservicecanada@middleatlantic.ca

### **Factory Distribution**

USA: NJ - CA - IL Canada: ON - BC

**At Middle Atlantic Products we are always listening. Your comments are welcome.**

**Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.**