

BEFORE STARTING THIS INSTALLATION PLEASE NOTE:

- Check all packing materials for contents before discarding any boxes or fillers.
- Inspect all components for physical damage prior to installation.
- Report any damaged or missing parts immediately.

Draft
03/11/21



For questions about the installation, please contact
Trans World Marketing customer service at 1-800-411-1617.

**NOTE: 2 PEOPLE ARE REQUIRED
FOR THE SAFE ASSEMBLY OF THIS DISPLAY**

Components

A	(1) OTR Upper Left
B	(2) OTR Lower Left & Right
C	(1) OTR Upper Right
D	(1) Fridge Upper Left
E	(1) Fridge Lower Left
F	(1) Fridge Upper Right
G	(1) Fridge Lower Right
H	(1) Left Foot
I	(1) Right Foot
J	(2) Back "L" Bracket
K	(2) MW Hanging Bracket
L	(1) MW Support Wire
AA	(1) Back Support Lower Left
BB	(2) Back Support Right (Upper & Lower)
CC	(1) Wood Panel Left
DD	(1) DW Panel Left
EE	(1) DW Panel Right
FF	(1) DW Counter Top
GG	(1) Bracket Holder Panel
HH	(1) Top Graphic Panel
II	(1) Back Splash Graphic Panel
JJ	(1) Header Side Panel - Left
KK	(1) Header Front Panel - Left
LL	(1) Header Side Panel - Right
MM	(1) Header Front Panel - Right

Hardware

(8)	1/4-20 x 5/8" Flat Head Screws
(6)	1/4-20 x 1-1/2" Machine Screws
(6)	1/4-20 Flanged Locknut
(28)	#10 x 5/8" Wood Screws
(14)	#10 x 1-1/4" Self Drilling Screws
(2)	#8 x 1-1/4" Self Drilling Screws
(10)	#8 x 1" Self Drilling Screws
(4)	#8 x 1/2" Sheet Metal Screws
(15)	Push In Clips
(3)	Rubber Plugs
Dish Washer Table Hardware:	
(6)	Assembly Brackets for DW Table
(36)	#8 x 5/8" Flat Head Wood Screws
(6)	Wood Dowels


Tools Required

Drill with #2 Philips Bit
#2 Philips Screw Driver
Hammer
Adjustable Wrench
Step Ladder
(may be needed to tighten MW bolts)













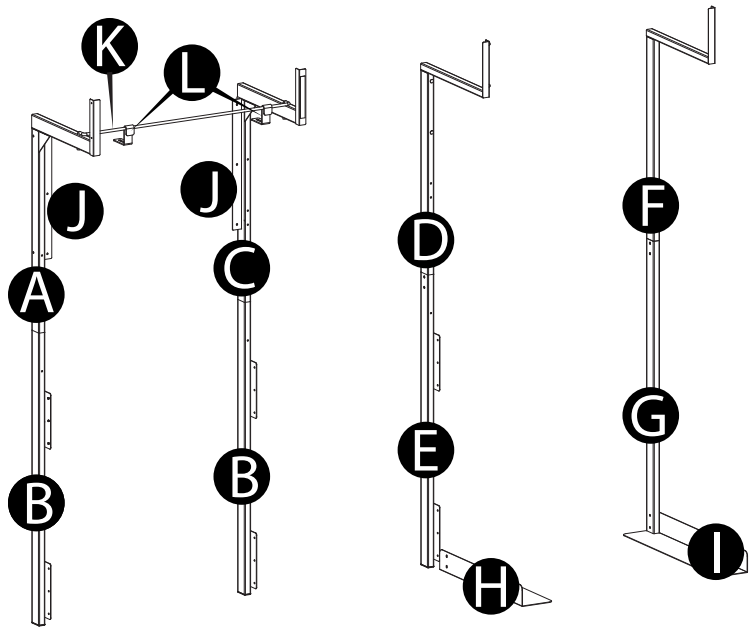



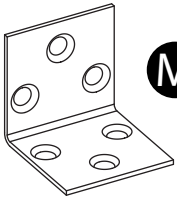
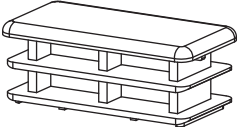

**PRODUCT IS TO BE TAKEN FROM STORE INVENTORY
(MODEL NUMBERS ARE SHOWN ABOVE)**



METAL COMPONENTS SHOWN WHEN ASSEMBLED

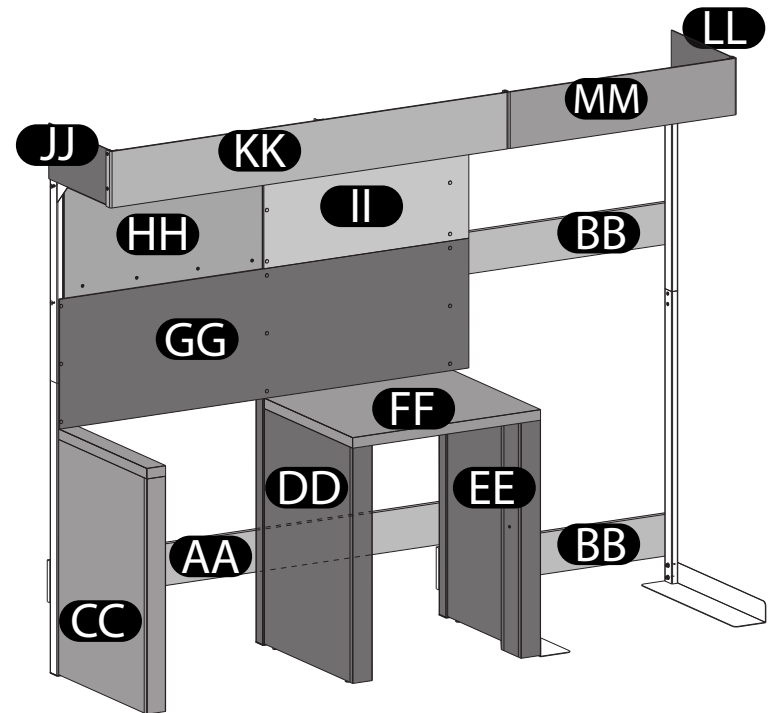

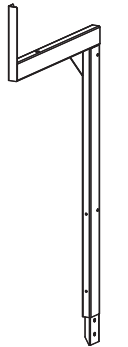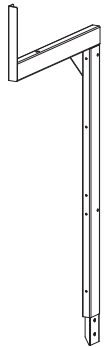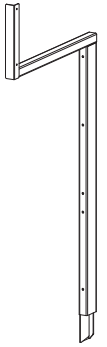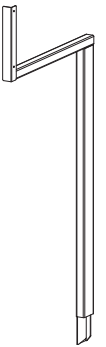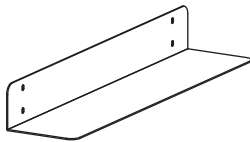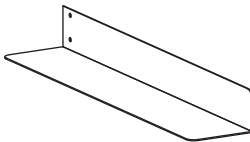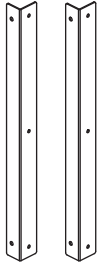
WOOD & GRAPHIC COMPONENTS SHOWN WHEN ASSEMBLED

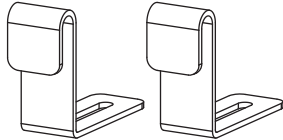

 <p>A OTR Upper Left</p>	 <p>C OTR Upper Right</p>	 <p>D Fridge Upper Left</p>	 <p>F Fridge Upper Right</p>	 <p>H Left Foot</p>	 <p>I Right Foot</p>	 <p>J Back "L" Bracket (2 Req'd)</p>	
 <p>B OTR Lower Left & Right</p>	 <p>B OTR Lower Left & Right</p>	 <p>E Fridge Lower Left</p>	 <p>G Fridge Lower Right</p>	 <p>K Micro Wave Hanging Bracket (2 Req'd)</p>  <p>L Micro Wave Support Wire</p>		 <p>M Assembly Bracket For Dish Washer Table (6 Req'd)</p>	 <p>N Rubber Plug (3 Req'd)</p>
				 <p>O Wood Dowel For Dish Washer Table (6 Req'd)</p>			

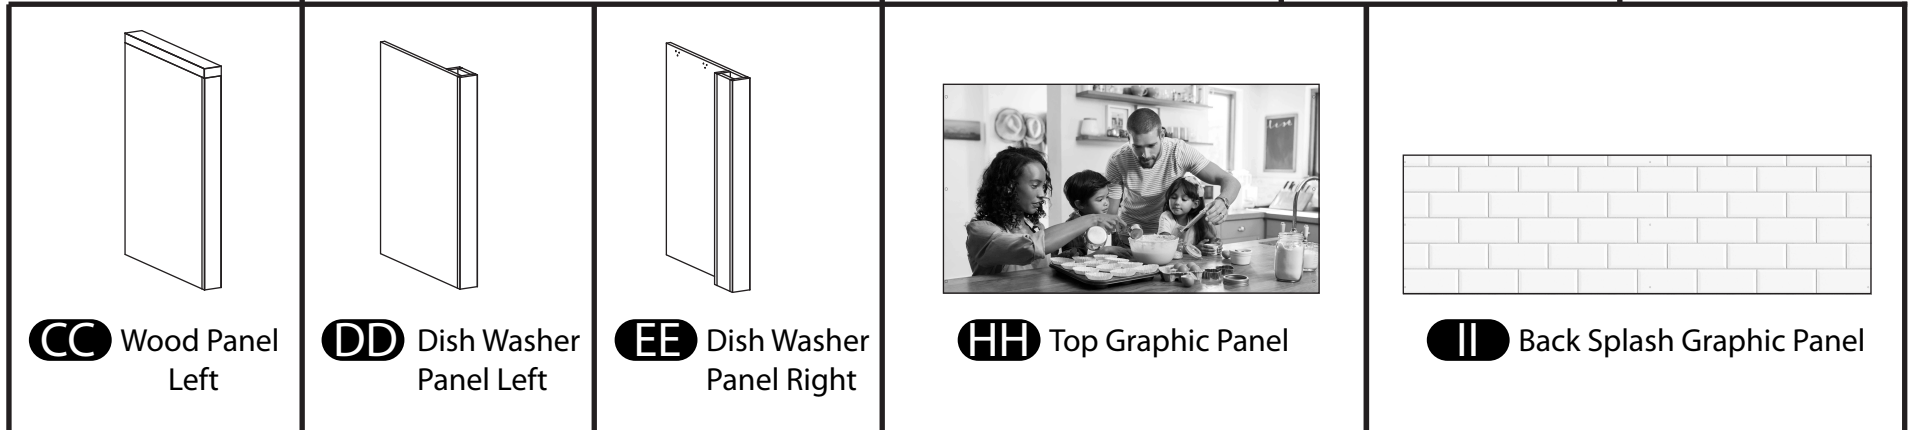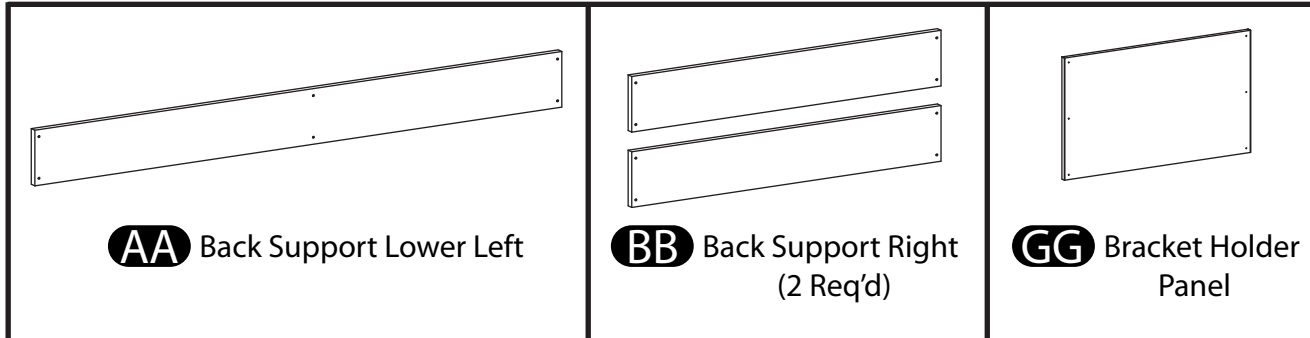


HEADER COMPONENTS

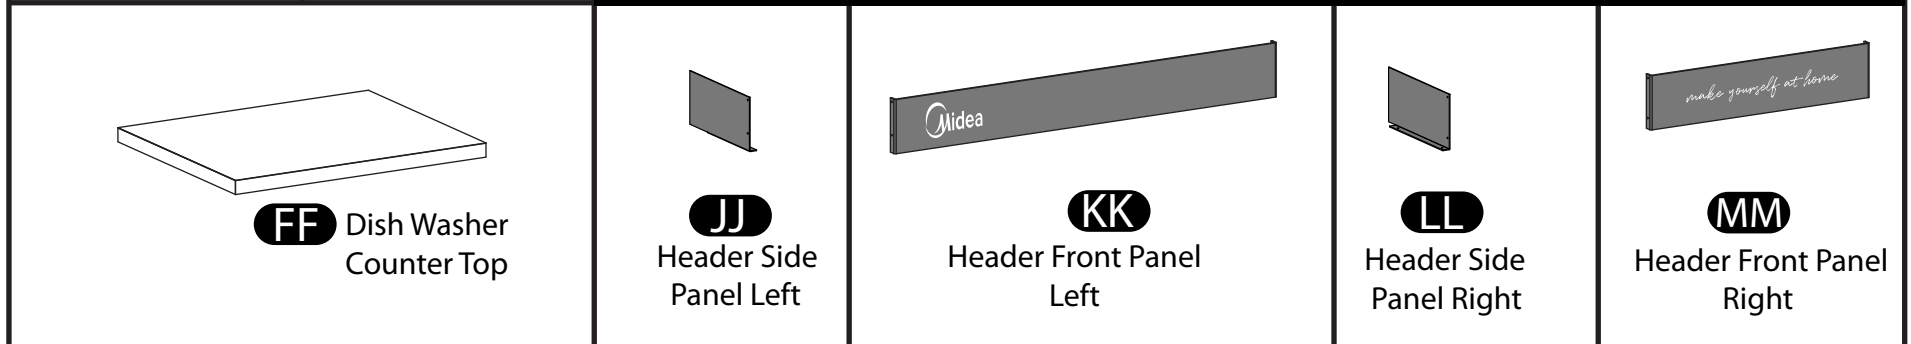


STEP 1 - ASSEMBLE THE FOUR UPPER & LOWER UPRIGHTS

- Using (2) 1/4-20 x 5/8" Flat Head Screws per assembly attach parts: **A** TO **B**

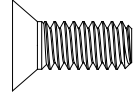


- C** TO **B**
- D** TO **E**
- F** TO **G**

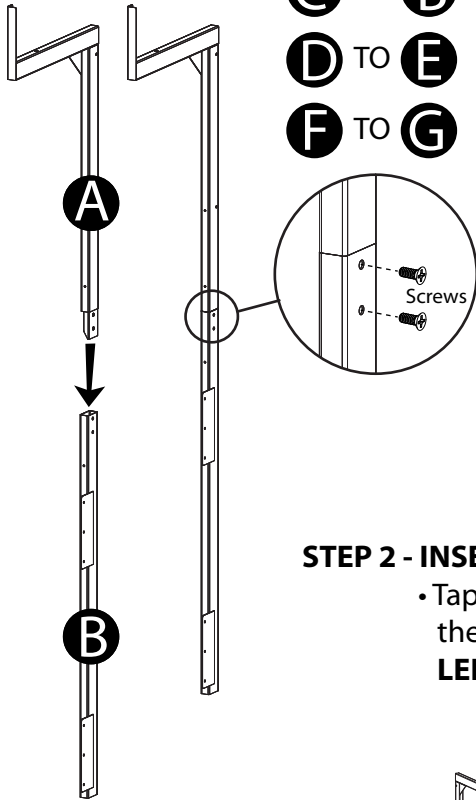

STEP 2 - INSERT THE RUBBER PLUGS



- Tap a black rubber plug into the bottom of each of the three **LEFT** side upright assemblies.

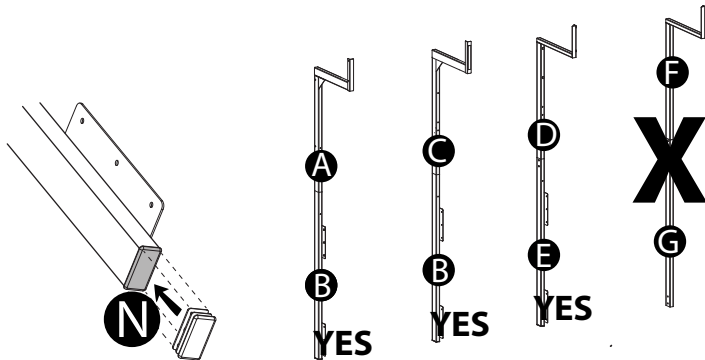

STEP 3 - ATTACH THE BACK "L" BRACKETS TO THE TWO LEFT UPRIGHT ASSEMBLIES

Note: There are (2) Back "L" brackets used in this display.

- Using (2) 1/4-20 x 1-1/2" Machine Screws and (2) flanged lock nuts attach part **J** to upright assembly **A&B**

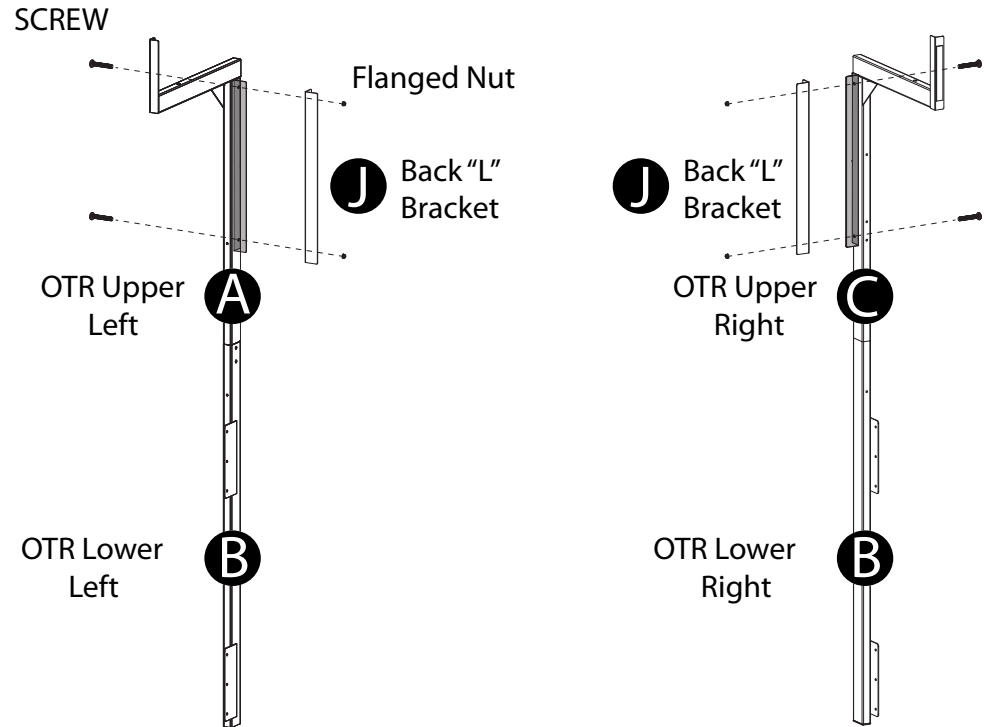
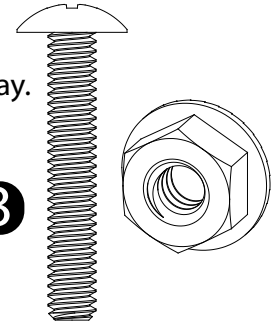


- Using (2) 1/4-20 x 1-1/2" Machine Screws and (2) flanged lock nuts, attach part **J** to upright assembly **C&B**

STEP 4 - ATTACH THE LEFT WOOD PANEL TO UPRIGHT ASSEMBLY

CC
A&B



- Using (6) #10 X 5/8" Wood Screws as shown below.

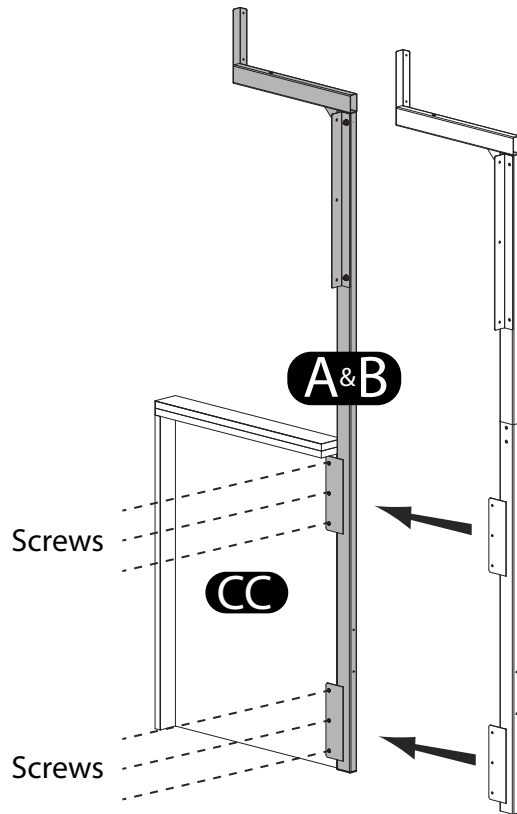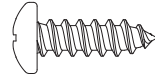

STEP 5 - ATTACH THE BACK SUPPORT LOWER LEFT TO UPRIGHT ASSEMBLIES

AA
AB & BC & DE

- Using (6) #10 X 1-1/4" Self Drilling Screws as shown below.

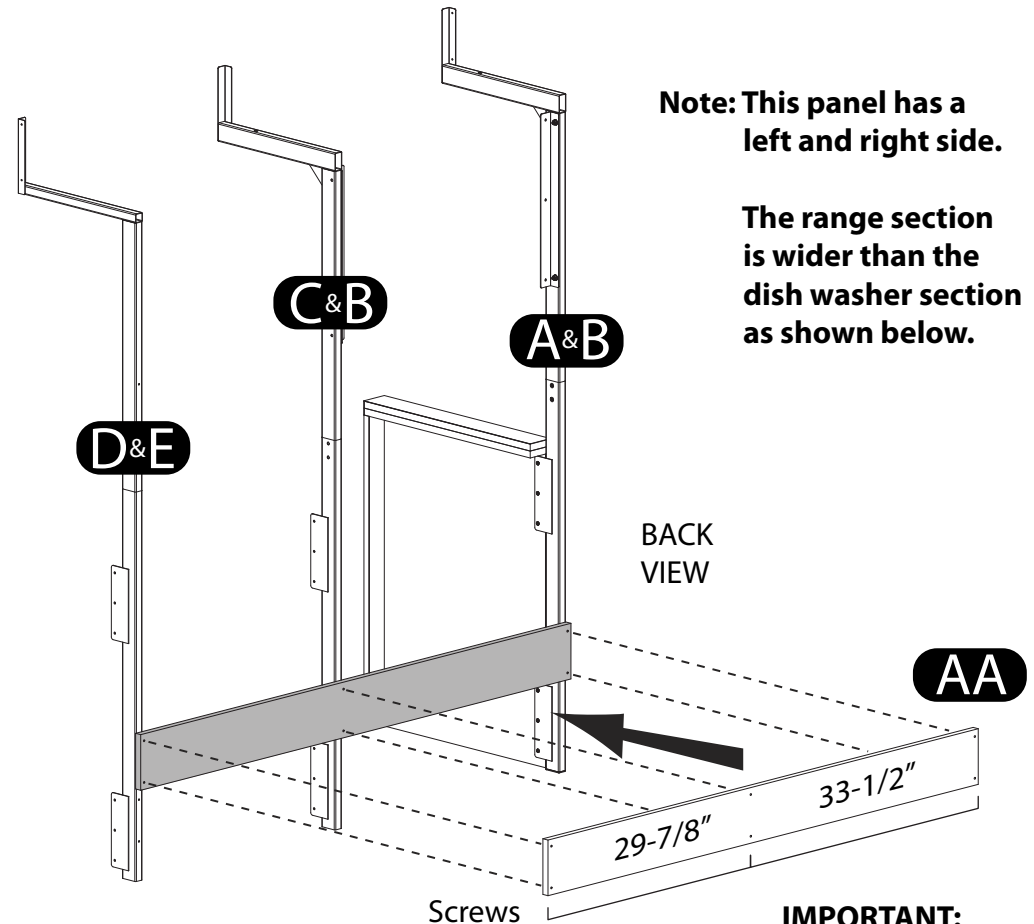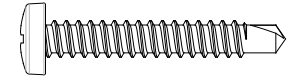

Note: This panel has a left and right side.


The range section is wider than the dish washer section as shown below.

**IMPORTANT:
Note hole spacing.**

STEP 6 - ATTACH THE RIGHT FOOT TO UPRIGHT ASSEMBLY **I**

F&G

- Using (2) 1/4-20 X 1-1/2" Machine Screws and (2) Flanged Nuts as shown below.

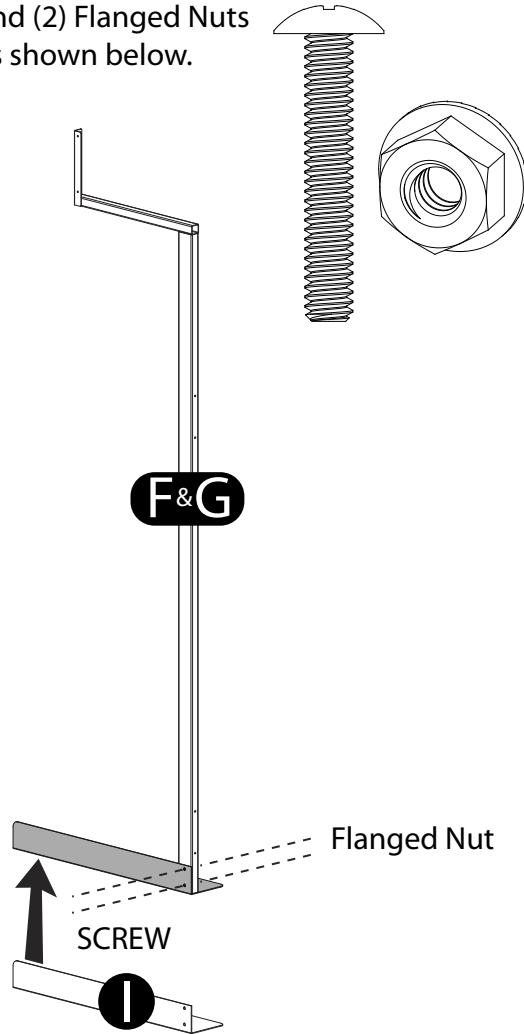


STEP 7 - ATTACH THE (2) BACK SUPPORTS TO UPRIGHT ASSEMBLIES **B&B**

F&G

D&E

- Using (4) #10 X 1-1/4" Self Drilling Screws attach each support to the assembly as shown below.


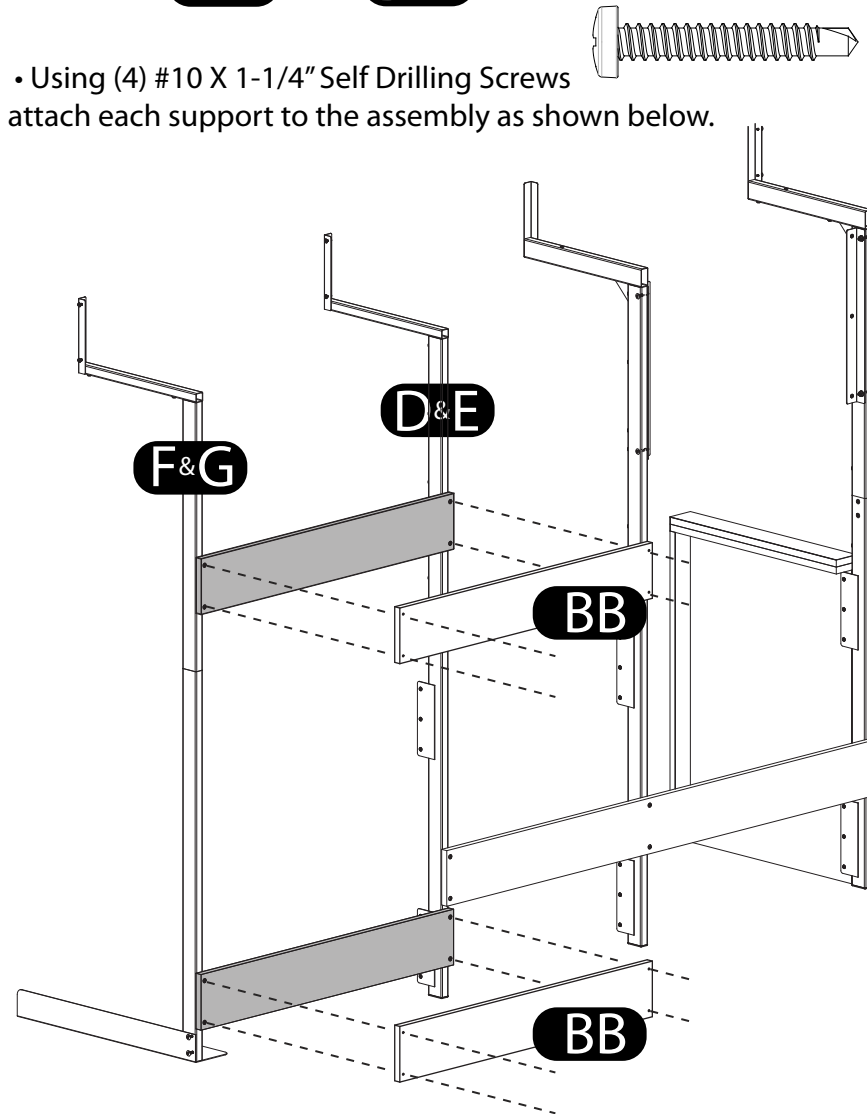


ASSEMBLE THE DISH WASHER TABLE

STEP 8 - ATTACH THE LEFT FOOT **H**



TO DW PANEL RIGHT **EE**

- Using (4) #10 x 5/8" Wood Screws attach the foot to the panel.

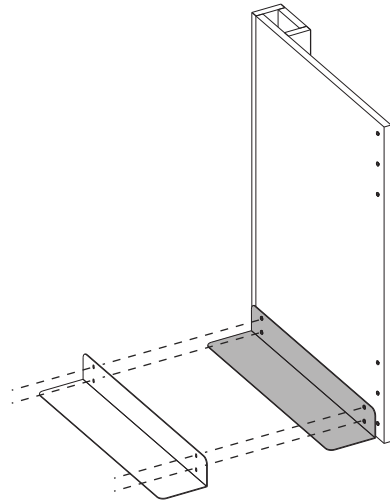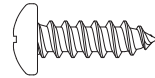


STEP 9 - ATTACH (3) ASSEMBLY BRACKETS **M** TO EACH OF THE DW SIDE PANELS

- Using (3) #8 X 5/8" flat head Wood Screws, attach each Bracket to the Side Panels as shown below.

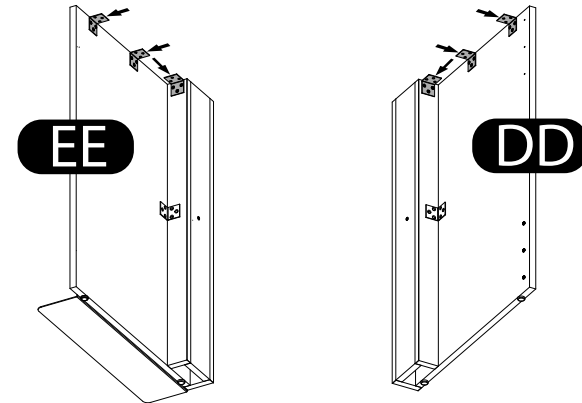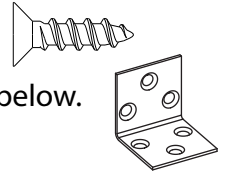


STEP 10 - ATTACH THE DISH WASHER TOP **FF** TO THE TWO SIDE PANELS

- Tap (3) Wood Dowels into each Side Panel.
- Line up and secure the Top onto the side panels using the Wood Dowels. Make sure the Top is fully seated on each Side.

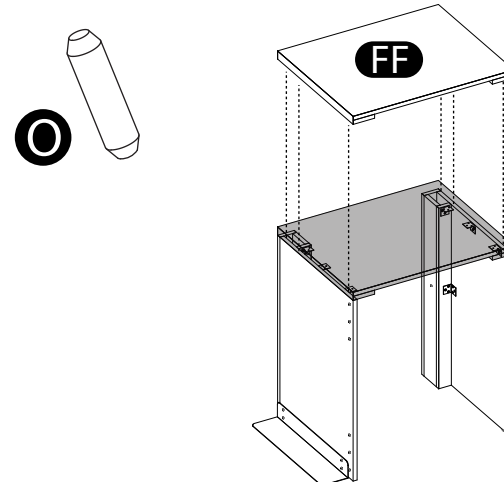


STEP 11 - ATTACH THE (6) ASSEMBLY BRACKETS TO THE DW TOP

- Using (3) #8 X 5/8" flat head Wood Screws per bracket, attach each to the DW Top as shown below.


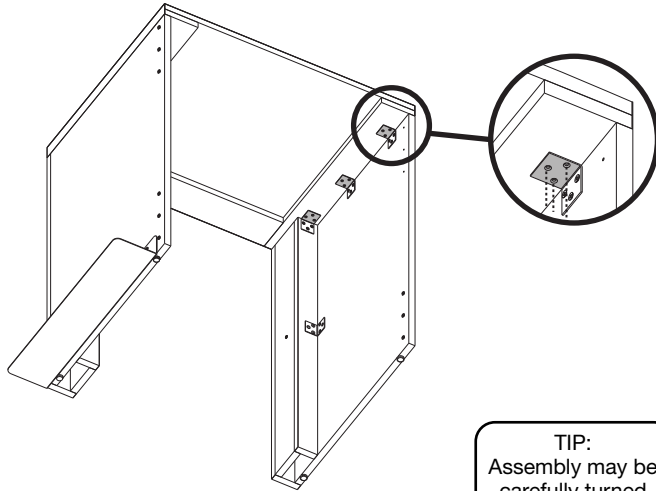


TIP:
Assembly may be carefully turned upside down for easier installation.

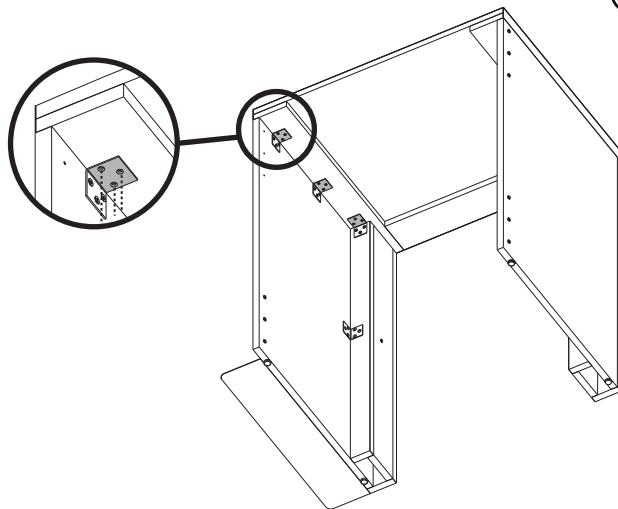


STEP 12 - ATTACH THE DW TABLE TO THE DISPLAY FRAME

- Slide the Table between the four brackets on the upright assemblies.
- Make sure the Table is against the steel uprights.
- Using (3) #10 X 5/8" Wood Screws per bracket, attach each to the Dish Washer Table as shown below.

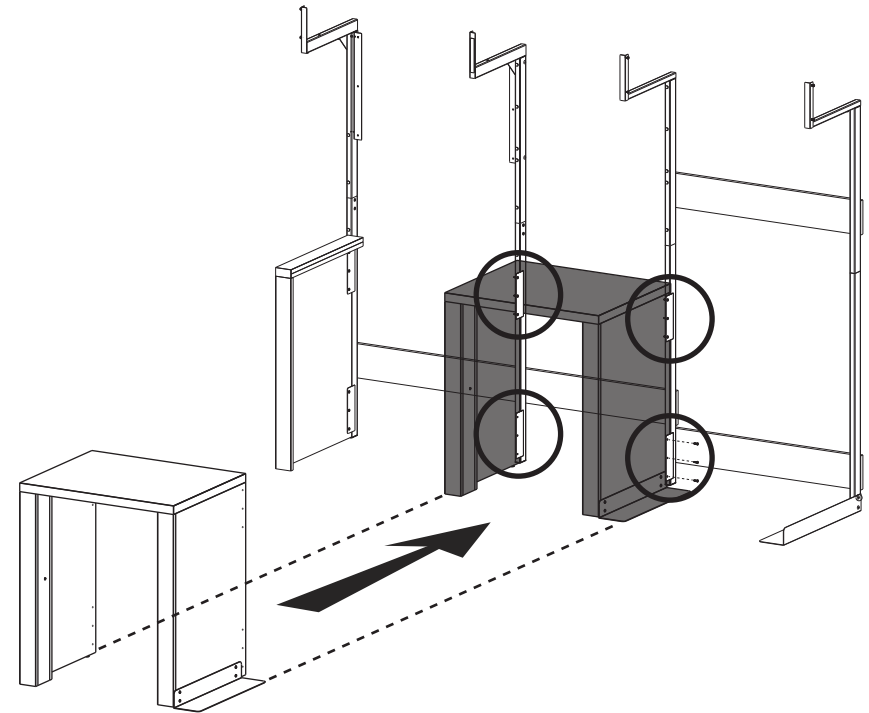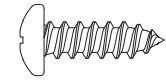




STEP 13 - ATTACH THE BRACKET HOLDER PANEL TO THE DISPLAY FRAME

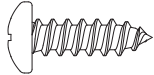- Using (6) #10 X 5/8 Wood Screws 

attach the Bracket Holder Panel to the "L" Brackets from the back of the Uprights.

**Note: This panel has a top and bottom side,
as well as a front and back face.**



**There are (4) pilot holes which should
FACE OUT and be on the BOTTOM
when assembled.**

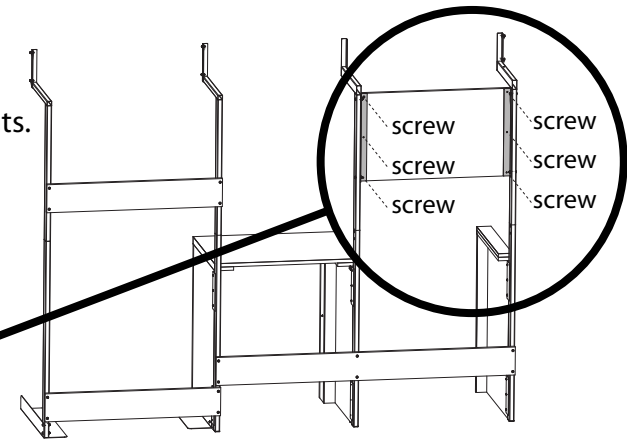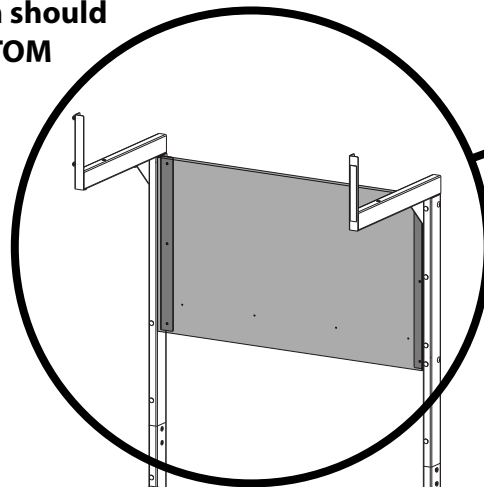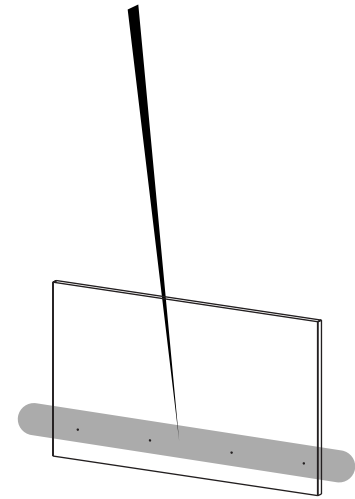

VIEW FROM THE REAR

STEP 14 - ATTACH THE TOP GRAPHIC PANEL TO THE DISPLAY FRAME

- Using (6) White Plastic Push In Clips, attach the Top Graphic Panel to the Frame Assembly.

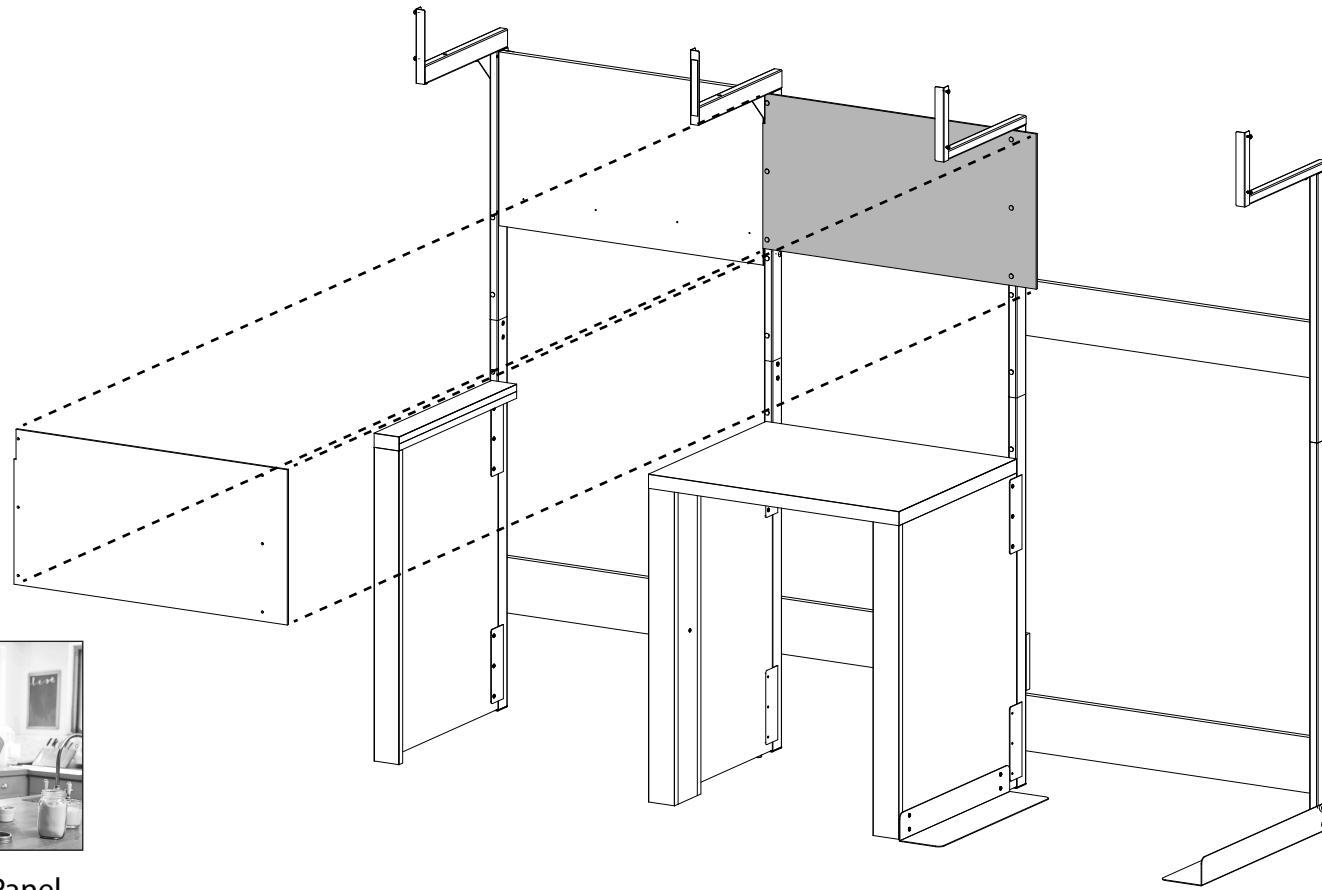
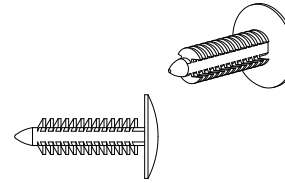


 Top Graphic Panel


STEP 15 - ATTACH THE BACK SPLASH GRAPHIC PANEL TO THE DISPLAY FRAME

- Using (9) White Plastic Push In Clips, attach the Back Splash Graphic Panel to the Frame Assembly.

NOTE: THIS PANEL HAS A TOP & BOTTOM AS SHOWN BELOW.

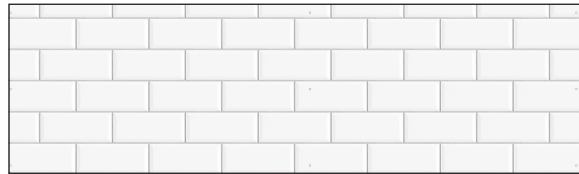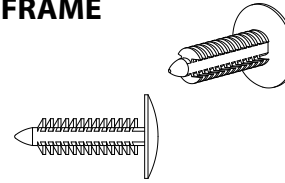


 Back Splash Graphic Panel

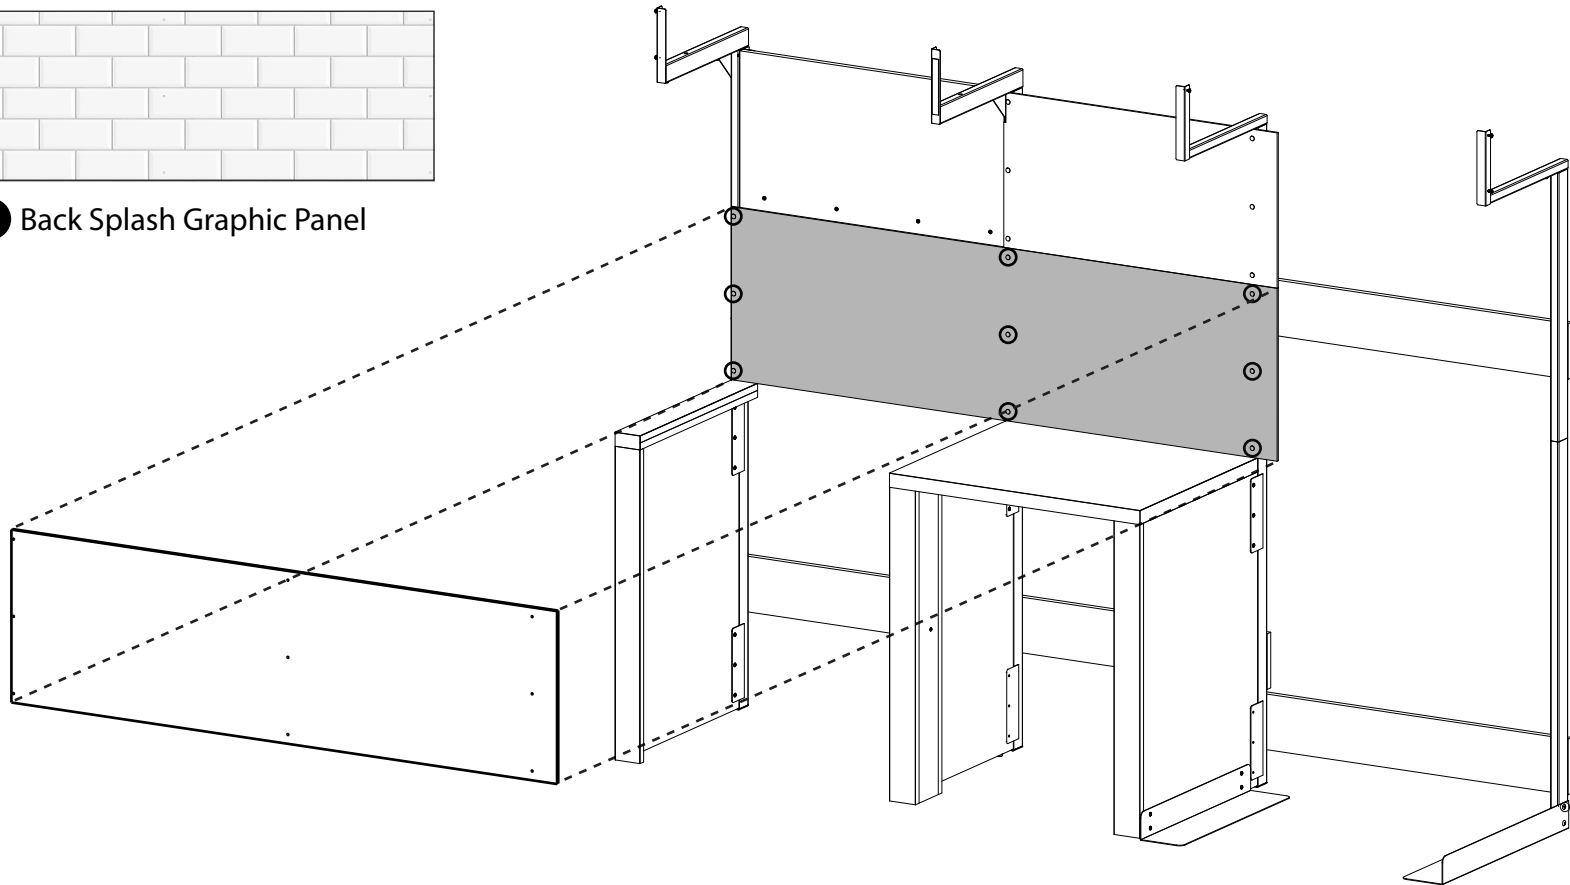

STEP 16 - INSTALL THE MICROWAVE SUPPORT WIRE INTO THE UPRIGHT FRAME


- Insert the wire into the holes on the top of the left side Upright Frames.

Note: The wire has a front and back as shown below.

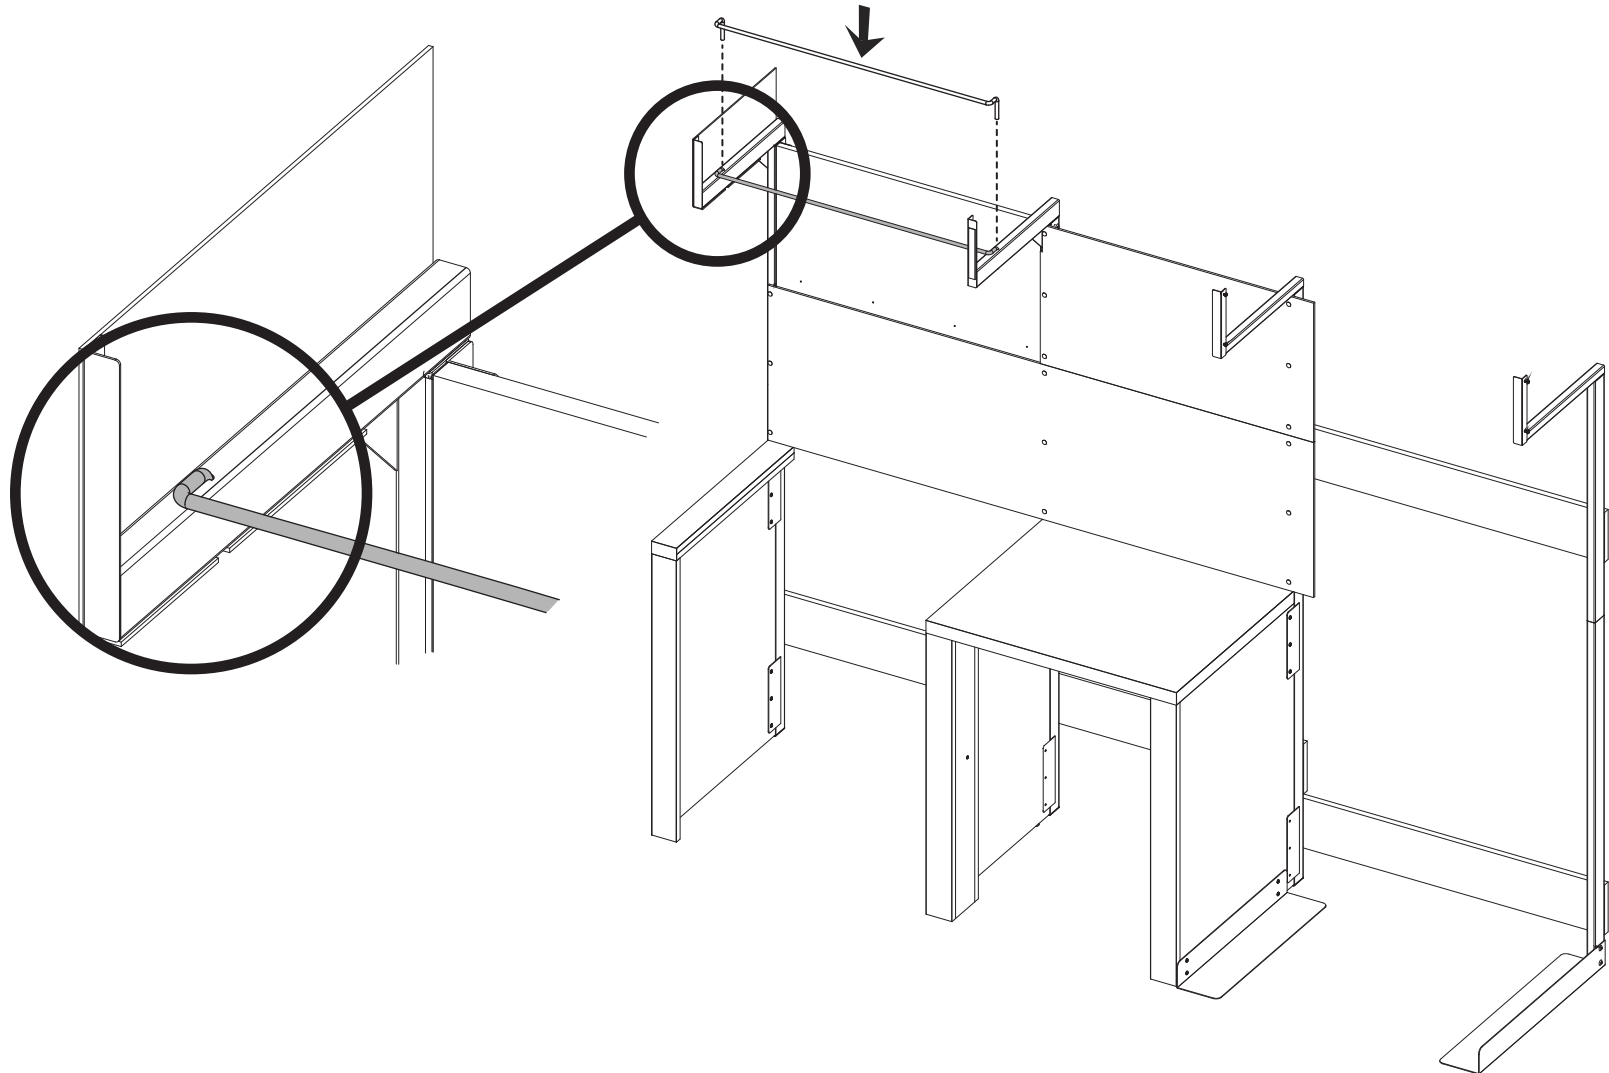

STEP 17 - INSTALL THE MICROWAVE MOUNTING BRACKET ONTO THE BRACKET HOLDER PANEL

- Using (4) #8 x 1/2 sheet metal screws, attach the mounting bracket which comes with the MicroWave to the Bracket Holder Panel.

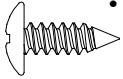


NOTE: FOLLOW THE MANUFACTURERS INSTRUCTIONS FOR THE PROPER INSTALLATION OF THIS BRACKET.




Note: Look for bracket holes marked "A", "B", "C" & "D" as shown in the photo.

**If the bracket is not marked:
When attaching make sure to
center the bracket over the
range space as much as possible.**

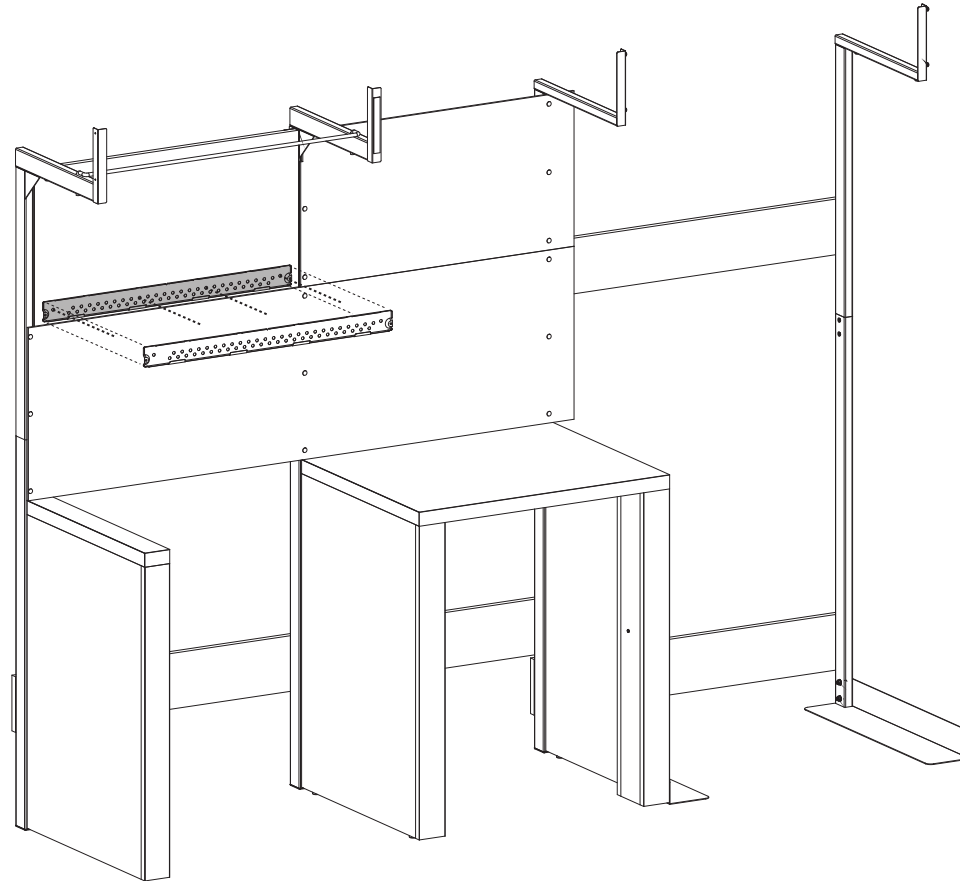

STEP 18 - INSTALL THE (2) HANGING BRACKETS ONTO THE MICROWAVE



- The MicroWave is to be taken from the store inventory.
- Included with the MicroWave are the bolts for attaching the Hanging Brackets.
- Attach the Brackets as shown below, leaving the screws slightly loose. They will be tightened once the MicroWave is hung on the unit.

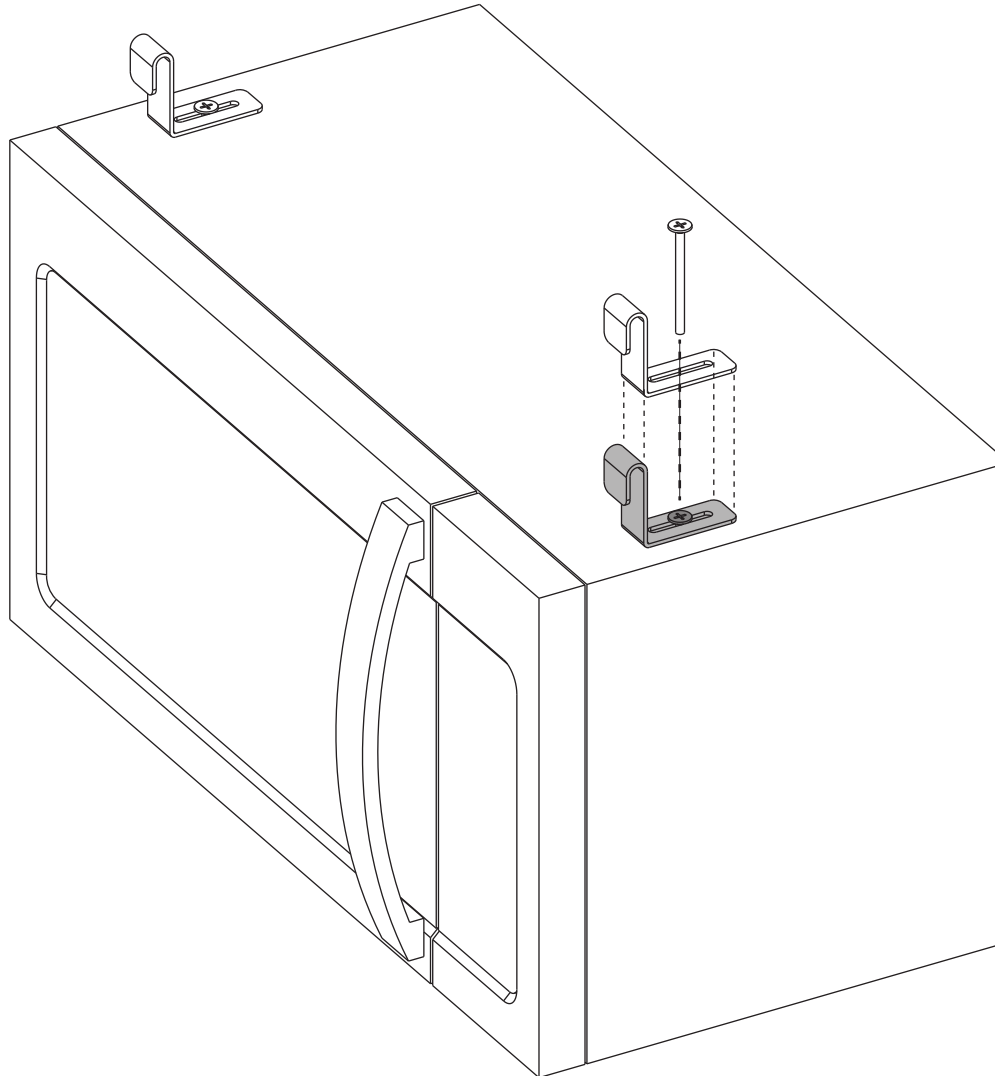

STEP 19 - INSTALL THE MICROWAVE

- Hang the MicroWave onto the Support Wire.
- The back of the MicroWave should sit on the Mounting Bracket, hooking into the oven at the back using the **PRONGS** on the Bracket.

NOTE: TWO PEOPLE ARE REQUIRED FOR THIS PART OF THE ASSEMBLY.
Refer to the manufacturer's instructions to safely install the microwave.

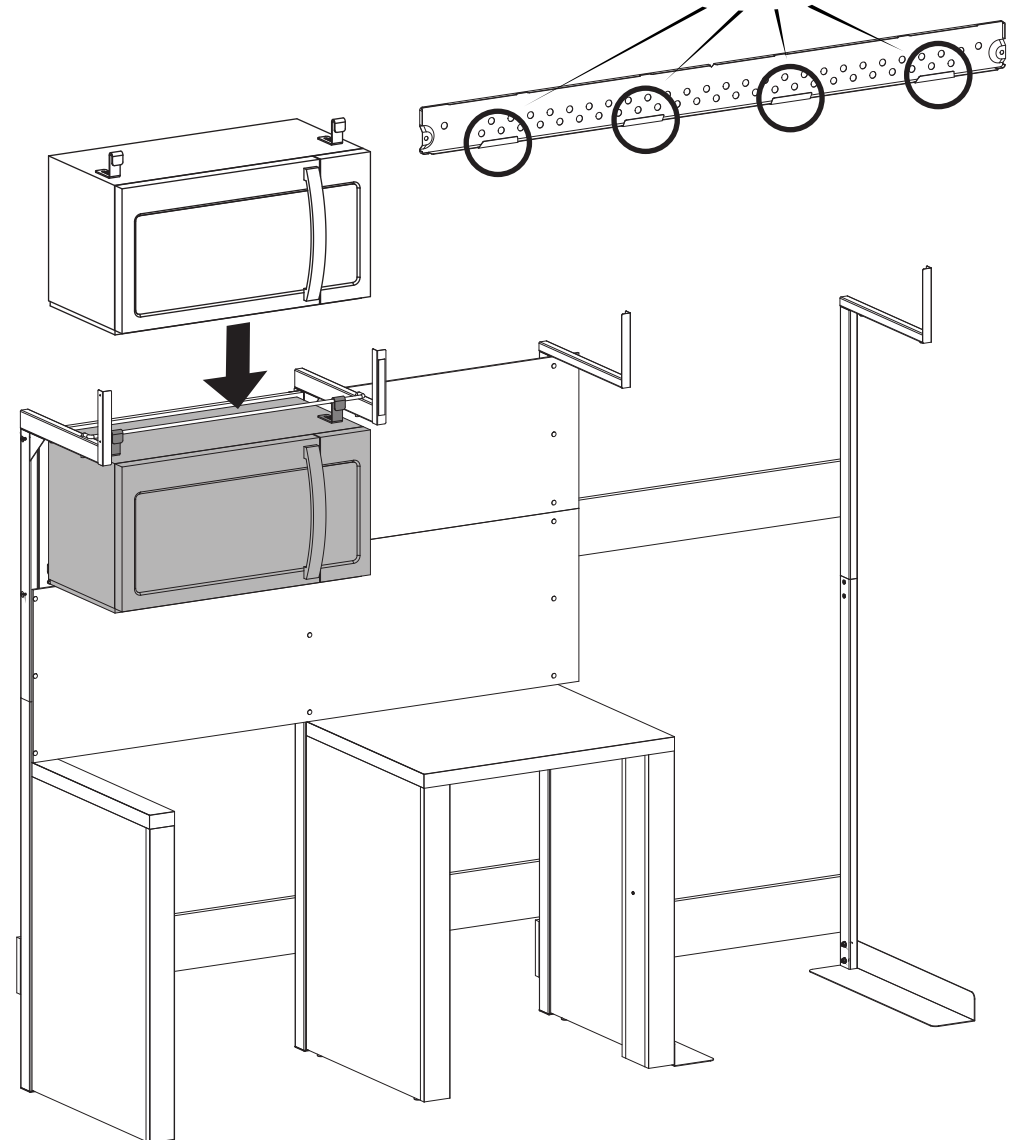
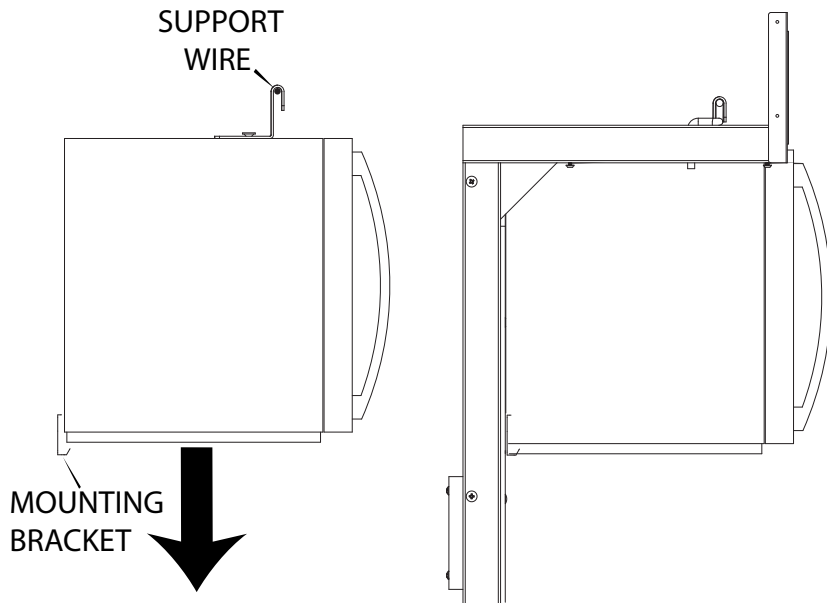


STEP 20 - TIGHTEN HANGING BRACKET BOLTS.

- When the MicroWave is properly installed on the Mounting Bracket, tighten the Hanging Bracket bolts.





STEP 21 - INSTALL THE LEFT HEADER SIDE PANEL ONTO THE UPRIGHT FRAME

- Using (2) #8 x 1 self drilling screws, attach the side panel from the bottom as shown below.

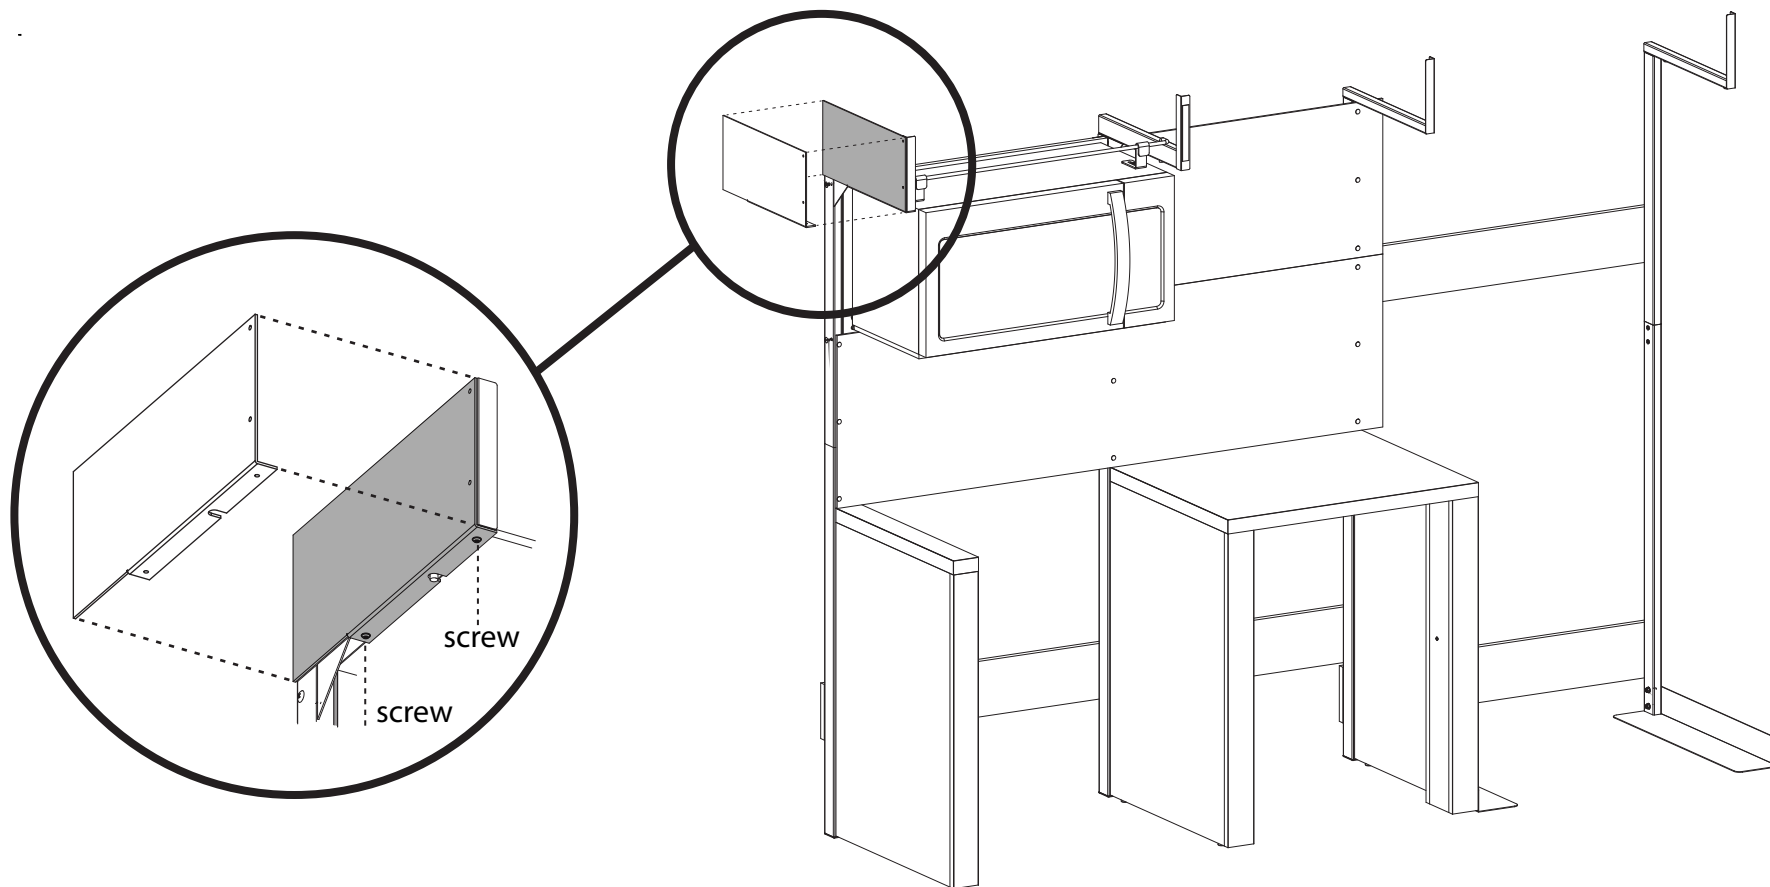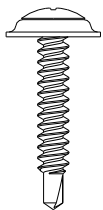



STEP 22 - INSTALL THE RIGHT HEADER SIDE PANEL **LL** ONTO THE UPRIGHT FRAME

- Using (2) #8 x 1 self drilling screws, attach the side panel from the bottom as shown below.

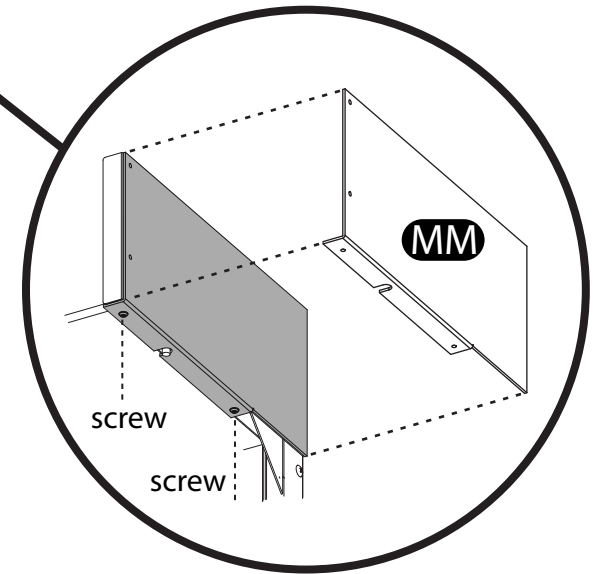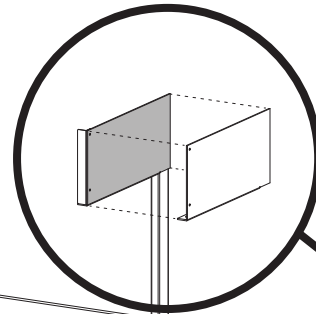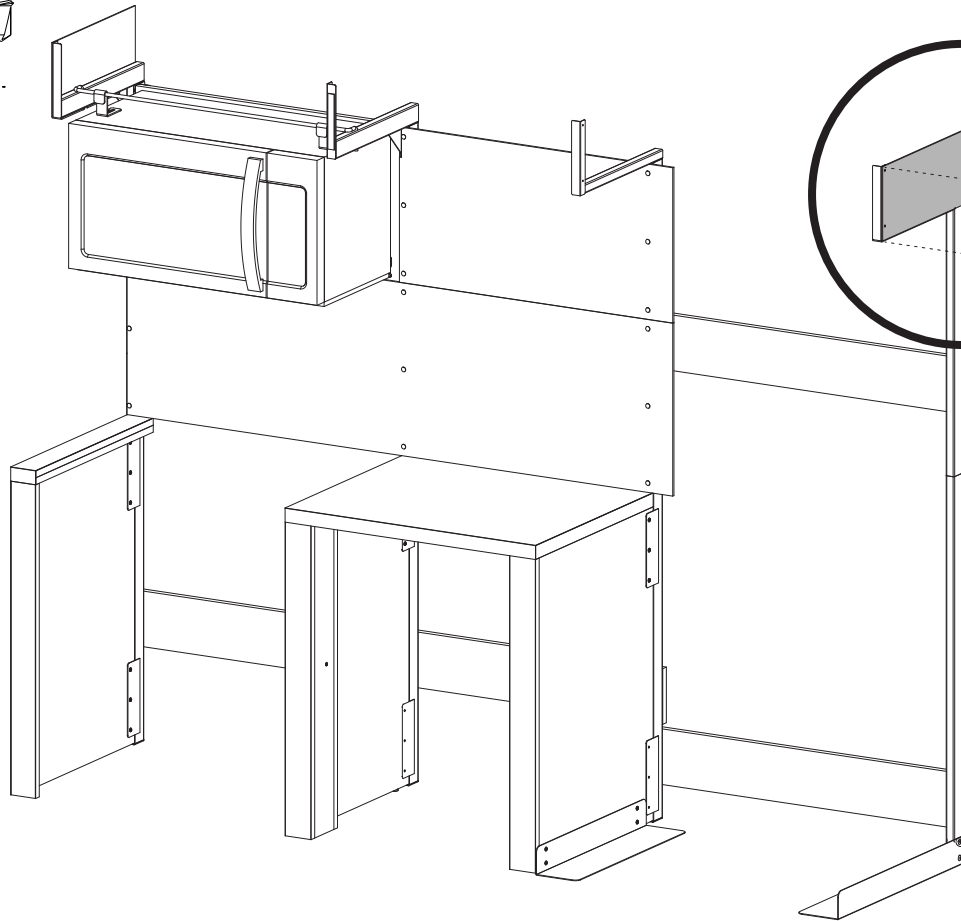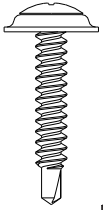



STEP 23 - INSTALL THE LEFT HEADER FRONT PANEL **KK** ONTO THE UPRIGHT FRAME

- Using (2) #8 x 1 self drilling screws, attach the Header panel to the left side as shown below.

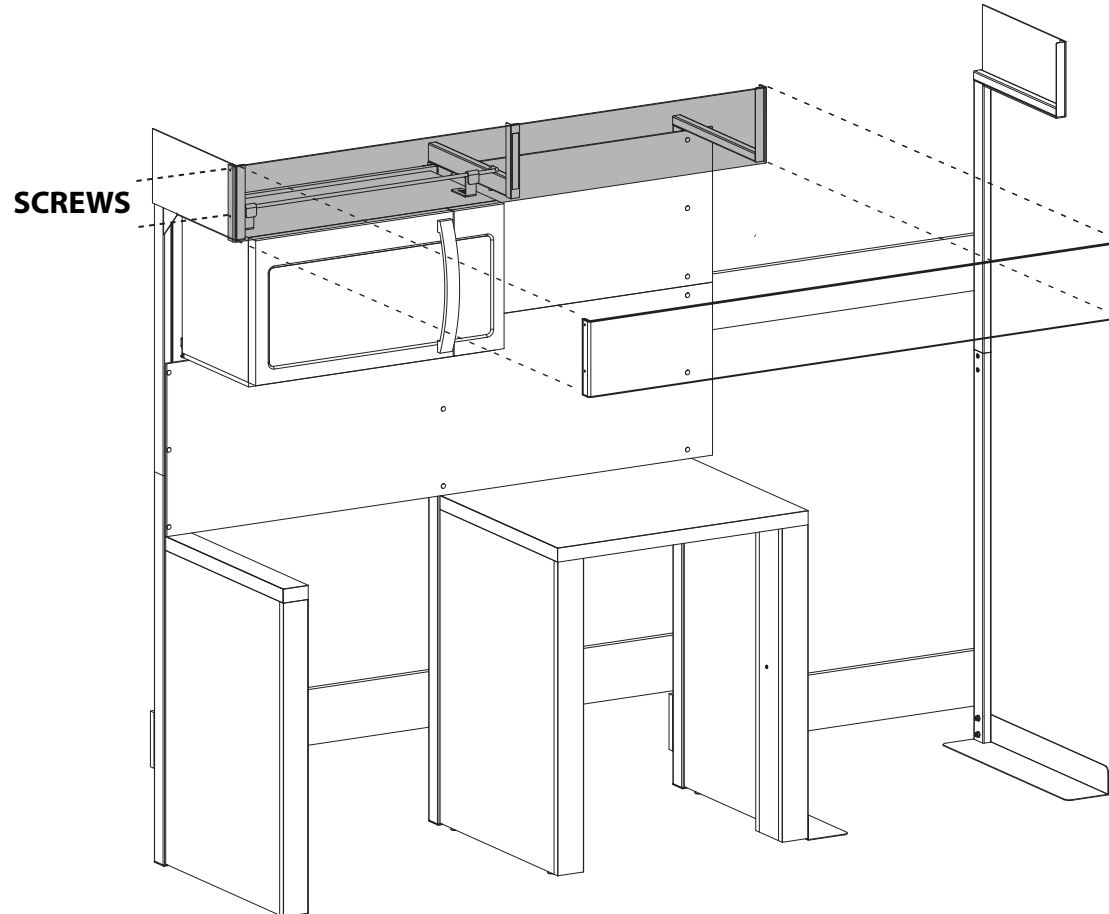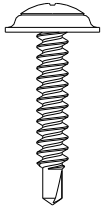

STEP 24 - INSTALL THE RIGHT HEADER FRONT PANEL **MM** ONTO THE UPRIGHT FRAME

- Using (4) #8 x 1 drilling screws, attach the Header panel as shown below.

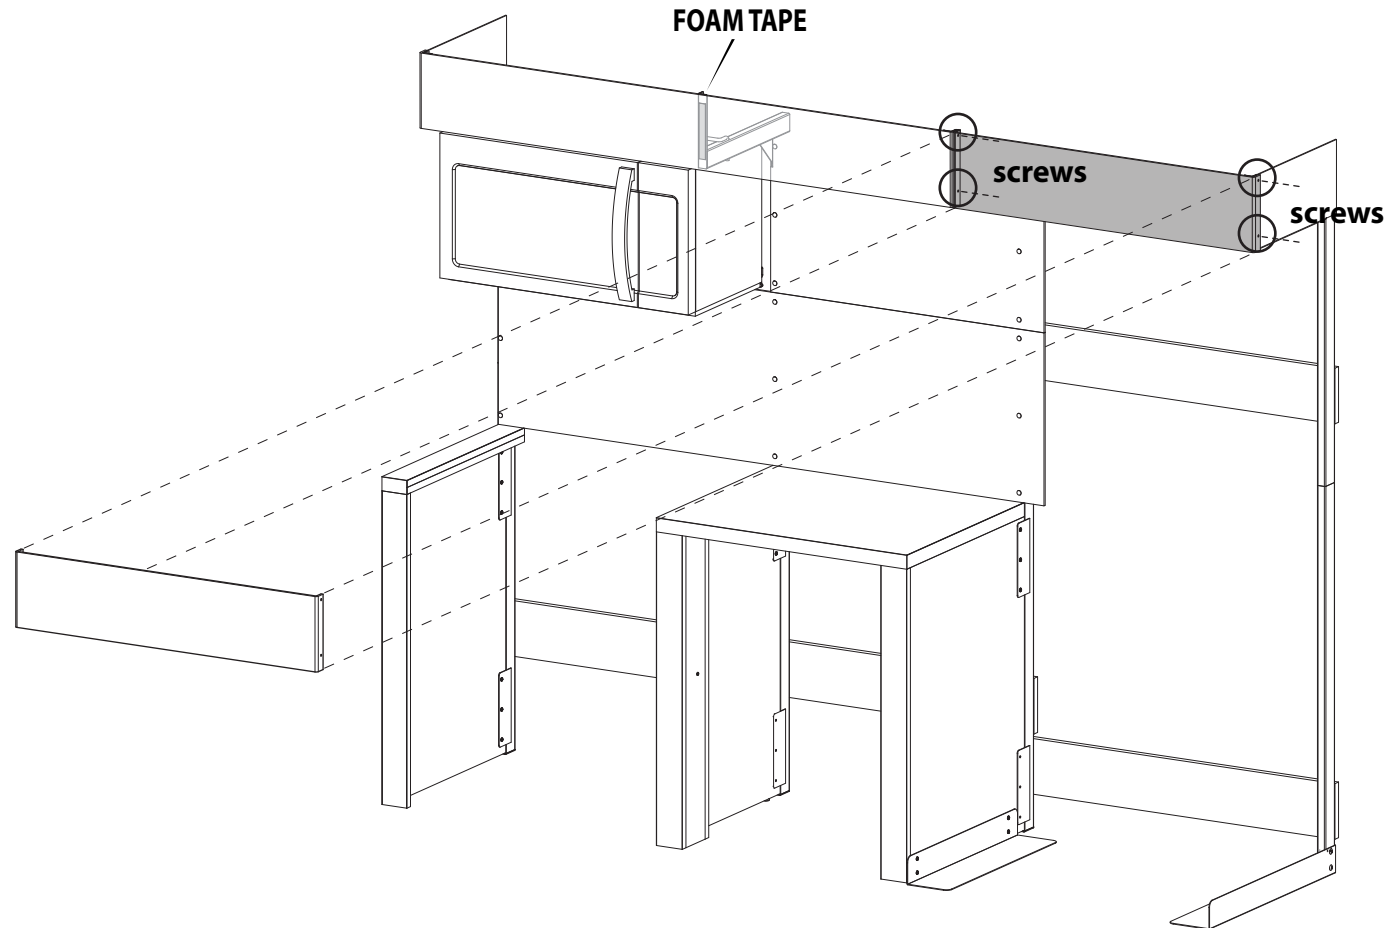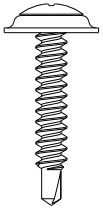


STEP 25 - APPLY THE LEFT FRONT PANEL TO THE FOAMTAPE ON THE UPRIGHT FRAME

- Peel the release film off of the foam tape on the Upright (behind the center of the panel).
- Press on the panel to attach it to the foam tape.


STEP 26 - POSITION THE APPLIANCES

- Slide the Range, Dish Washer, and the Refrigerator into the display until each is slightly in front of the rear wall.

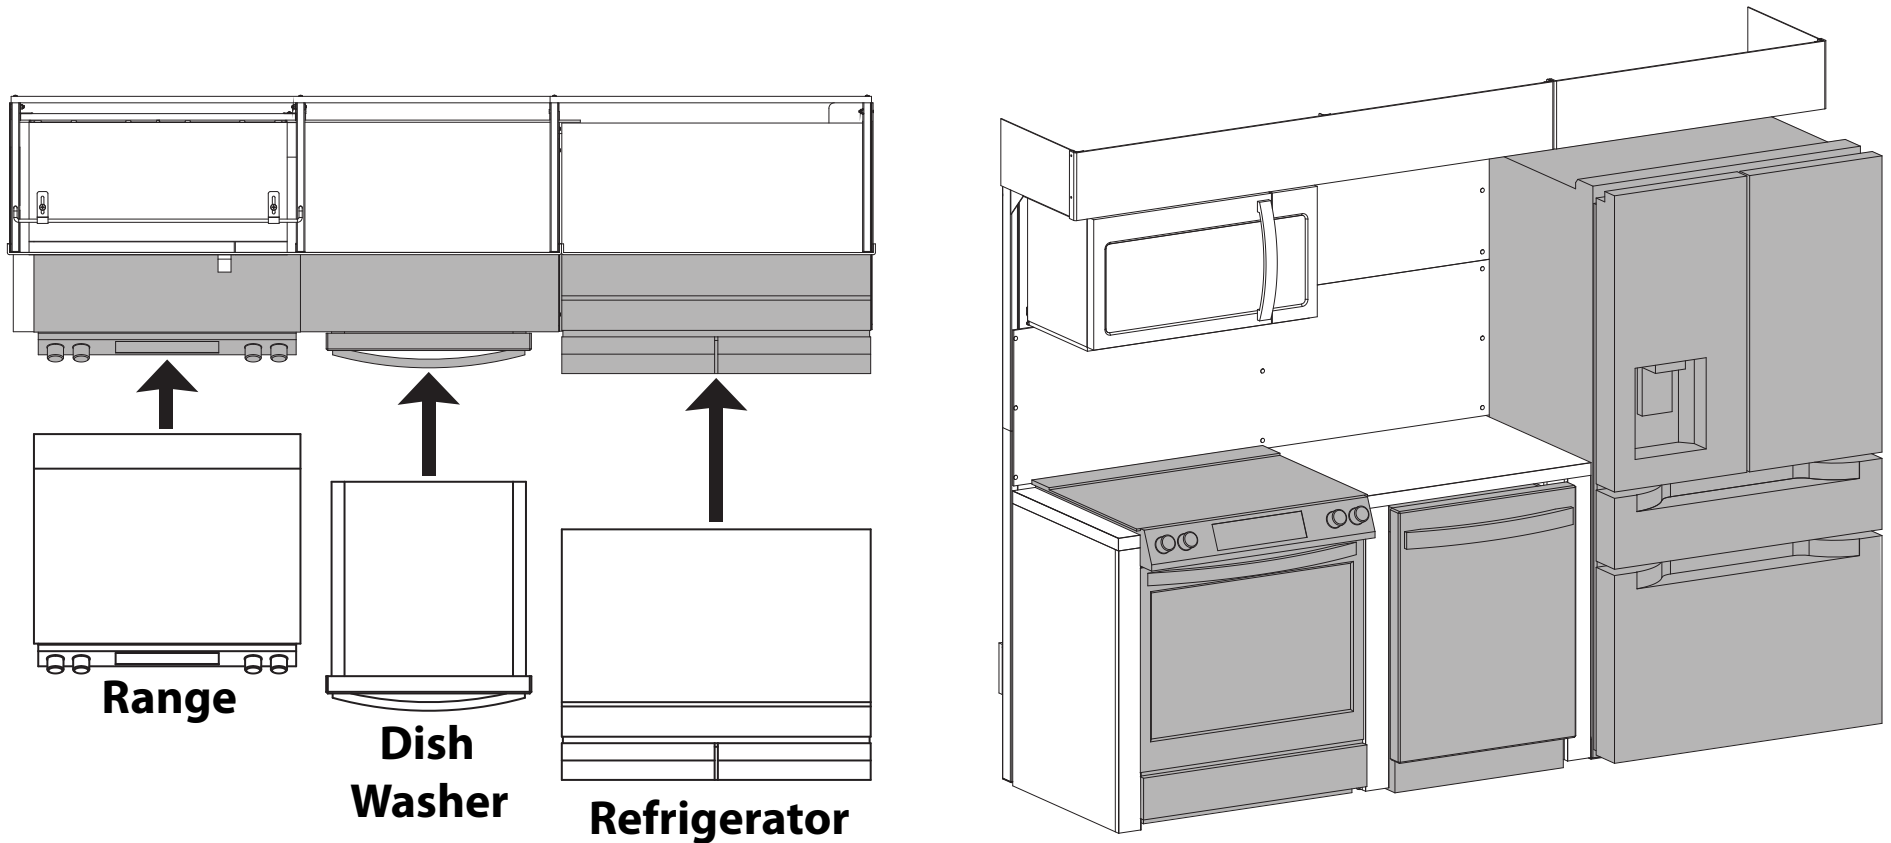

STEP 27 - SECURE THE DISHWASHER TO THE DISHWASHER TABLE

- Open the dishwasher door. Remove the plastic tub caps from the inside of the dishwasher tub (one on each side).
- Drive (2) #8 x 1-1/4" self drilling screws through the holes in the sides of the dishwasher into the adjacent table.
 IMPORTANT: Drive the screws straight and flush. Protruding screw heads will scratch the side of the dishwasher.
- Reinsert the plastic tub caps.

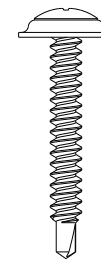

Refer to the manufacturer's instructions for your specific dishwasher model.

