

NONSTOP™


Station 

**Setup &
Usage Guide**




Front

- ① Time Display
- ② PM Indicator
- ③ Alarm Indicator
- ④ USB CHARGING PORT (1A)
- ⑤ USB CHARGING PORT (2.4A)

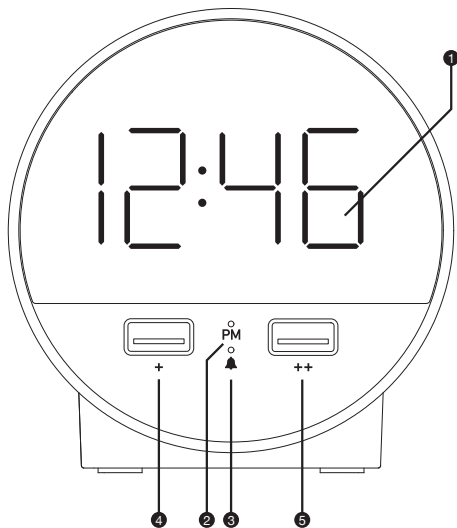

Interface & Ports

- ⑥ SNOOZE button
- ⑦ DIMMER button
- ⑧ ALARM ON-OFF button
- ⑨ ALARM HR set button
- ⑩ ALARM MIN set button
- ⑪ DC Power In
- ⑫ Port Security Cover

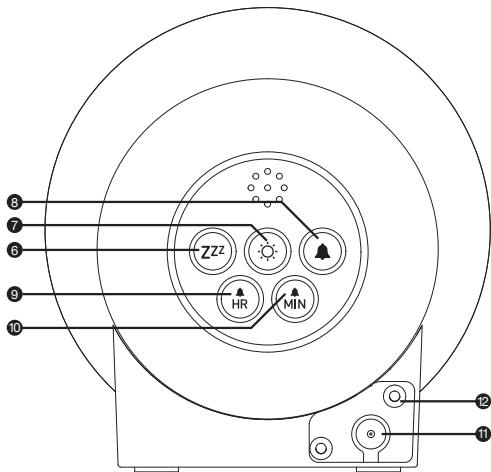

Specifications

Power	DC 5V 3A Adapter
AC Power Supply	100-240V ~ 50/60Hz 0.5A
USB Charging Ports	1A / 2.4A

Installation

Insert the small end of the AC/DC adapter into the DC IN Jack (located on the back of the unit).

Plug the other end into a wall outlet (100~240 V AC).

When the device is ON, the time display will turn on. Press both "SNOOZE" and "ALARM" together to set the time and date.

If desired, connect the security tether to the security socket on the back of Station O, the Port Security Cover can be fastened over the ports by inserting into the tab on the back of Station O and then secured with a two screws.

Setting Time, Date & Auto-DST

1. On the back of the clock, press both "SNOOZE" and "ALARM" together to enter time setting mode. Press the HR/MIN button to set the hours/minutes. (You can tap or hold down to change the time faster). As you cycle through, the hours will change from AM to PM.
2. Press "SNOOZE" button to confirm the time and enter year setting mode. The display will begin flashing "20." Press the HR /MIN button to set the year.
3. Press "SNOOZE" button to enter date setting mode. The display will begin flashing "1/1." Press HR to set the month and press MIN to set the day.
4. Press "SNOOZE" button again to confirm the date and enter the Auto-DST set mode.
5. Press the HR /MIN button to change the Auto-DST "ON"/"OFF"
6. Press "SNOOZE" button to confirm the Auto-DST setting and exit the setting mode.

NOTE: Auto-DST by default will ship as "ON".

Setting the Alarm

To set the alarm time, press the HR button and MIN button to change the alarm time.

Press the ALARM button to turn the alarm ON/OFF. When the alarm is on, the ▲ LED will be lit.

Using the Alarm

To snooze, tap the SNOOZE button. The Alarm will sounds again after 9 minutes. While the alarm is being snoozed, the Alarm indicator LED will flash

To STOP Alarm, press any button (except the SNOOZE button). To set the ALARM to sound again the next day, press the alarm button to turn the alarm "ON".

Display

There are three (3) levels of display brightness. Repeatedly press the DIMMER button to select the desired setting.

USB Charging

The Station O features dual USB charging ports (1A/2.4A) on the front of the unit which are designed to charge most USB compatible devices. Simply plug in a USB cable into the USB port then connect your device to begin charging.

SAFETY PRECAUTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

1. Read these instructions.
 2. Keep these instructions.
 3. Heed all warnings.
 4. Follow all instructions.
 5. Do not use this apparatus near water.
 6. Clean only with a dry cloth.
 7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 9. Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 11. Only use attachments/accessories specified by the manufacturer
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 13. SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.
 - a. Do not expose this unit or the AC/DC adaptor to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adaptor.
 - b. To ensure that this unit is completely disconnected, unplug it from the wall.
 - c. Ensure that the AC/DC adaptor is easily accessible.
 - d. Please note the information printed underneath the unit.
 - e. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
 - f. Keep open flames, such as lighted candles, away from this unit.
 - g. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.

FCC STATEMENTS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body

Supplier's Declaration of Conformity

Product Name: Station O

Model number: NSO

Responsible party:

Nonstop, Inc.

+1 775-398-3038

connect@nonstopproducts.com



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

NONSTOPTM

Nonstop Inc. All Rights Reserved.