Installation and Assembly - Internal Joist Mount


Model: ACC 120


IMPORTANT! Read entire instruction sheet before beginning installation and assembly.

MAXIMUM LOAD CAPACITY: 300 lb (137 kg) Maximum Load capacity refers to the combined load of all attached equipment and hardware.

AWARNING

 Installer must verify that the ceiling will safely support four times the combined weight of all attached equipment and hardware.

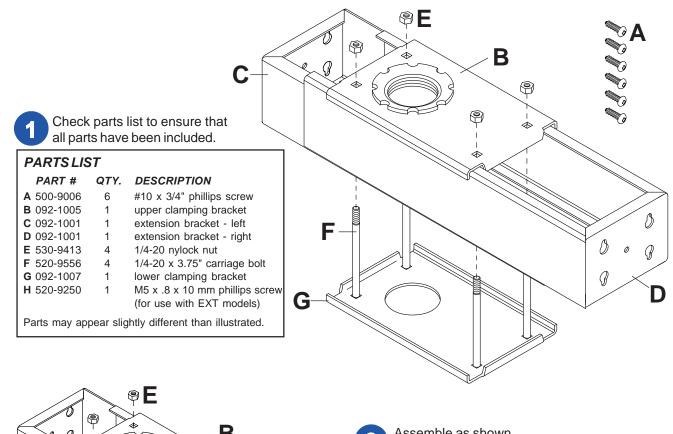


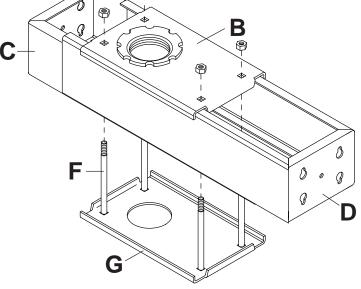

Assemble as shown.

IMPORTANT: If installer is working above the ceiling, such as in an attic space, assemble exactly as pictured. If installer is working below the ceiling, reverse positions of carriage bolts (F) and nylock nuts (E).

Tighten 1/4-20 nylock nuts (E) just enough to allow for expansion / compression of extension brackets (C & D).

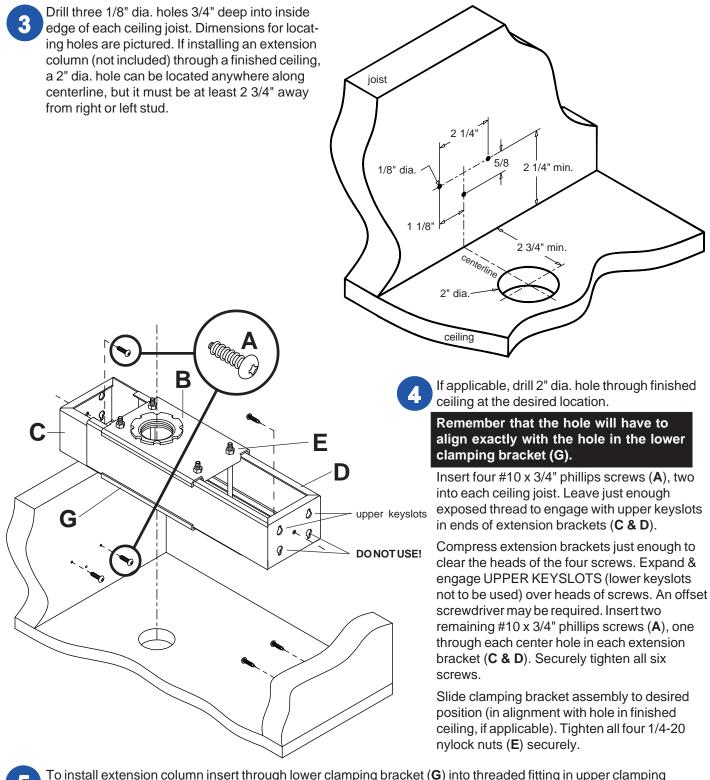

To install extension column insert through lower clamping bracket (**G**) into threaded fitting in upper clamping bracket (**B**). Tighten four or five complete turns until securely tight.

A WARNING

• For added safety, threaded fitting is treated with a special bonding agent that will be activated when extension column is attached. If extension column is removed at a later time bond will be rendered ineffective. In such cases, bonding agent such as Loctite[®] should be applied to threads before extension column is reattached.