



 
USER MANUAL

Please read all instructions carefully before using this product.

Garment Steamer

Model: GS34-BJ






Dear Valued Customer-

Thank you for purchasing this SALAV product. Please read this manual prior to using your SALAV appliance. For more product information, FAQ and customer support please visit our website at www.salayusa.com.


Important Safety Instructions:

- The voltage of your electrical source must correspond to that of the appliance(110-120V~60Hz). Connecting to the incorrect voltage may cause unrepairable damage to the appliance and will invalidate the warranty.
- 2. Do not share the power supply with other high-powered electric appliances.
- To reduce the risk of electric shock, do not immerse the appliance, plug, or power cord in water or other liquids.
- 4. Do not leave this appliance unattended while it is in operation.
- 5. Fill in water before using and observe the water level during use.
- 6. Do not lay hose on the ground. Do not wind hose. Do not operate the appliance if cord is damaged.
- 7. Always keep the hose and nozzle elevated above the water tank. Never insert any object into any opening or hose.
- 8. Do not cut or attempt to extend the steam hose or power cord.
- Do not place the nozzle directly on any surface or the appliance power cord while it is hot or plugged in.
- 10.Be cautious about steam spraying out from the nozzle. Do not direct steam at people or animals, or use steamer on garments while they are being worn.
- 11.Steam only in a vertical motion. Never use steamer in a horizontal position or tilt backwards - doing so may result in hot water discharge.
- 12. Move the appliance by firmly grasping the pole. Drain the water tank and water reservoir before moving.
- 13. Turn off, unplug and allow the appliance to cool completely for at least 30 minutes prior to draining the water tank and water reservoir and storing.
- 14. Always turn off and unplug unit before refilling, draining, cleaning, moving, or when
- 15.For indoor use only.
- 16. Keep the appliance away from flammable materials and chemicals.
- 17.Do not fill the water tank with hot water or corrosive cleaning agents which could cause damage. Distilled or filtered water is strongly recommended.
- 18. When in use, this appliance will spray hot steam from its steam nozzle. To avoid injury from hot steam, do not aim the steam nozzle at people or pets.
- 19.0nly use SALAV accessories on your SALAV appliance. The use of accessory attachments other than those provided by SALAV may result in fire, electric shock or irreversible damage to the appliance.
- 20.This appliance is not intended for use by children or near children and other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely.

COMPONENTS

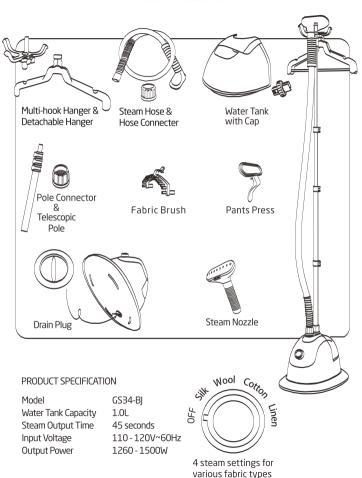

SETTING UP YOUR GARMENT STEAMER

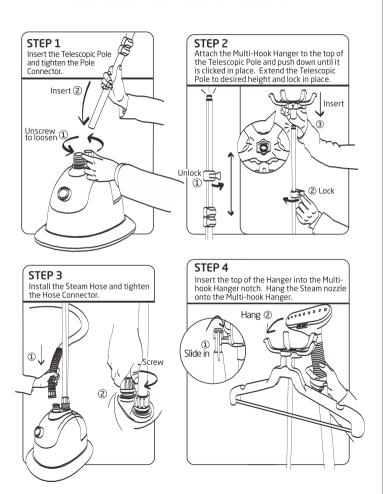

INSTRUCTIONS FOR USE










MAINTENANCE AND CLEANING



Turn off the unit and unplug it. Wait at least 30mins until the unit cools down completely.

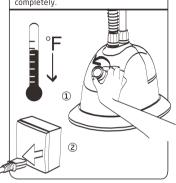

STEP 2


Collapse and remove the Telescopic Pole & Steam Nozzle. Remove the Water Tank and set aside. Carefully turn unit over to unscrew the drain plue.



REMOVING MINERAL BUILD-UP

STEP 1

Turn off and unplug the unit and cool for at least 30mins. Remove water tank. Mix water & vinegar solution and pour into water reservoir.

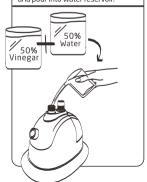


STEP 2


Wait for 40mins, unscrew the Drain Plug and drain the water reservoir. Pour clean water into reservoir and let it drain. After the reservoir is empty, replace and tighten the Drain Plug.



ACCESSORIES ASSEMBLY AND USE

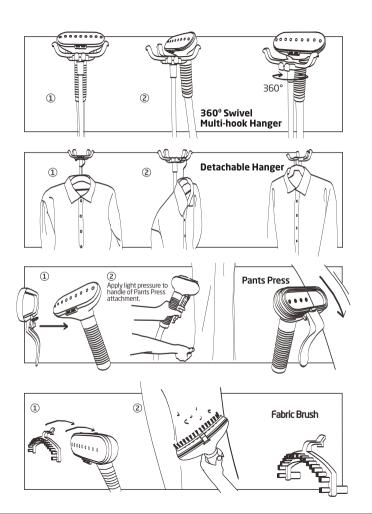

How to Steam

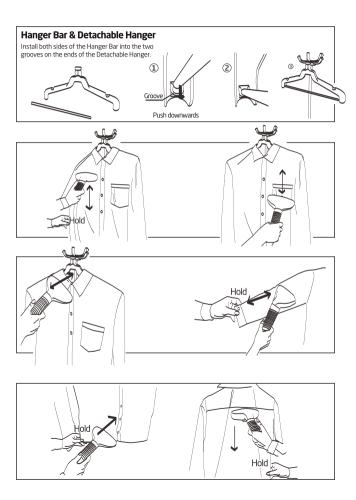

TROUBLE SHOOTING

