

MCore Lite Installation


Package Contents

TIP


We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in poor performance.




MCore Lite

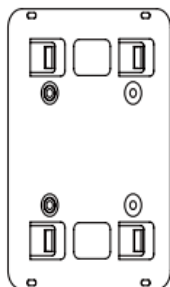


(150*117*10mm)
Bracket

 

(2.1m, 6.89ft)
Power Adapter
(19V/4.74A)

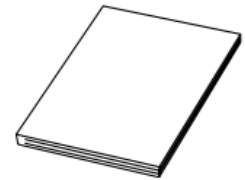


Quick Start Guide

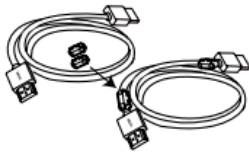

(1.8 m, 5.91 ft)
HDMI Cable



(W25.4*L50mm,3M)
Velcro(x2)

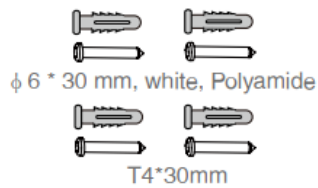


Expansion Screw (x4)
Self-tapping Screw(x4)




3*6PMOZN3+
Machine Screw(x2) (WH-85*3.0mm)
Screwdriver

Hardware Interface




- ① Power on/off Button
- ② HDD LED Indicator
- ③ Reset
- ④ DC19V/4.74A: connect to the power adapter.
- ⑤ HDMI Port: connect to displays.
- ⑥ USB Port: connect to USB devices.
- ⑦ Internet Port
- ⑧ MTouch Port: connect to MTouch E2.

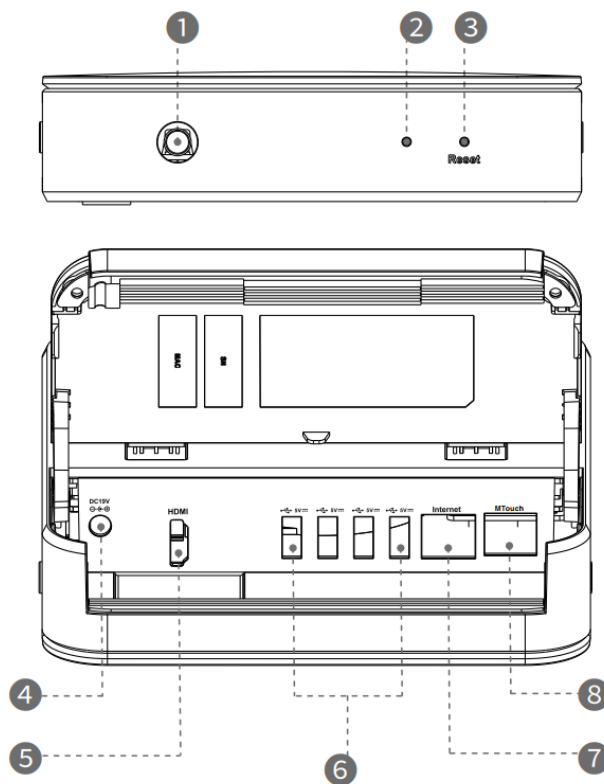

MCore Lite Connection

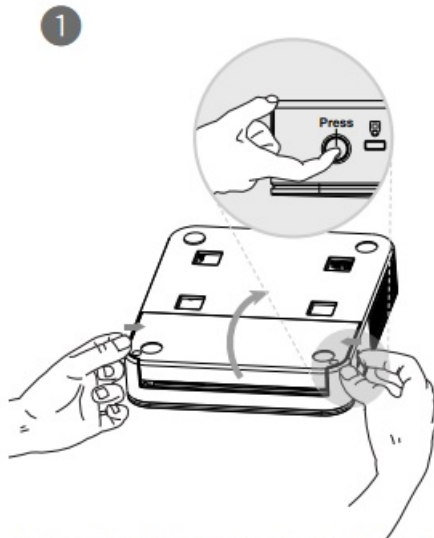

- Press the buttons on both sides to open

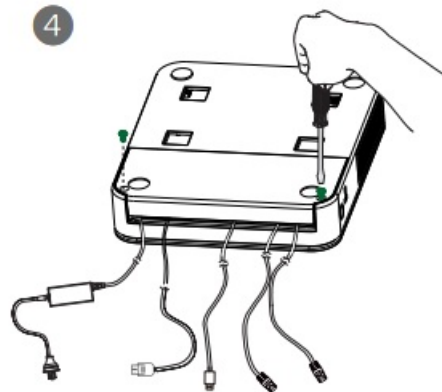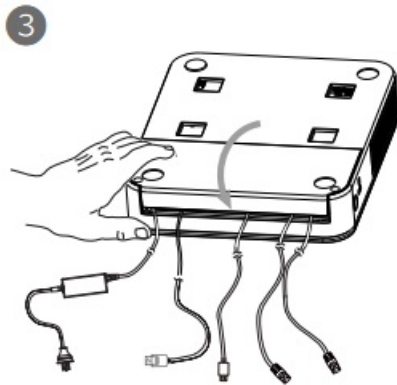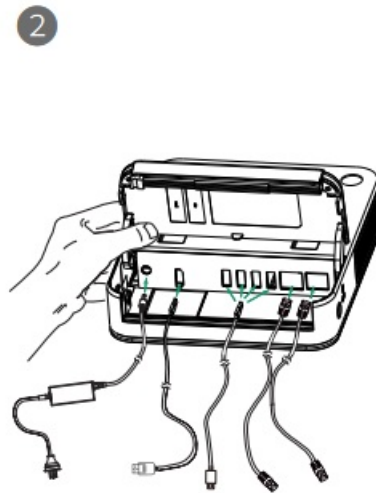

- Fasten the MCore Lite with machine screws


NOTE

When starting up the MCore Lite for the first time, you need to connect a mouse to complete the initial configuration. We recommend that you use the wireless mouse and keyboard kit.

MCore Lite has an integrated cable lock feature, and no additional cable lock box is needed to lock the cable.

When the MCore Lite works with Microsoft Teams Rooms, we recommend setting the output resolution of MCore Lite to 1080P. If it cannot be configured normally, please purchase an EDID emulator.


Install MCore Lite

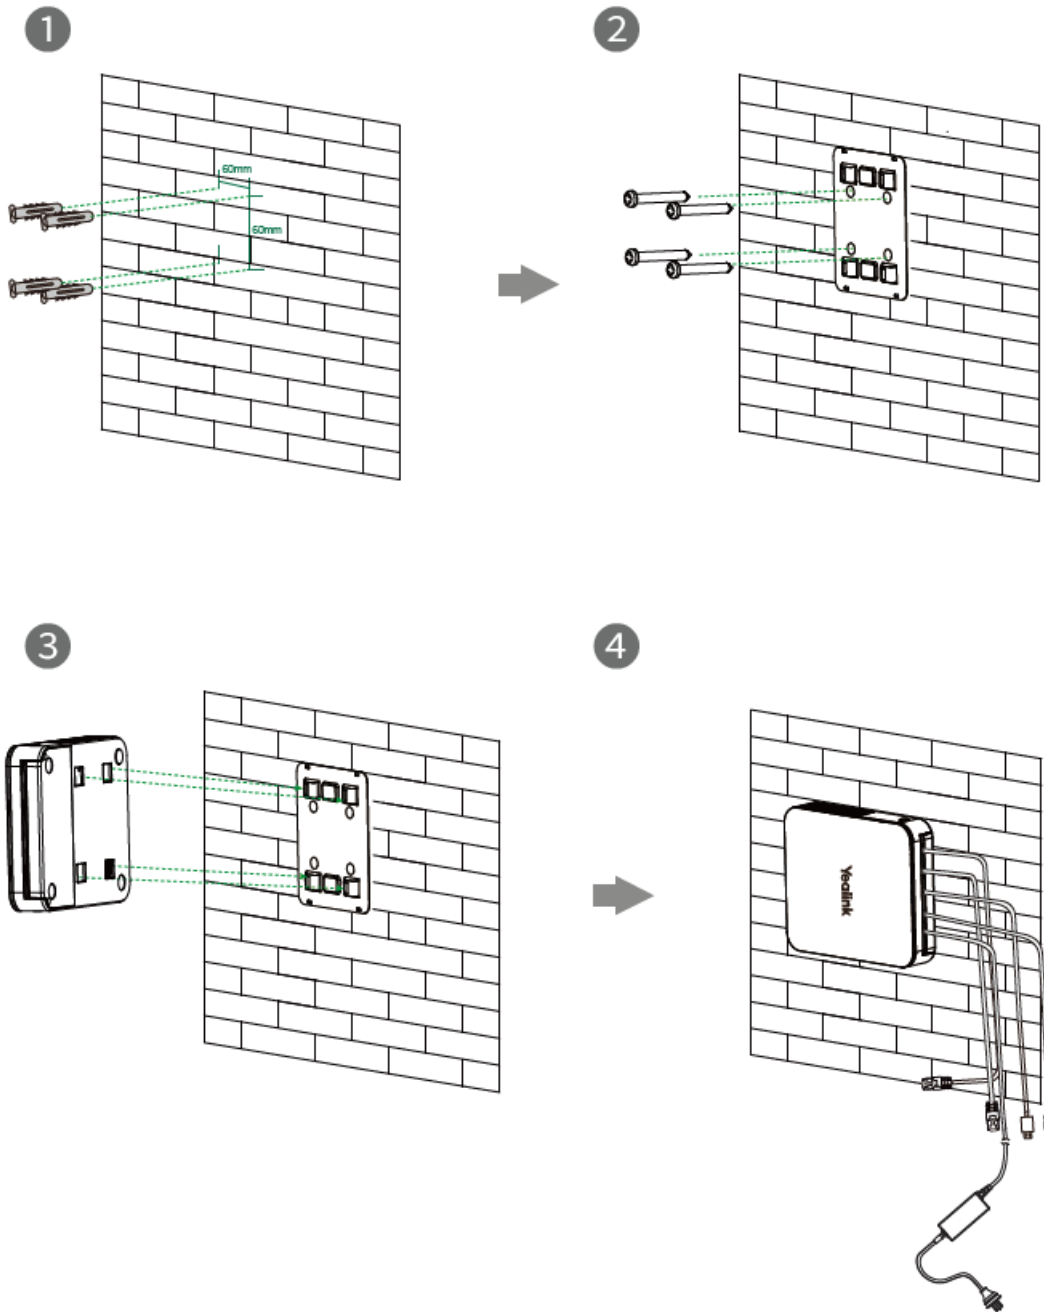


NOTE

Before mounting the bracket, you need to confirm the direction of the MCore Lite installation. Once the bracket is mounted, the installation direction of the MCore Lite cannot be changed.

- Mount on the TV

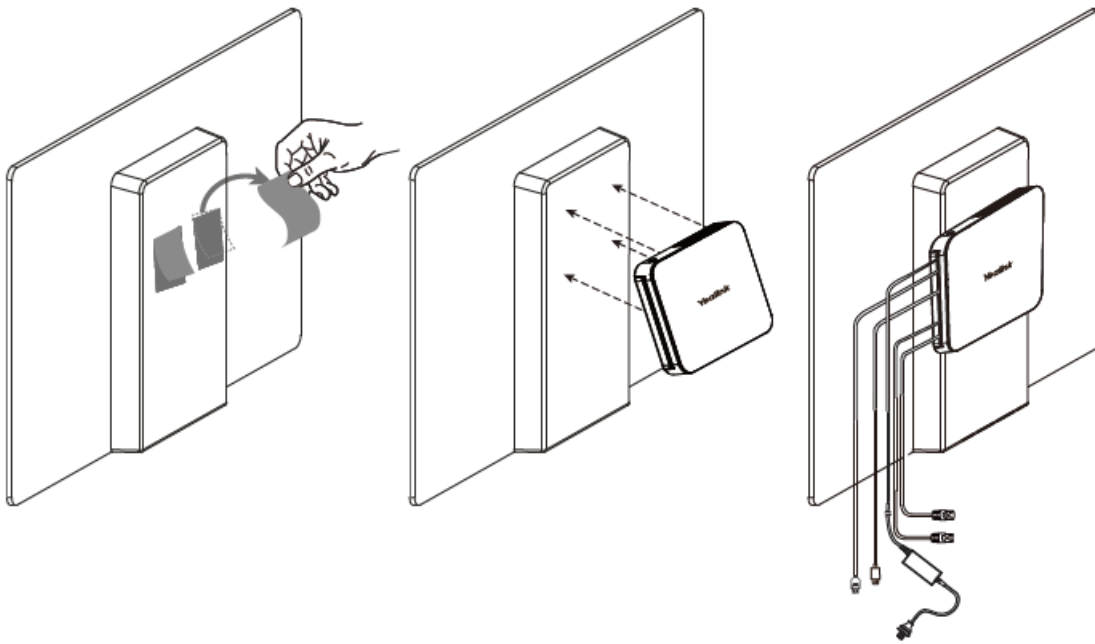

- Stick to the Table

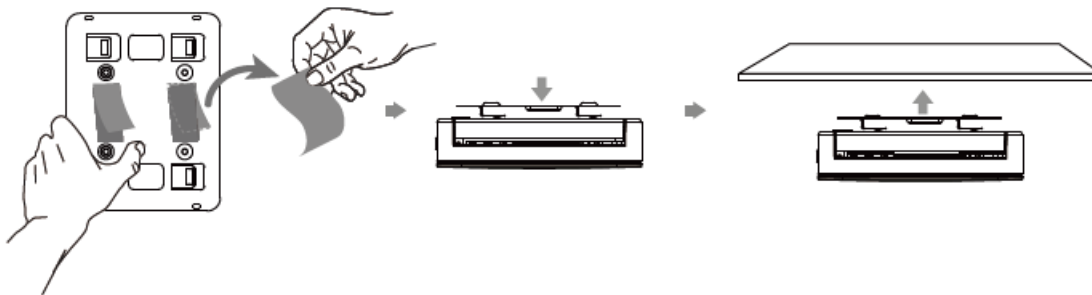

NOTE

You can stick the MCore Lite on the top, sides or bottom of the table.