



C3-540 CORIOmaster™
C3-510 CORIOmaster mini™
C3-503 CORIOmaster micro™
CORIOgrapher™ V3.0 and above

Quick Start Guide V3.0

Firmware version M410 and above

QSG-C3-5xx-V3.0

Dec 2020

In this guide

Welcome	1
Hardware recommendations	2
About your CORIOmaster™	3
About your CORIOmaster mini™	4
About your CORIOmaster micro™	5
About the buttons of your CORIOmaster micro™	6
About CORIOgrapher™	8
Quick start	10
Set up and test audio	17
Contact us	21
Video wall worksheet	22



Get more help

You can read more online. To open the online help, select ? Help in CORIOgrapher, or visit help.tvone.com/r/docs/cm/home/1.

Welcome

Thanks for buying this CORIOmaster™, CORIOmaster mini™, or CORIOmaster micro™. CORIOmaster connects to a wide range of sources and displays, and works with CORIOgrapher™ software to allow you to build dynamic video walls with an easy-to-use visual interface.

Features

- »» Output up to four video walls to monitors, LED screens, and projectors, including devices that support 4K
- »» Wide range of inputs, including HDMI, DVI, SDI, HDBaseT™, 4K, and streaming media
- »» Embedded and S/PDIF audio support with S/PDIF audio module
- »» S/PDIF audio output with CORIOmaster micro
- »» Combination of different size and resolution of displays can be used
- »» Adjustable bezel compensation
- »» Edge blending of projectors
- »» Up-down-cross conversion
- »» Control your video wall with CORIOgrapher, secure IP, or serial connection
- »» HTTP and HTTPS connectivity, RESTful multi-user control, WebSocket event monitoring
- »» Horizontal alignment on analog PC inputs
- »» Crestron module available
- »» CORIOmaster: 4RU frame size
- »» CORIOmaster mini: 1RU frame size
- »» CORIOmaster micro: 1RU half rack size, up to two video walls

Hardware recommendations

At tvONE, we design our products to the highest quality standards. To get the best results from our products, we recommend that you use the best quality connectors, cables, and adapters. Consider the points below when you choose accessories and position equipment.

- For best results at resolutions of 1080p60 or below with HDMI or DVI, use cables under 15 m long, or shorter if you use connection adapters. If you need to place your products more than 15 m apart, use active optical cables or a signal extender.

For best results at resolutions of 4K60 or higher with HDMI, use cables under 2-3 m, or shorter if you use connection adapters. If you need to place your products more than 3 m apart, use active optical cables or a signal extender.

See our range of active optical cables and signal extenders at help.tvone.com/r/docs/g/signal-extension.

- For best results with HDMI, use High Speed, Premium High Speed, or Ultra High Speed HDMI cables.
- For best results with DisplayPort, use certified cables under 2 m long.
- In industrial environments, use shielded Ethernet cables.

Shielded Ethernet cables are often marked F/UTP, FTP, or STP. Use shielded Cat 6 or above cables with HDBaseT input and output modules and Streaming media and 4K playback input modules.


- Use good quality USB 3.0 drives.
- For more hardware recommendations for your product, see the specification sheet.

Read more about HDMI at hdmi.org.

Read more about DisplayPort at displayport.org.

About your CORIOmaster™

CORIOmaster rear panel

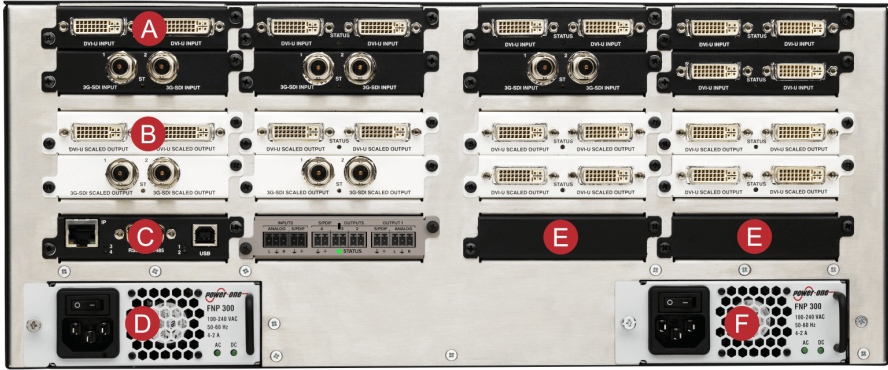

- | | | |
|----------|--------------------------------------|---|
| A | Input module (black) | Connect to sources |
| B | Output module (white) | Connect to displays |
| C | CPU module | Connect to your network with Ethernet
Optional: connect to serial controller with RS-232
Optional: connect directly to a PC with Ethernet or RS-232 |
| D | Optional second PSU, sold separately | Optional: connect to electrical outlet |
| E | Sealed slots | Not available for use |
| F | Power supply unit (PSU) | Connect to electrical outlet |

About your CORIOmaster mini™

This guide uses the name CORIOmaster to mean CORIOmaster™, CORIOmaster mini™, and CORIOmaster micro™ systems, unless specifically stated.

CORIOmaster mini rear panel



Power supply unit (PSU)

Connect to electrical outlet



CPU module

Connect to your network with Ethernet

Optional: connect to serial controller with RS-232

Optional: connect directly to a PC with Ethernet or RS-232



Output module (white)

Connect to displays



Input module (black)

Connect to sources

Note: slot 6 is a fixed input slot, included with every CORIOmaster mini.

About your CORIOmaster micro™

This guide uses the name CORIOmaster to mean CORIOmaster™, CORIOmaster mini™, and CORIOmaster micro™ systems, unless specifically stated.

CORIOmaster micro rear panel



- | | | |
|----------|-----------------------|---|
| A | S/PDIF audio output | Connect to audio device with RCA |
| B | Power supply input | Connect to an electrical outlet with PSU |
| C | Input module (black) | Connect to sources |
| D | Output module (white) | Connect to displays |
| E | CPU module | Connect to your network with Ethernet
Optional: connect to serial controller with RS-232
Optional: connect directly to a PC with Ethernet or RS-232 |

CORIOmaster micro mounting accessories

You can mount your CORIOmaster micro to a surface, rack, or ONERack system with our mounting accessories, sold separately. Ask your distributor about:

- RM-503-1 RK-MOD ONERack mounting module for CORIOmaster micro
- RM-503-1 RU-DUAL rack mounting kit for one or two CORIOmaster micro units
- RM-503-SRF surface mounting kit for CORIOmaster micro

About the buttons of your CORIOmaster micro™

You can use the buttons of the front panel to load presets, choose which window to hear, change the source playing in a window, and lock the buttons.

By default, the buttons correspond to the first eight presets, sources, or windows in your system. You can choose which button corresponds to which preset, source, or window.



Read more about mapping the buttons of your CORIOmaster micro in CORIOgrapher. Just select ? and search, or ask a question.

The buttons light up different colors depending on the mode and status of your CORIOmaster micro.

Colors of buttons



Buttons are lit dimly orange


The CORIOmaster micro is in preset selection mode.

Button is lit more brightly

The preset corresponding to button 6 is active.

Buttons are not lit

Buttons 7 and 8 do not have corresponding presets.

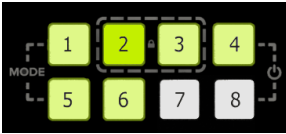

Buttons are lit dimly green


The CORIOmaster micro is in source selection mode.

Button is lit more brightly

The source corresponding to button 2 is playing in the active window. You hear the audio from the active window.

Buttons are not lit

Buttons 7 and 8 do not have corresponding sources.

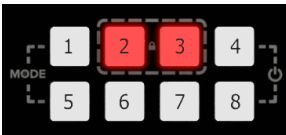

Buttons 2 and 3 are lit red

The buttons of the CORIOmaster micro are locked.

Selecting the active window

- To select the active window, press and hold the button corresponding to that window until it starts flashing.

Selecting a window to hear

You hear the audio source playing in the active window on the device connected to the S/PDIF output.

- To select a window to hear, press and hold the button corresponding to that window until it starts flashing.
- You can play audio on any connected display or device with CORIOgrapher.

Selecting a preset or source

- To select a preset or source, press and release the button corresponding to that preset or source.

Changing between preset and source selection mode

- Press and hold buttons 1 and 5 until they start flashing. The buttons change color.

About CORIOgrapher™

CORIOgrapher is the software that controls your CORIOmaster™. You can create up to four video installations, with multiple screens and windows, and add transitions and effects for a state-of-the-art dynamic video wall experience.













CORIOgrapher system requirements

CORIOgrapher:

- Works with PCs running Windows® 7 and 10
- Does not work with touch-screen-only devices, including tablets or phones
- Works with Microsoft Surface Pros and similar touch screen devices
Full support for touch screen devices is under development
- Installs Windows .NET 4.6, if you don't have it
- Needs 600 MB of disk space during installation
- Is approximately 60 MB in size once installed

To use the preview feature, your PC must have Windows Media Player installed, and it must have been launched at least once. Preview performance depends on the specifications of your PC and number of windows in your installation.

CORIOgrapher main areas

 Home	 Home	Home is where you connect to a device, load a configuration from a file, or create an offline configuration.
 Editor	 Editor	CORIOmaster and CORIOmaster2 only. Editor is where you create your installations, each on its own canvas. <ul style="list-style-type: none">■ If you have a CORIOmaster or CORIOmaster mini, you can create up to four installations.■ If you have a CORIOmaster micro, you can create up to two installations.■ If you have a CORIOmaster2, you can create up to three installations.
 Dashboard	 Dashboard	Dashboard is where you control the actions of your installations.
 Standby	 Standby	CORIOview and CORIOmaster micro only. Standby puts your device into standby mode.
 Help	 Help	Help opens tvONE help for your product.
 Settings	 Settings	Settings is where you configure your system, network, modules, and more.

Quick start

This Quick Start Guide gives you an overview of the steps involved in setting up a video installation with your CORIOmaster™, CORIOmaster mini™, or CORIOmaster micro™ hardware and CORIOgrapher™ software.



It's easy to get started with your CORIOmaster, but if you want more help with any of these steps, or with using the features of CORIOgrapher, select ? in CORIOgrapher and search, or ask a question. Or visit help.tvone.com/r/docs/cm/home/1.

1. Plan your installation. What do you want your installation to look like? What equipment do you need to achieve this?
At the back of this guide is a plan that you can fill out.
2. Install your hardware.
 - a. Position your displays or projectors.
 - b. Connect your displays and sources to your output and input modules. Connect the LAN port of the CPU module to your network.




Video tearing
Using a mixture of frame rates and/or resolutions can cause video tearing. For best results, make sure all your displays use the same frame rate.

- c. OPTIONAL: If you have a CORIOmaster micro™, connect a digital audio device to the S/PDIF audio output.
- d. Power on your CORIOmaster.




3. Install CORIODiscover and CORIOgrapher.
Download the latest version of CORIODiscover and CORIOgrapher from help.tvone.com/r/docs/g/software.

4. Open CORIOGrapher and select your CORIOmaster.

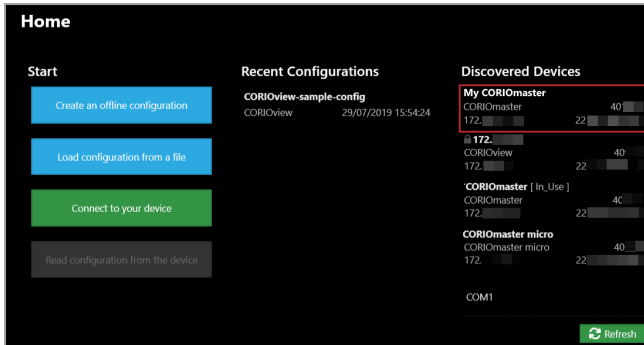


Enter your username and password to log in, and select Read to load your configuration.


- The first time you log in, make sure the Secure option is cleared.

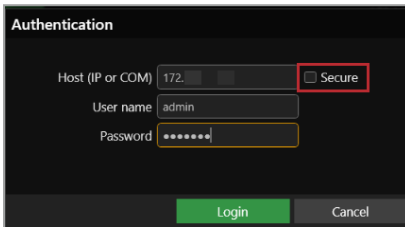


- The default username is admin, and the default password is adminpw.

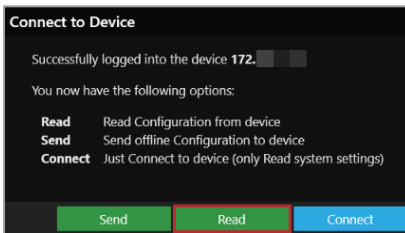


If you aren't connected to a CORIOmaster, you can create an offline configuration for your device.

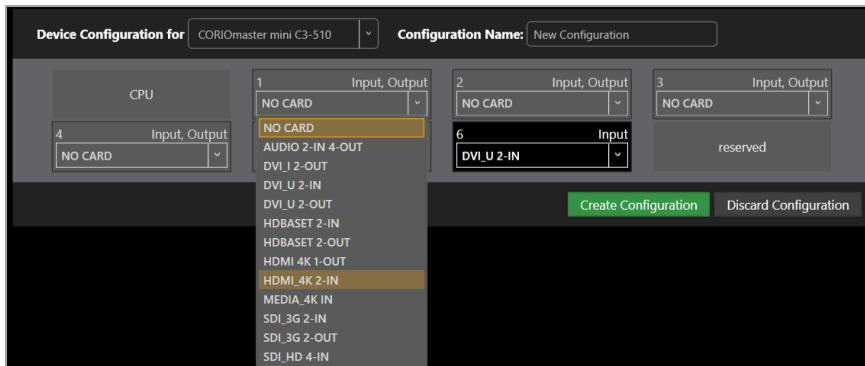


! The media player of the Streaming media and 4K playback input module is not available when you work in an offline configuration.

5. Optional: enable secure mode.
 - a. Select  Settings > Networking.
 - b. Select Secure connection.

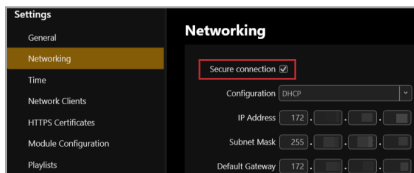


- c. Select Save > Yes.
CORIOmaster restarts.
 - d. Select Secure and log in.

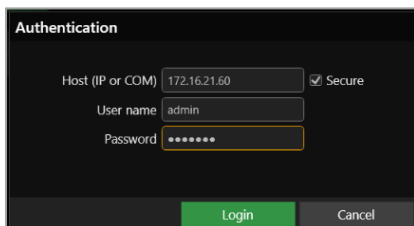

6. Optional, but recommended: name your input and output ports.


Select ⚙️ Settings > Slot Status. Give each port a useful name. For example, describe the device connected to it.

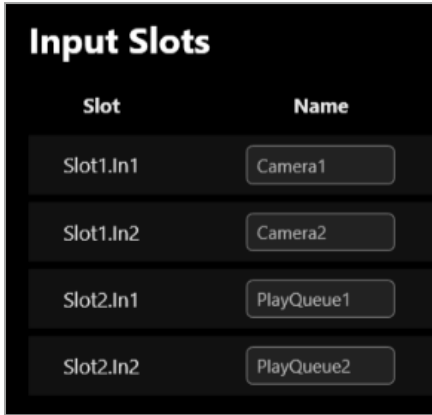

7. In the editor, add your displays, and arrange them to match your video wall.

a. Select 😊 Editor > ⚙️ Show assets > Displays.

b. From Assets, select + for each display you want to add.

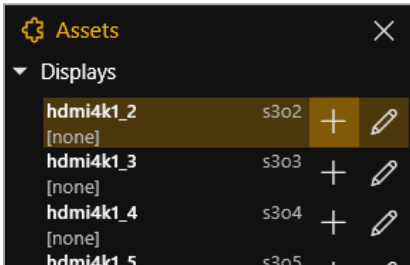


c. Drag the displays into place to match your installation.

Create a rough arrangement at this stage. When you have tested your video wall you can make your arrangement more accurate.


8. In the editor, add a window and scale it to cover the whole video wall.

a. From ⚙️ Assets, open Sources.


b. Choose a source and select 🖥️+.

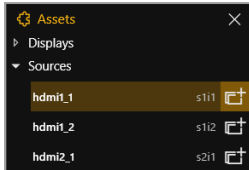


For best results, choose a source connected to hardware that is easy to play, for example, a DVD player.

!  Free windows can use any source, you can change the source playing in the window, and select the quality you want to use.

- c. Scale the window to cover all your displays.

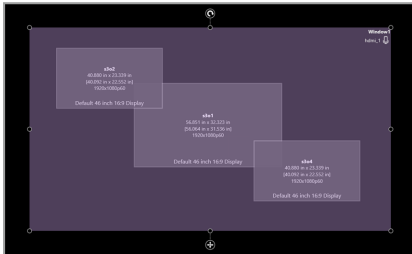


- d. Select  Take to send the video wall to your CORIOmaster.



9. Check that your installation looks correct.

Make sure that the source for the window is playing, and check that the picture is assembled correctly.

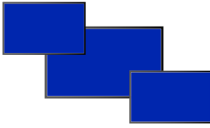

- ✗ Not the source you were expecting, blue screen, display keeps dropping signal, or no image.

Possible causes:

- Source connected incorrectly
- Input ports named incorrectly
- Source not playing
- Source resolution not supported
- Display does not support HDCP
- Source does not support the required number of HDCP keys
- Poor quality or damaged cables



- ✓ Source correct, connected, and playing.
- ✗ Image appears in the wrong places.

Possible causes:

- Displays arranged incorrectly in CORIOgrapher
- Output ports named incorrectly
- Displays connected incorrectly



- ✓ Source and displays connected and arranged correctly.

10. Repeat step 7 to add windows for all of your sources. Check that all your sources and displays work as expected.

To test any sources from Streaming media and 4K playback input modules, you need to add something to your play queues first. Read more in the Quick Start Guide that came with your module, or in tvONE Help.



Read troubleshooting advice in tvONE help. In CORIOgrapher, select ? Help and search, or ask a question. Or visit help.tvone.com/r/docs/cm/home/1.

Next steps

Congratulations, your video installation is set up! You can now set up and test audio, make your installation more accurate, configure the best quality settings, and add transitions and effects.

If your CORIOmaster contains one or more Streaming media and 4K playback input modules, you need to set those up too.


Read about setting up the Streaming media and 4K playback input module in tvONE help.

Set up and test audio


Your CORIOmaster, CORIOmaster mini, or CORIOmaster micro supports embedded audio in uncompressed PCM format. CORIOmaster micro also includes an independent S/PDIF audio output.

Testing embedded audio inputs

1. From  Editor, select  Live changes.

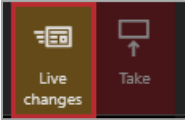

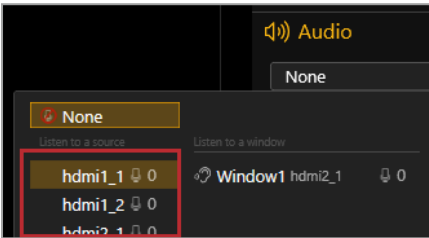


2. Select an audio source from the list.



You hear the audio source from all the displays and output devices associated with this canvas.

3. Select each source in turn.


If you cannot hear a source:

- check the audio settings of the source device.
- On  Editor, make sure the source is not muted. A muted source shows .
- In  Settings > Slot Status, make sure Audio Enabled is selected for the source.
- If you cannot hear any sources, check the audio settings of the output devices.
- If your source is a stream with low latency, your CORIOmaster mutes the audio.

- The Streaming media and 4K playback input module only supports the following embedded audio formats:
 - mp3
 - aac

Testing embedded audio outputs


1. From  Editor, select  Live changes.

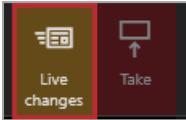



2. If you have a CORIOmaster micro, mute the S/PDIF output.
From Audio, select Mute Audio.

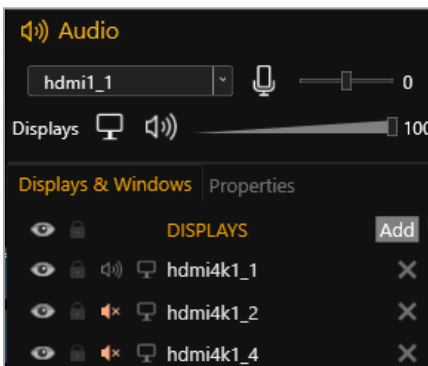


3. From Displays & Windows, mute all the displays, except the one you want to test.



Select  to mute a display, and  to unmute a display.

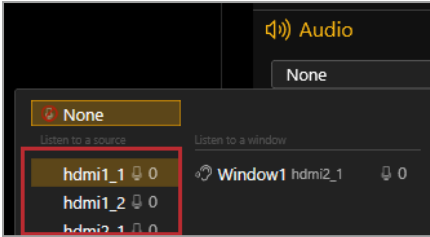


4. Select an audio source from the list.




You hear the audio source from the display that isn't muted.


5. Mute and unmute each display until you have heard audio from all displays.



If you can't hear audio:


- Check the audio settings on the display itself.
- In  Editor, make sure the source is not muted. A muted source shows .
- In  Settings > Slot Status, make sure Audio Enabled is selected for the source and for the display.
- If your source is a stream with low latency, CORIOmaster mutes the audio.
- The Streaming media and 4K playback input module only supports the following embedded audio formats:
 - mp3
 - aac

Testing the S/PDIF output of a CORIOmaster micro

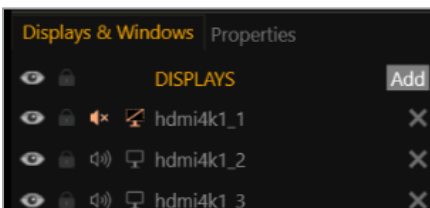1. From  Editor, select Displays & Windows.
2. Mute all the displays.






Select  to mute a display, and  to unmute a display.

3. From  Editor, select Audio
4. Select a window from Audio Follows.




If you can't hear audio:

- Check the audio settings on the display itself.
- In  Editor, make sure the source is not muted. A muted source shows .
- In  Settings > Slot Status, make sure Audio Enabled is selected for the source and for the display.
- If your source is a stream with low latency, CORIOmaster mutes the audio.
- The Streaming media and 4K playback input module only supports the following embedded audio formats:
 - mp3
 - aac



Help

Read more about audio in tvONE Help. In CORIOgrapher, select  Help and search, or ask a question. Or visit help.tvone.com/r/docs/cm/home/1.

For more information, download the full user guide at
help.tvone.com/r/docs/cm/home/1.



Contact us

🌐 tvone.com

✉ info@tvone.com

✉ **Support NCSA:** tech.usa@tvone.com

✉ **Support EMEA:** tech.europe@tvone.com

✉ **Support Asia:** tech.asia@tvone.com

Information in this document is subject to change without notice. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's personal use without the written permission of tvONE.

Copyright © 2020 tvONE™. All rights reserved.

Registered in the U.S. Patent and Trademark Office.

Video wall worksheet



What is my video wall layout? In the space above, draw a picture showing what kind of wall you have in mind. Show both the displays you have in mind as well as the video windows that you would like to show.

What am I trying to accomplish with this video wall?

How many displays or outputs are needed?

How many monitors are needed?

How many projectors are needed?

How many LED walls are needed?

Is edge blending required?

What is the blending overlap size?

What are the sizes of the displays?

What are the bezel sizes for the monitors?

What are the native resolutions of the displays?

How many source signals or inputs are required?

What are the source signal types?

What are the source resolutions?

What are the frame rates of the inputs?

Will the signal feeds be available at all times that the video wall is operating?

Is there any switching or processing before the signal enters the video wall processor?

How many windows will be required for the video wall? Include all windows even windows that are not active at all times.

What level of quality is required for each window? Not all windows can have the highest quality in most cases.

Are presets (video switching, source transitions, window movement) required for the video wall?

What type of control system will operate the wall, if any?

In the spaces below, draw your preset destinations with window and transition attributes noted.

