PTZ310/330

Quick Start Guide

Package Contents

PTZ 310/330

Power adapter & Power cord

HDMI cable

Cable ties(x5)

Remote controller/ Batteries(x2)

RS232 In/Out cable

Quick Guide

Cable Fixing plates(x 2)

Din8 to D-Sub9 cable

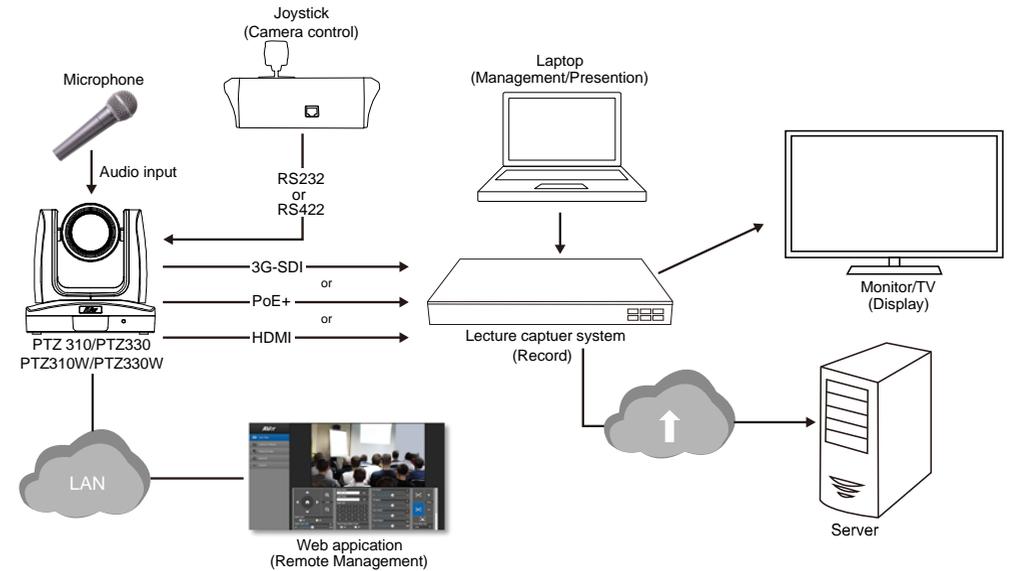Screw for mount
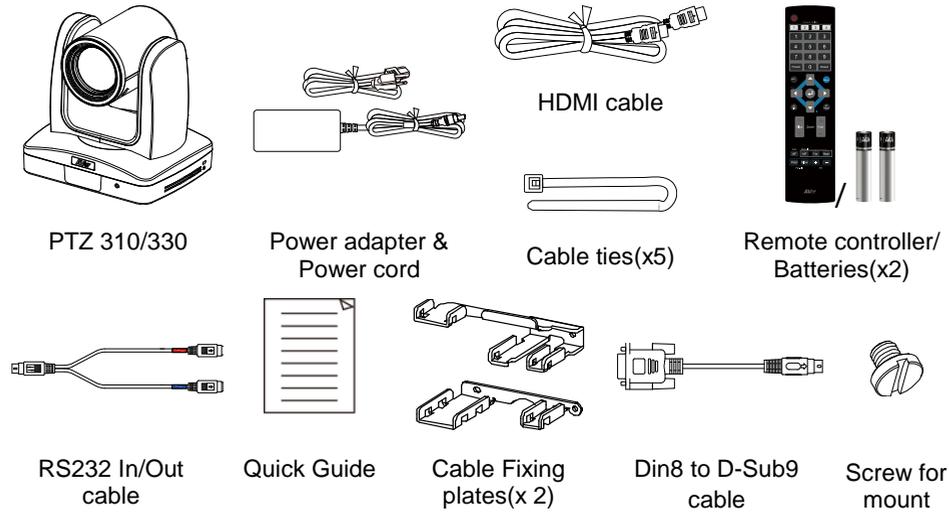
Overview
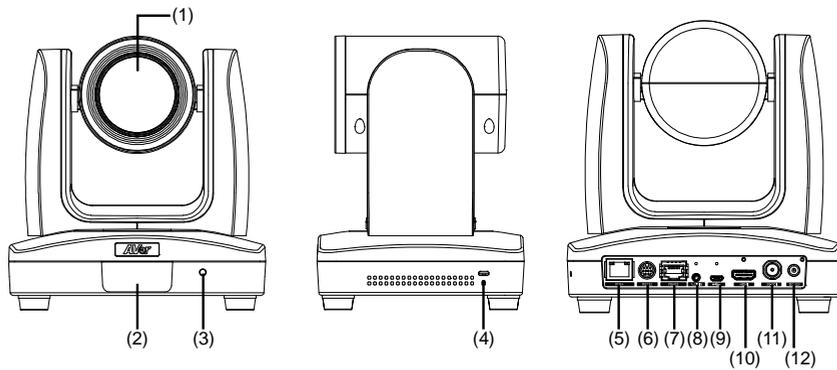
(1) Camera lens
(2) IR sensor
(3) Power indicator
(4) Kensington lock

(5) PoE+ port
(6) RS232 port
(7) RS422 port
(8) Audio IN

(9) micro-USB port
(10) HDMI port
(11) 3G-SDI port
(12) DC Power jack

Connections
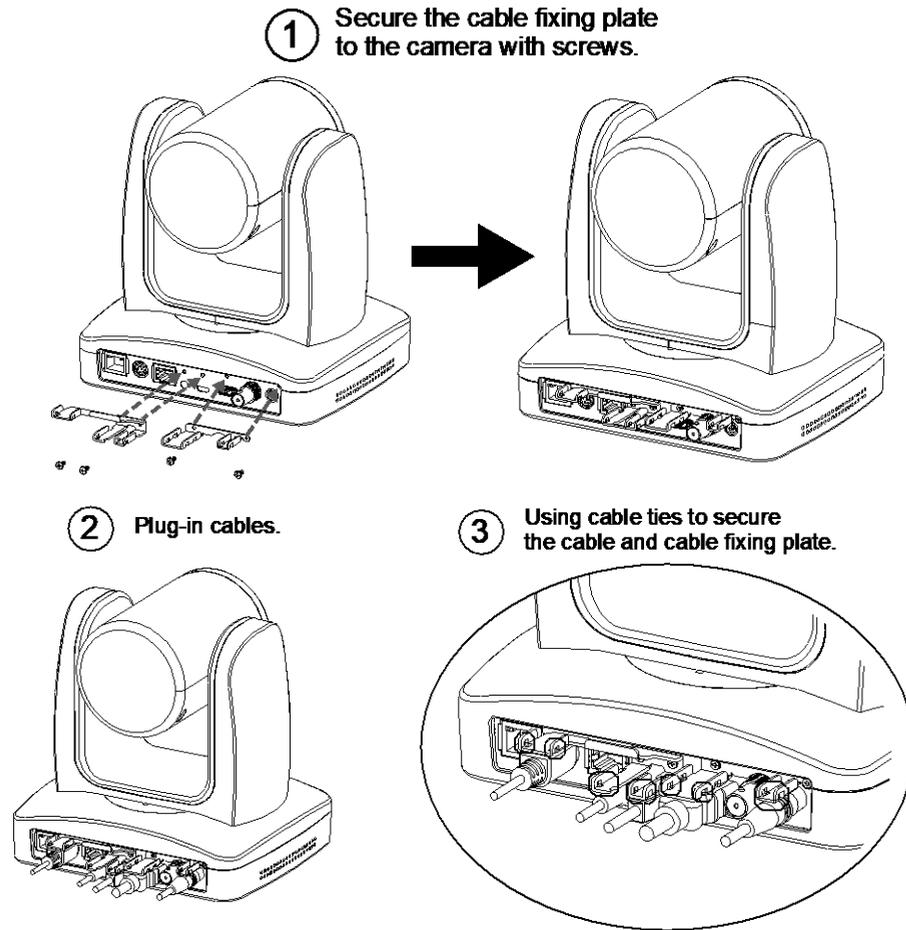
Joystick (Camera control)

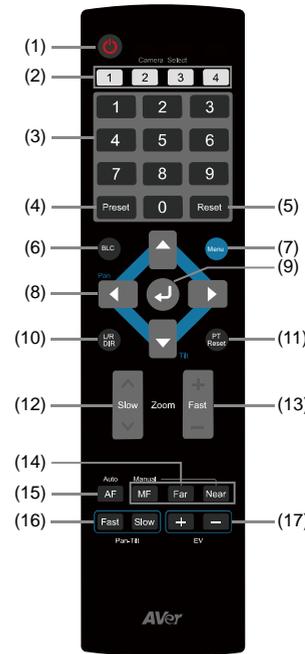Laptop (Management/Presention)

Microphone

Audio input

RS232 or RS422

3G-SDI

or

PoE+

or

HDMI

PTZ 310/PTZ330 PTZ310W/PTZ330W

Lecture captuer system (Record)

Monitor/TV (Display)

Server

LAN

Web appication (Remote Management)

LED Indicator

LED	Status
Blue(Solid)	Normal Operation
Orange(Blinking)	Camera Initialization
Orange (Solid)	Standby
Red(Blinking)	FW Updating

P/N: 300AS310-ECB

Install Cable Fixing Plate

① Secure the cable fixing plate to the camera with screws.

② Plug-in cables.

③ Using cable ties to secure the cable and cable fixing plate.

Remote Controller

The remote controller requires two (2) "AAA" size batteries (supplied), make sure batteries are installed properly before use.

Name	Function
(1) Power	Turn the unit on/standby.
(2) Camera Select	Select 1~4 PTZ camera.
(3) Numeric Pad	■ Use for setting the preset position 0~9. ■ Press number button (0~9) to move the camera to pre-configure preset position 0~9.
(4) Preset	Press "**Preset**" + "**Number button (0~9)**" to set the preset position.
(5) Reset	Press "**Reset**" + "**Number button (0~9)**" to cancel the pre-configure preset position.
(6) BLC	Turn on/off backlight compensation
(7) Menu	Open and exit the OSD menu.
(8) ▲, ▼, ◄, & ►	Pan and tilt the camera lens.
(9) ↵	- Confirm the selection or make a selection in OSD menu. - One push focus.
(10) L/R DIR	Left and right orientation setting. - Press "**L/R DIR**" + "**#1**" button to reset setting. - Press "**L/R DIR**" + "**#2**" button to move to opposite direction.
(11) PT Reset	Reset the Pan-Tilt position.
(12) Zoom Slow	Zoom in/out slow.
(13) Zoom Fast	Zoom in/out fast.
(14) MF/Far/Near	Enable manual focus. Use Far/Near to adjust the focus.
(15) AF	Auto focus.
(16) Pan-tilt Fast/Slow	Pan-Tilt speed adjustment.
(17) EV +/-	EV level adjustment.