



Cat.6 Plug Assembly Instructions


Step: 1



*cable stripped approximately 3cm.

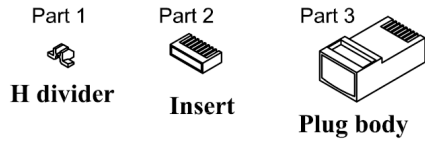


Step: 2

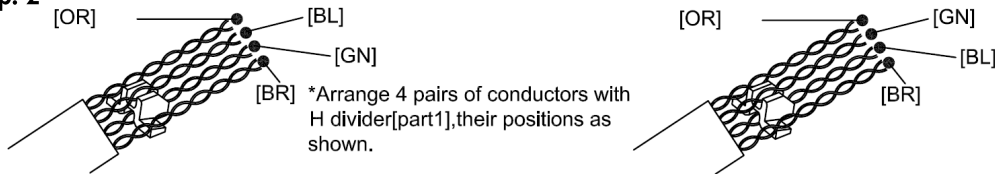

*Caution:the positions of the BL and GN pairs are oppsite in two ends.


Step: 3

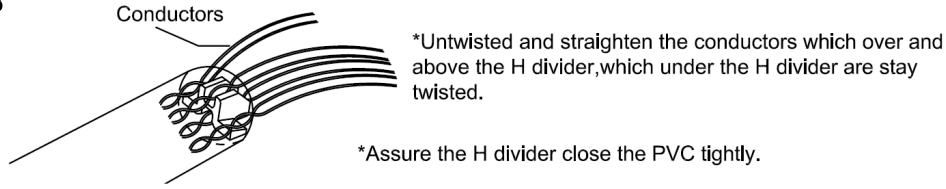

PIN ASSIGNMENT

| [T568B] | [T568A] |
|---------|---------|
| 1—WH/OR | 1—WH/GN |
| 2—OR | 2—GN |
| 3—WH/GN | 3—WH/OR |
| 6—GN | 6—OR |
| 4—BL | 4—BL |
| 5—WH/BL | 5—WH/BL |
| 7—WH/BR | 7—WH/BR |
| 8—BR | 8—BR |

Step: 4



*Ensure that the conductors are cut as short as possible to keep the integrity of the twisted pairs before inserting them into the load bar and connector.