A woman in a white and maroon uniform is cleaning a table in a modern living room. She is leaning over the table, which is covered with a white cloth. In the background, there is a patterned armchair and a large window with sheer curtains. A green-handled mop is visible in the foreground on the right. The floor is highly reflective, showing the woman's reflection.

It's not truly
clean until it's
Certified
Clinically
Clean.®

Our Solution Is Your Solution



Our hospital grade disinfectant is 7 Solutions in 1

- 1 EPA-registered
- 2 NSF-certified - no rinse required
- 3 Mold & mildew killer
- 4 Odor eliminator
- 5 Allergen eliminator
- 6 Antimicrobial control
- 7 Carpet and fabric cleaner

Follow these instructions for perfect results every time. For best results use an electrostatic sprayer.

Step 1: Make sure you have appropriate eye-wear and safety mask.



Step 2: Cover smoke alarms. No need to worry about the sprinkler system being affected by spraying.





Step 3: Smell the room and assess the odor.



Step 4: Fill the reservoir with Aseptic Plus+. Use Aseptic Plus+ fully concentrated if fighting odors, mold/mildew, allergens or an outbreak of bacteria/virus. If you are disinfecting the room on a daily basis use Aseptic Plus+ 1:5.






Step 5: Use a 25ft. extension cord.

Step 6: Locate plug in the center of the room for easy accessibility.



Step 7: Begin in the back corner of the room and start spraying from the bottom to the top in zigzag motion. Move your way from the back of the room to the bathroom and then out the door covering the whole room.

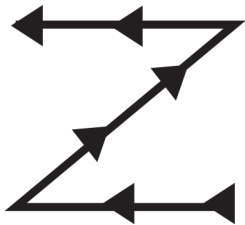

Use zigzag motion from bottom to top.

Warning: Make sure to keep arm's length distance from the wall when using the mini fogger. Stay 10 feet away when using the standard fogger.





Step 8: Locate HVAC unit. If it is a wall unit, take cover off and spray the HVAC system coils in a zigzag motion. (No worries... Aseptic Plus+ is non-corrosive.)

1. Turn system on.
2. Spray for 1, 2 or 3 minutes.
3. Turn system off for 10 minutes.
4. Turn system back on for best results.

If it is a ceiling HVAC unit, remove the filter and spray the air return.

1 minute for light odor

2 minutes for medium odors

3 minutes for heavy odors



Step 9: After spraying HVAC unit, for best results, replace filter if a disposable filter and/or vacuum filter if it is a wall unit.

ALERT! VERY IMPORTANT THAT YOU SPRAY THE FOLLOWING:



Front of curtains from top to bottom



Back of curtains from bottom to top



Ceiling



Behind all furniture



Under the bed



MUST SPRAY CARPET!

If odors are strong, please be advised that the carpets will need to be cleaned with Aseptic Plus+ using a carpet extractor in order to kill odor causing bacteria that is trapped in the carpet fibers.

Don't forget

Closets...

Furniture...

Shower Curtains...

When finished, don't forget to remove smoke alarm cover and place a Certified Clinically Clean marketing piece to assure guests the room has been properly disinfected and sanitized.

