



Operation/Reference Guide

MXT/D-700

7" Modero X Series® Tabletop Touch Panel
7" Modero X Series® Wall/Flush Mount Touch Panel



AMX Limited Warranty and Disclaimer

This Limited Warranty and Disclaimer extends only to products purchased directly from AMX or an AMX Authorized Partner which include AMX Dealers, Distributors, VIP's or other AMX authorized entity.

AMX warrants its products to be free of defects in material and workmanship under normal use for three (3) years from the date of purchase, with the following exceptions:

- Electroluminescent and LCD Control Panels are warranted for three (3) years, except for the display and touch overlay components are warranted for a period of one (1) year.
- Disk drive mechanisms, pan/tilt heads, power supplies, and MX Series products are warranted for a period of one (1) year.
- AMX lighting products are guaranteed to switch on and off any load that is properly connected to our lighting products, as long as the AMX lighting products are under warranty. AMX also guarantees the control of dimmable loads that are properly connected to our lighting products. The dimming performance or quality there of is not guaranteed, impart due to the random combinations of dimmers, lamps and ballasts or transformers.
- AMX software is warranted for a period of ninety (90) days.
- Batteries and incandescent lamps are not covered under the warranty.
- AMX AutoPatch Epica, Modula, Modula Series4, Modula CatPro Series and 8Y-3000 product models will be free of defects in materials and manufacture at the time of sale and will remain in good working order for a period of three (3) years following the date of the original sales invoice from AMX. The three-year warranty period will be extended to the life of the product (Limited Lifetime Warranty) if the warranty card is filled out by the dealer and/or end user and returned to AMX so that AMX receives it within thirty (30) days of the installation of equipment but no later than six (6) months from original AMX sales invoice date. The life of the product extends until five (5) years after AMX ceases manufacturing the product model. The Limited Lifetime Warranty applies to products in their original installation only. If a product is moved to a different installation, the Limited Lifetime Warranty will no longer apply, and the product warranty will instead be the three (3) year Limited Warranty.

All products returned to AMX require a Return Material Authorization (RMA) number. The RMA number is obtained from the AMX RMA Department. The RMA number must be clearly marked on the outside of each box. The RMA is valid for a 30-day period. After the 30-day period the RMA will be cancelled. Any shipments received not consistent with the RMA, or after the RMA is cancelled, will be refused. AMX is not responsible for products returned without a valid RMA number.

AMX is not liable for any damages caused by its products or for the failure of its products to perform. This includes any lost profits, lost savings, incidental damages, or consequential damages. AMX is not liable for any claim made by a third party or by an AMX Authorized Partner for a third party.

This Limited Warranty does not apply to (a) any AMX product that has been modified, altered or repaired by an unauthorized agent or improperly transported, stored, installed, used, or maintained; (b) damage caused by acts of nature, including flood, erosion, or earthquake; (c) damage caused by a sustained low or high voltage situation or by a low or high voltage disturbance, including brownouts, sags, spikes, or power outages; or (d) damage caused by war, vandalism, theft, depletion, or obsolescence.

This limitation of liability applies whether damages are sought, or a claim is made, under this warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if AMX or an authorized representative of AMX has been advised of the possibility of any such damages. This limitation of liability, however, will not apply to claims for personal injury.

Some states do not allow a limitation of how long an implied warranty last. Some states do not allow the limitation or exclusion of incidental or consequential damages for consumer products. In such states, the limitation or exclusion of the Limited Warranty may not apply. This Limited Warranty gives the owner specific legal rights. The owner may also have other rights that vary from state to state. The owner is advised to consult applicable state laws for full determination of rights.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, AMX MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. AMX EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS LIMITED WARRANTY. EXCEPT AS OTHERWISE LIMITED BY APPLICABLE LAW, AMX RESERVES THE RIGHT TO MODIFY OR DISCONTINUE DESIGNS, SPECIFICATIONS, WARRANTIES, PRICES, AND POLICIES WITHOUT NOTICE.

AMX Software License and Warranty Agreement

- **LICENSE GRANT.** AMX grants to Licensee the non-exclusive right to use the AMX Software in the manner described in this License. The AMX Software is licensed, not sold. This license does not grant Licensee the right to create derivative works of the AMX Software. The AMX Software consists of generally available programming and development software, product documentation, sample applications, tools and utilities, and miscellaneous technical information. Please refer to the README.TXT file on the compact disc or download for further information regarding the components of the AMX Software. The AMX Software is subject to restrictions on distribution described in this License Agreement. AMX Dealer, Distributor, VIP or other AMX authorized entity shall not, and shall not permit any other person to, disclose, display, loan, publish, transfer (whether by sale, assignment, exchange, gift, operation of law or otherwise), license, sublicense, copy, or otherwise disseminate the AMX Software. Licensee may not reverse engineer, decompile, or disassemble the AMX Software.
- **ACKNOWLEDGEMENT.** You hereby acknowledge that you are an authorized AMX dealer, distributor, VIP or other AMX authorized entity in good standing and have the right to enter into and be bound by the terms of this Agreement.
- **INTELLECTUAL PROPERTY.** The AMX Software is owned by AMX and is protected by United States copyright laws, patent laws, international treaty provisions, and/or state of Texas trade secret laws. Licensee may make copies of the AMX Software solely for backup or archival purposes. Licensee may not copy the written materials accompanying the AMX Software.
- **TERMINATION.** AMX RESERVES THE RIGHT, IN ITS SOLE DISCRETION, TO TERMINATE THIS LICENSE FOR ANY REASON UPON WRITTEN NOTICE TO LICENSEE. In the event that AMX terminates this License, the Licensee shall return or destroy all originals and copies of the AMX Software to AMX and certify in writing that all originals and copies have been returned or destroyed.
- **PRE-RELEASE CODE.** Portions of the AMX Software may, from time to time, as identified in the AMX Software, include PRE-RELEASE CODE and such code may not be at the level of performance, compatibility and functionality of the GA code. The PRE-RELEASE CODE may not operate correctly and may be substantially modified prior to final release or certain features may not be generally released. AMX is not obligated to make or support any PRE-RELEASE CODE. ALL PRE-RELEASE CODE IS PROVIDED "AS IS" WITH NO WARRANTIES.
- **LIMITED WARRANTY.** AMX warrants that the AMX Software (other than pre-release code) will perform substantially in accordance with the accompanying written materials for a period of ninety (90) days from the date of receipt. AMX DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH REGARD TO THE AMX SOFTWARE. THIS LIMITED WARRANTY GIVES LICENSEE SPECIFIC LEGAL RIGHTS. Any supplements or updates to the AMX SOFTWARE, including without limitation, any (if any) service packs or hot fixes provided to Licensee after the expiration of the ninety (90) day Limited Warranty period are not covered by any warranty or condition, express, implied or statutory.
- **LICENSEE REMEDIES.** AMX's entire liability and Licensee's exclusive remedy shall be repair or replacement of the AMX Software that does not meet AMX's Limited Warranty and which is returned to AMX in accordance with AMX's current return policy. This Limited Warranty is void if failure of the AMX Software has resulted from accident, abuse, or misapplication. Any replacement AMX Software will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer. Outside the United States, these remedies may not be available. NO LIABILITY FOR CONSEQUENTIAL DAMAGES. IN NO EVENT SHALL AMX BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS AMX SOFTWARE, EVEN IF AMX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO LICENSEE.
- **U.S. GOVERNMENT RESTRICTED RIGHTS.** The AMX Software is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph ©(1)(ii) of The Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs ©(1) and (2) of the Commercial Computer Software Restricted Rights at 48 CFR 52.227-19, as applicable.
- **SOFTWARE AND OTHER MATERIALS FROM AMX.COM MAY BE SUBJECT TO EXPORT CONTROL.** The United States Export Control laws prohibit the export of certain technical data and software to certain territories. No software from this Site may be downloaded or exported (i) into (or to a national or resident of) Cuba, Iraq, Libya, North Korea, Iran, Syria, or any other country to which the United States has embargoed goods; or (ii) anyone on the United States Treasury Department's list of Specially Designated Nationals or the U.S. Commerce Department's Table of Deny Orders. AMX does not authorize the downloading or exporting of any software or technical data from this site to any jurisdiction prohibited by the United States Export Laws.

This Agreement replaces and supersedes all previous AMX Software License Agreements and is governed by the laws of the State of Texas, and all disputes will be resolved in the courts in Collin County, Texas, USA. For any questions concerning this Agreement, or to contact AMX for any reason, please write: AMX License and Warranty Department, 3000 Research Drive, Richardson, TX 75082.

Table of Contents

Modero X Series® Touch Panels	1
Overview	1
Features.....	1
Modero X Series Dealer Benefits.....	1
Modero X Series Customer Benefits.....	1
MXT-700	2
Connector Locations	4
Memory.....	4
Basic Operation.....	4
Powering on the MXT-700	5
Microphone	5
Audio/Video Capabilities	5
MXT-700-NC	5
MXD-700	5
Memory.....	8
Basic Operation.....	8
Powering on the MXD-700.....	8
Microphone	8
Audio/Video Capabilities	8
MXD-700-NC	8
MXD/T-700 Features	9
Picture View	9
Preview Mode and Normal Mode	10
Picture View Send Command	11
Configuration.....	11
Bluetooth Support	11
NFC.....	11
Cleaning the Touch Overlay and Case.....	12
Installation	13
MXT-700 Installation.....	13
Power via Power Over Ethernet	13
Ethernet Cable Installation and Modification.....	13
A Note About Wall and Rack Installation.....	15
Installation Recommendations	16
MXD-700 Installation	16
Power Via Power Over Ethernet	16
Installing the MXD-700 into a wall	17

Uninstalling the MXD-700	21
Configuration and Programming	23
Modero X Series Programming Guide	23
Upgrading Firmware	25
Overview	25
Upgrading Firmware via USB Flash Drive	25
Load the Firmware on a USB Flash Drive	25
Transfer the Firmware File From the Flash Drive to the Touch Panel.....	26
Upgrading from Previous Firmware	27
Returning to Factory Default Firmware	27
Upgrading Firmware Via NetLinx Studio	28
Viewing devices on the Virtual System.....	30
Downloading firmware	30
Appendix: Troubleshooting	33
Overview	33
Panel Doesn't Respond To Touches	33
Panel Isn't Appearing In The Online Tree Tab	33
Can't Connect To a NetLinx Master	33
Only One Modero Panel In My System Shows Up	33

Modero X Series® Touch Panels

Overview

See more and do more with the most elegant interface designed specifically for dedicated room control. The Modero X Series® Touch Panels provide several industry firsts, including a beautiful, panoramic capacitive multi-touch screen that provides users access to multiple applications with minimal navigation. It is hardware-ready for support of Near Field Communication™ (NFC) Technology, to allow personalization of the user experience and productivity enhancing capabilities through integration with NFC capable personal devices. The distinctive, low-profile design is engineered to sit perfectly on a table without obstructing views. Modero X Series is the control surface that simply delivers more.

Features

- **Panoramic Control Surface** – Combined with the new PanTastic UI, the panoramic touch panels take the user experience to a whole new level with an impressive control surface to perform activities much in the same way you use a computer – multi-tasking with dedicated spaces.
- **Future Technology Visions** – Ready to support Near Field Communication (NFC) Technology, which promises short-range wireless technologies that deliver peer-to-peer communication by 'sharing, pairing and transaction' between RF devices like exchanging data/identities.
- **Enhanced Usability** – External phone connections via Bluetooth or USB and HD video streaming.
- **Graphic Leaps & Bounds** – The Modero X Series includes some striking new intuitive UI functionality including: gesturing, swiping, dynamic reordering and enhanced animation capabilities
- **Perfect From Any Angle** – Includes In-Plane Switching (IPS), the latest technology in popular tablet/mobile devices that delivers the widest viewing angles and the most accurate color reproduction on the market.

Modero X Series Dealer Benefits

- **Attract More Corporate Customers** - The elegant design and simple beauty of the Modero X Series will create demand from both new and current customers.
- **Address Unique Requirements** – With a panoramic profile, the Modero X Series provides dealers with a solution for uses where multiple applications must be viewed simultaneously.
- **Differentiate Yourself** – The Modero X Series offers design and technology features unmatched in the industry.

Modero X Series Customer Benefits

- **Multi-Task Capability** – The contemporary design provides a large control surface, which allows multiple views for different activities such as presenting, controlling and previewing.
- **Simple to Use Interfaces** – The capacitive multi-touch screen combined with intuitive user-interfaces makes it easy for anyone to operate sophisticated meeting room equipment
- **Sleek, Low-Profile Design** - The Modero X Series is engineered to sit perfectly on a table without obstructing views.

MXT-700

The MXT-700 7" Modero X® Series Tabletop Touch Panel (**FG5968-04**) (FIG. 1) is ideal for boardrooms, conference rooms, or auditoriums where a panoramic control surface is needed to provide access to multiple functions simultaneously while remaining elegantly unobtrusive. In residences, it is perfect for kitchens, home theaters, or home offices where the panoramic control surface can be used to manage systems throughout the house.



FIG. 1 MXT-700 touch panel

The MXT-700 features a 7.3" x 4.8" (186 mm x 122 mm), 8.8" (222 mm) diagonal display, with a viewable area of 6.05" x 3.54" (154 mm x 90 mm), 7.0" (178 mm) diagonal.

The device communicates via Ethernet (10/100 port, RJ-45 connector, supported IP and IP-based protocols: UCP, TCP, ICMP, ICSP, IGMP, DHCP, Telnet, FTP, DNS, RFB for VNC, and HTTP) and USB (2 USB host 2.0, Type A ports).

The MXT-700 also supports Near Field Communication (NFC) technology (please see the *NFC* section on page 11 for more information) and Bluetooth keyboard and mouse use via the optional MXA-BT Bluetooth Adapter.



FIG. 2 MXT-700 side view

MXT-700 Specifications	
Power Requirements:	PoE (Power over Ethernet), 802.3af, class 3
Power Consumption:	<ul style="list-style-type: none"> • Full-On: 8W maximum • Standby: 3.2 W • Shutdown: 1 W
Front Panel Components:	
NFC Transceiver:	Antenna and transceiver for Near Field Communications device detection and interaction.
Light Sensor:	Photosensitive light detector for automatic adjustment of the panel brightness.
Motion Sensor:	Proximity detector to wake the panel when it is approached. <ul style="list-style-type: none"> • Typical Range: 1 foot (30.48 cm) • <i>Maximum Range</i>: 3 feet (91.44 cm) • <i>Range width</i>: 10 degrees
Sleep Button:	Single button on top of panel for placing panel in sleep mode, for powering off the panel, and for accessing the Settings Pages.
Microphone:	-42dB ± 3dB sensitivity FET microphone
Speakers:	4 ohm, 2 Watt, 300Hz cutoff frequency
Rear Panel Components:	
USB connections:	2 easily accessible USB ports on rear of base, used for connection to keyboard, mouse, or USB drive.
Ethernet 10/100 Port and Cable:	10/100 Base-T RJ-45 connector for Ethernet connectivity and PoE.
Touch Panel Display:	
Display Type:	TFT Active Matrix Color LCD with Fringe Field Switching (FFS) - Wide viewing angle technology
Display Size:	7.3" x 4.8" (186 mm x 122 mm), 8.8" (222 mm) diagonal
Viewable Area:	6.05" x 3.54" (154 mm x 90 mm), 7.0" (178 mm) diagonal
Viewing Angle:	<ul style="list-style-type: none"> • Vertical: ± 89° • Horizontal: ± 89°
Screen Resolution (W x H):	1024x600
Aspect Ratio (W x H):	16x9
Brightness:	400 cd/m2
Contrast Ratio:	800:1
Color Depth:	16,7M colors
Backlight Type:	LED
Touch Overlay:	Projected Capacitive; Multi-touch support, 3 simultaneous max.
Communications:	
Ethernet:	10/100 port, RJ-45 connector and cable. Supported IP and IP-based protocols: UCP, TCP, ICMP, ICSP, IGMP, DHCP, Telnet, FTP, DNS, RFB (for VNC), HTTP
USB:	2 - USB host 2.0, Type A ports
Near Field Communications (NFC):	Supports standards ISO/IEC 15693, ISO/IEC 14443A, ISO/IEC 14443B; Unique Identifier (UID), Typical Range = .25", Maximum Range = .5"
Bluetooth:	HID Profile v1.1, Keyboard/Mouse Support, requires MXA-BT Bluetooth Adaptor.
Video:	
Supported Video Codecs:	<ul style="list-style-type: none"> • MPEG2-TS: MPEG-2 Main Profile @High Level up to 720p at 25 fps (decode only) • MJPEG up to 720p at 25 fps (decode only)
Streaming/File Formats:	MPEG-TS for MPEG2; HTTP for MJPEG

MXT-700 Specifications (Cont.)	
Audio:	
Streaming/File Formats:	WAV, MP3
Intercom:	Full Duplex VoIP, SIP v2.0 (supported with AMX-CSG)
Operating Environment:	<ul style="list-style-type: none"> • Operating Temperature: 32° F to 104° F (0° C to 40° C) • Storage Temperature: 4° F to 140° F (-20° C to 60° C) • Humidity Operating: 20% to 85% RH • Humidity Storage: 5% to 85% RH • Power ("Heat") Dissipation: On: 27.3 BTU/hr, Standby: 10.9 BTU/hr
Dimensions (HWD):	5" x 7 5/16" x 4 1/8" (126 mm x 187 mm x 105 mm)
Weight:	1.8 lbs (0.82 Kg)
Certifications:	<ul style="list-style-type: none"> • FCC Part 15 Class B • C-Tick CISPR 22 Class B • CE EN 55022 Class B and EN 55024 • CB Scheme IEC 60950-1 • IC • IEC/EN-60950 • RoHS
Included Accessories:	<ul style="list-style-type: none"> • MXT-700 Installation Guide (93-5968-03) • MXA-CLK Modero X Series Cleaning Kit (FG5968-16) • HPG-10 .75-inch Hydraport .75-IN. Grommet (FG570-01) • MXA-USB-C USB Cover Kit (FG5968-18)
Other AMX Equipment:	<ul style="list-style-type: none"> • PS-POE-AT, High-Power PoE Injector (FG423-81) • PS-POE-AF-TC, POE Injector, 802.3af Compliant (FG423-83) • MXA-BT Bluetooth USB Adaptor (FG5968-19) • MXA-CLK, Modero X Series Cleaning Kit (FG5968-16) • NXA-ENET8POE, Gigabit PoE Ethernet Switch (FG2178-62) • NXA-ENET8-2POE, Gigabit Switch, 8 Port POE, 2 Port SFP (FG2178-63)

Connector Locations

With the unit facing you, the two USB ports for peripherals are located on the rear right corner of the device (FIG. 3). The RJ45 connector for PoE is also located on the back of the device.

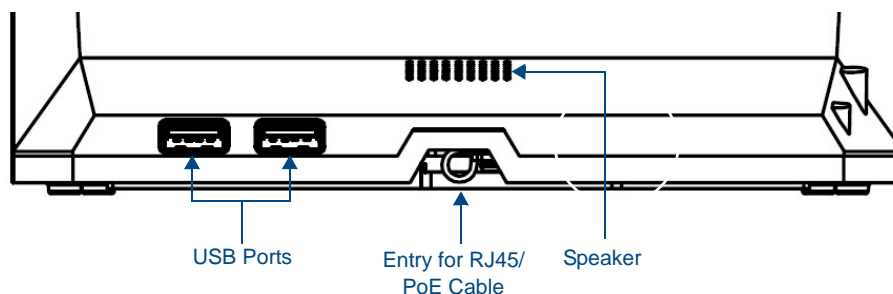


FIG. 3 MXT-700 USB port location

Memory

The MXT-700 comes with 512 MB of SDRAM and 4 GB of Flash memory, neither of which can be upgraded. A maximum of 2.4 GB is available to the user for projects.

Basic Operation

The MXT-700 is operated using its integral touchscreen, as well as the **Sleep** button on the top of the device (FIG. 1). If the device has gone into its Sleep Mode, a touch of the touchscreen or of the **Sleep** button will reactivate it.

Powering on the MXT-700

The MXT-700 may be powered on by touching and holding the **Sleep** button on the top of the device.

Microphone

The MXT-700 contains a built-in microphone above the touch screen for video and audio conferencing capabilities. This microphone is concealed by the casing.

Audio/Video Capabilities

The MXT-700 has the capability of displaying multiple JPEG and PNG files at one time. The device also supports streaming motion JPEG video (of the sort used by many IP and Web cameras), as well as MP3 and WAV audio files.

MXT-700-NC

The MXT-700-NC (**FG5968-27**) No Comm touch panel does not have microphone capability. It otherwise has all of the functionality of the MXT-700 panel.

MXD-700

The MXD-700 7" Modero X Series Wall/Flush Mount Touch Panels (*Portrait Wall Mount: FG5968-08; Landscape Wall Mount: FG5968-14*) are ideal for boardrooms, conference rooms, or auditoriums where a panoramic control surface is needed to provide access to multiple functions simultaneously while remaining elegantly unobtrusive. In residences, they are perfect for kitchens, home theaters, or home offices where the panoramic control surface can be used to manage systems throughout the house.

The MXD-700 features a 7.3" x 4.8" (186 mm x 122 mm), 8.8" (222 mm) diagonal (Landscape) or 4.8" x 7.3" (122 mm x 186 mm), 8.8" (222 mm) diagonal (Portrait) display, with a viewable area of 6.05" x 3.54" (154 mm x 90 mm), 7.0" (178 mm) diagonal (Landscape) or 3.54" x 6.05" (90 mm x 154 mm), 7.0" (178 mm) diagonal.

The device communicates via Ethernet (10/100 port, RJ-45 connector, supported IP and IP-based protocols: UCP, TCP, ICMP, IGMP, DHCP, Telnet, FTP, DNS, RFB for VNC, and HTTP) and USB (1 USB host 2.0, Type A port).

The MXD-700 also supports Near Field Communication (NFC) technology (please see the *NFC* section on page 11 for more information) and Bluetooth keyboard and mouse use via the optional MXA-BT Bluetooth Adapter.

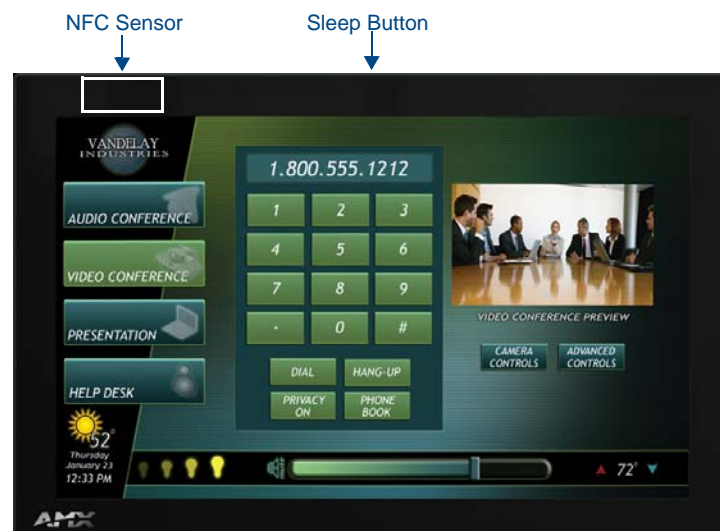


FIG. 4 MXD-700, Landscape Wall Mount

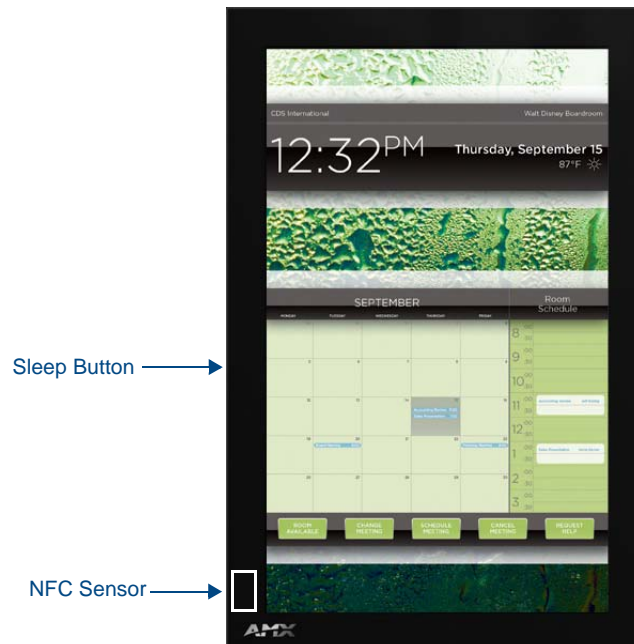



FIG. 5 MXD-700 (Portrait Wall Mount)

MXD-700 Specifications	
Power Requirements:	PoE (Power over Ethernet), 802.3af, class 3
Power Consumption:	<ul style="list-style-type: none"> • <i>Full-On</i>: 8W maximum • <i>Standby</i>: 3.2 W • <i>Shutdown</i>: 1 W
Front Panel Components:	
NFC Transceiver:	Antenna and transceiver for Near Field Communications device detection and interaction.
Light Sensor:	Photosensitive light detector for automatic adjustment of the panel brightness.
Motion Sensor:	Proximity detector to wake the panel when it is approached. <ul style="list-style-type: none"> • <i>Typical Range</i>: 1 foot (30.48 cm) • <i>Maximum Range</i>: 3 feet (91.44 cm) • <i>Range width</i>: 10 degrees
Sleep Button:	Single button on edge of panel for placing panel in sleep mode, for powering off the panel, and for accessing the Settings Pages.
Microphone:	-42dB ± 3dB sensitivity FET microphone
Speakers:	4 ohm, 2 Watt, 300Hz cutoff frequency
Rear Panel Components:	
USB Port:	USB connector used for keyboard and mouse connections, or for firmware uploads.
Ethernet 10/100 Port:	10/100 Base-T RJ-45 connector for Ethernet connectivity and PoE.
Touch Panel Display:	
Display Type:	TFT Active Matrix Color LCD with Fringe Field Switching (FFS) - Wide viewing angle technology
Display Size:	<ul style="list-style-type: none"> • <i>Landscape</i>: 7.3" x 4.8" (186 mm x 122 mm), 8.8" (222 mm) diagonal • <i>Portrait</i>: 4.8" x 7.3" (122 mm x 186 mm), 8.8" (222 mm) diagonal
Viewable Area (W x H):	<ul style="list-style-type: none"> • <i>Landscape</i>: 6.05" x 3.54" (154 mm x 90 mm), 7.0" (178 mm) diagonal • <i>Portrait</i>: 3.54" x 6.05" (90 mm x 154 mm), 7.0" (178 mm) diagonal

MXD-700 Specifications (Cont.)	
Touch Panel Display (Cont.):	
Viewing Angle:	<ul style="list-style-type: none"> Vertical: $\pm 89^\circ$ Horizontal: $\pm 89^\circ$
Screen Resolution (W x H):	<ul style="list-style-type: none"> <i>Landscape</i>: 1024x600 <i>Portrait</i>: 600x1024
Aspect Ratio (W x H):	<ul style="list-style-type: none"> <i>Landscape</i>: 16:9 <i>Portrait</i>: 9:16
Brightness:	400 cd/m ²
Contrast Ratio:	700:1
Color Depth:	16,7M colors
Backlight Type:	LED
Touch Overlay:	Projected Capacitive; Multi-touch support, 3 simultaneous max.
Communications:	
Ethernet:	10/100 port, RJ-45 connector and cable. Supported IP and IP-based protocols: UCP, TCP, ICMP, ICSP, IGMP, DHCP, Telnet, FTP, DNS, RFB (for VNC), HTTP
USB:	1 - USB host 2.0, Type A ports
Near Field Communications (NFC):	Supports standards ISO/IEC 15693, ISO/IEC 14443A, ISO/IEC 14443B; Unique Identifier (UID), Typical Range = .25", Maximum Range = .5"
Bluetooth:	HID Profile v1.1, Keyboard/Mouse Support, requires MXA-BT Bluetooth Adaptor.
Video:	
Streaming/File Formats:	MPEG-TS for MPEG2; HTTP for MJPEG
Audio:	
Streaming/File Formats:	WAV, MP3
Intercom:	Full Duplex VoIP, SIP v2.0 (supported with AMX-CSG)
Operating Environment:	<ul style="list-style-type: none"> Operating Temperature: 32° F to 104° F (0° C to 40° C) Storage Temperature: 4° F to 140° F (-20° C to 60° C) Humidity Operating: 20% to 85% RH Humidity Storage: 5% to 85% RH Power ("Heat") Dissipation: On: 27.3 BTU/hr, Standby: 10.9 BTU/hr
Dimensions (HWD):	<ul style="list-style-type: none"> <i>Landscape</i>: 4.8" x 7.3" x 2.5" (122 mm x 186 mm x 63 mm) <i>Portrait</i>: 7.3" x 4.8" x 2.5" (186 mm x 122 mm x 63 mm)
Weight:	1.4 lbs (0.64 Kg)
Certifications:	<ul style="list-style-type: none"> FCC Part 15 Class B C-Tick CISPR 22 Class B CE EN 55022 Class B and EN 55024 CB Scheme IEC 60950-1 IC IEC/EN-60950 RoHS
Included Accessories:	<ul style="list-style-type: none"> MXD-700 Installation Guide (93-5968-07) MXA-CLK Modero X Series Cleaning Kit (FG5968-16) MXD-700 Installation Template (68-5968-04)

MXD-700 Specifications (Cont.)**Other AMX Equipment:**

- PS-POE-AT, High Power PoE Injector (**FG423-81**)
- PS-POE-AF-TC, POE Injector, 802.3af Compliant (**FG423-83**)
- MXA-BT Bluetooth USB Adaptor (**FG5968-19**)
- CB-MXP7, Rough-In Box and Cover Plate for Modero X Series Touch Panel, 7" (**FG039-18**)
- NXA-ENET8POE, Gigabit PoE Ethernet Switch (**FG2178-62**)
- NXA-ENET8-2POE, Gigabit Switch, 8 Port POE, 2 Port SFP (**FG2178-63**)

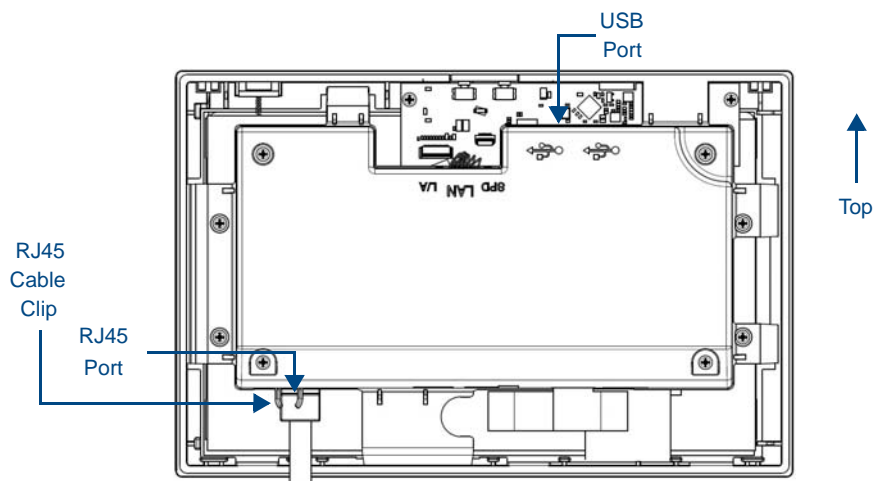**FIG. 6** Rear of the MXD-700 (Landscape)**Memory**

The MXD-700 comes with 512 MB of SDRAM and 4 GB of Flash memory, neither of which can be upgraded. A maximum of 2.4 GB is available to the user for projects.

Basic Operation

The MXD-700 is operated using its integral touchscreen, as well as the **Sleep** button on the top of the device (FIG. 4). If the device has gone into its Sleep Mode, a touch of the touchscreen or of the **Sleep** button will reactivate it.

Powering on the MXD-700

The MXD-700 may be powered on by touching and holding the **Sleep** button on the top of the device.

Microphone

The MXD-700 contains a built-in microphone above the touch screen for video and audio conferencing capabilities. This microphone is concealed by the casing.

Audio/Video Capabilities

The MXD-700 has the capability of displaying multiple JPEG and PNG files at one time. The device also supports streaming motion JPEG video (of the sort used by many IP and Web cameras), as well as MP3 and WAV audio files.

MXD-700-NC

The MXD-700-P-NC (**FG5968-28**) and MXD-700-L-NC (**FG5968-29**) No Comm touch panels do not have microphone capability. These otherwise have all of the functionality of the MXD-700 panels.

MXD/T-700 Features

Picture View

By connecting a USB drive via one of the device's USB ports (FIG. 3), Picture View allows the MXT-700 to access JPEG images on that drive and display them on the touchscreen (FIG. 7). Individual images may be accessed at any time, or the entire collection may be displayed for predetermined times. Picture View may be stopped at any time by removing the USB drive, and the MXT-700 will return to its default display page.



FIG. 7 Picture View display



The maximum source resolution for Picture View is 1920x1920 pixels. The maximum displayed resolution is the same as the screen resolution.

To start Picture View:

1. Connect a USB drive to the device. Picture View will automatically recognize all available images on the drive and start displaying them on the touchscreen.
2. When the images begin to display, touch any place on the touchscreen to open the configuration popup menu (FIG. 8). If no selection is made, this menu will remain in place for 15 seconds and then disappear. It may be accessed again by touching anywhere on the touchscreen.

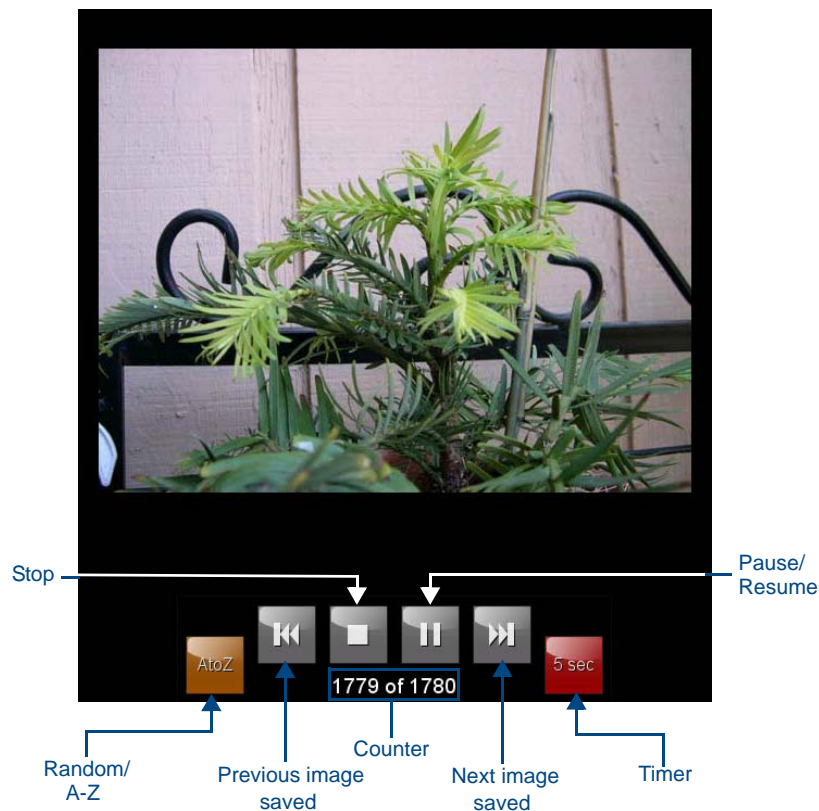


FIG. 8 Picture View configuration popup menu

3. On the leftmost amber button, select between **Rand** (images display at random) and **A-Z** (images display in alphabetical order based on the name of the file).
4. The four grey buttons allow scrolling through saved images and the rate of display:
 - The **Previous Image Saved** button returns the display to the first image uploaded by Picture View.
 - The **Stop** button stops Picture View and returns to the default panel page.
 - The **Pause/Resume** button allows the display to stop on one particular image. Press it again to resume the display procession.
 - The **Next Image Saved** button returns the display to the last image uploaded by Picture View. If the panel has not accessed all of the images available on a USB drive, Picture View will display the last one uploaded to date.
5. On the rightmost red button, select the number of seconds a selected image will be displayed in Picture View. This may be selected between 5, 10, 15, 30, and 60 seconds.
6. The counter beneath the buttons displays the number of images currently uploaded by the MXT-700 versus the number detected on the USB drive.

Preview Mode and Normal Mode

Picture View has two modes: Preview Mode and Normal Mode. Preview Mode allows the user to configure Picture View. Once a USB drive containing images is inserted into the panel, the images will begin to display. Touching any place on the display will result in the configuration popup to slide from the bottom of the display.

Picture View goes into its Normal Mode when the MXT-700 goes into idle timeout while connected to a USB drive. Normal Mode displays images until the touchscreen is touched, or some other wakeup event is detected. When the device goes back into timeout, Normal Mode will return to displaying images until the USB drive is removed from the device.

Picture View Send Command

The **^PIC** Send Command stops either mode of Picture View, or starts Preview Mode. For more information, please refer to the *Modero X Series Programming Guide*, available at www.amx.com.



All images must be in JPEG format. PNG and other image formats cannot be viewed through Picture View.

Configuration

The MXT-700 and MXD-700 are equipped with Settings Pages that allow you to set and configure various features on the panels. For more information on connecting and configuring the touch panels to a network, please refer to the *Modero X Series Programming Guide*, available at www.amx.com.

Bluetooth Support

Both the MXT-700 and the MXD-700 allow the use of Bluetooth keyboard and mouse combinations, using HID Profile v1.1. Using a keyboard and mouse with the device requires use of the MXA-BT Bluetooth USB Adapter (**FG5968-19**).

NFC

Both the MXT-700 and the MXD-700 support Near Field Communications™ (NFC) Technology. NFC technology facilitates making transactions, exchanging digital content, and connecting electronic devices with a touch. NFC transmissions are short-range (from a touch to a few centimeters), working with existing contactless card technologies and containing built-in capabilities to support secure applications. By using NFC technology, users may receive access to touch panels and touch panel pages through access badges and other card options.

Common Access Card (CAC) Support In MXT/D-1000

Card Type	Card Unique Identifier (UID)	Card Data	Personal Identity Verification (PIV) Card holder UID
15693	8 byte UID	Not Supported	N/A
14443A Non-Gov't	4, 7 or 10 byte UID (1)	Not Supported	N/A
14443A Gov't	4, 7 or 10 byte UID (1)	Not Supported (2)	Not currently
14443B Non-Gov't	4 byte UID	Not Supported	N/A
14443B Gov't	4 byte UID	Not Supported (2)	Not currently
FeliCa	Not Supported	Not Supported	N/A
(1) The UID can be a fixed unique number or a random number dynamically generated by the card.			
(2) Requires contact card reader (not accessible via NFC)			

The maximum range for the NFC antenna is 0.5" (12.7 mm), but the typical usage range is 0.25" (6.35 mm). The antenna itself is accessible from the front of the panel, 3.25" (82.55 mm) from the left corner of the panel and 0.375" (9.53 mm) from the top edge. When using an NFC device with the MXT-700, you should align your device's antenna with the center of the touch panel's antenna (FIG. 1 and FIG. 4).



To facilitate NFC antenna access, you may want to add an icon to the panel's page(s), pointing to the location of the antenna on the panel.



For further information, please refer to the video available at the AMX Configure channel on YouTube: <http://www.youtube.com/user/AMXconfigure>

Cleaning the Touch Overlay and Case

Both the MXT-700 and the MXD-700 come with the MXA-CLK Modero X Series Cleaning Kit (**FG5968-16**), which may be used to clean fingerprints and dirt from the device. This kit comes with cleaning cloths and a bottle of cleaning fluid specifically for use with the device.

When cleaning the device, **do not directly spray the device with cleaning fluid**. Instead, spray the cloth and then apply the cloth to the touch screen. Do **NOT** use abrasives of any type to clean the device, as abrasives may permanently damage or remove the device's finish.

Installation

MXT-700 Installation

Any USB peripherals (mouse, keyboard, etc.) may be connected to one of the two USB ports on the rear of the device (FIG. 9). Updates to the device's firmware are also made via the USB ports.

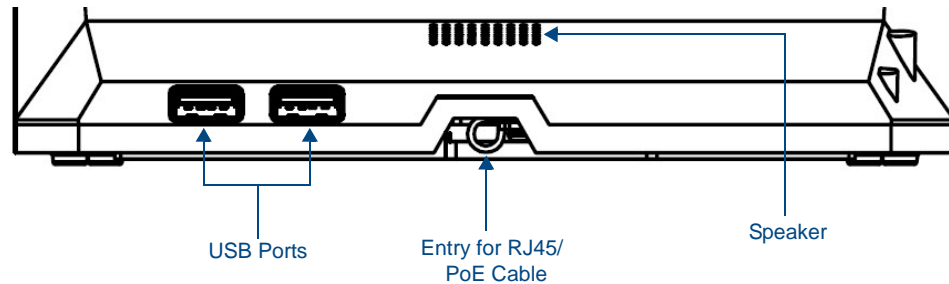


FIG. 9 Connectors on the rear of the MXT-700

Power via Power Over Ethernet

Power for the MXT-700 is supplied via Power Over Ethernet (PoE), utilizing an AMX-certified, capacitive touch-compliant PoE injector or other approved AMX PoE power source. The incoming Ethernet cable should be connected to the RJ45 port on the cable attached to the device (FIG. 10).

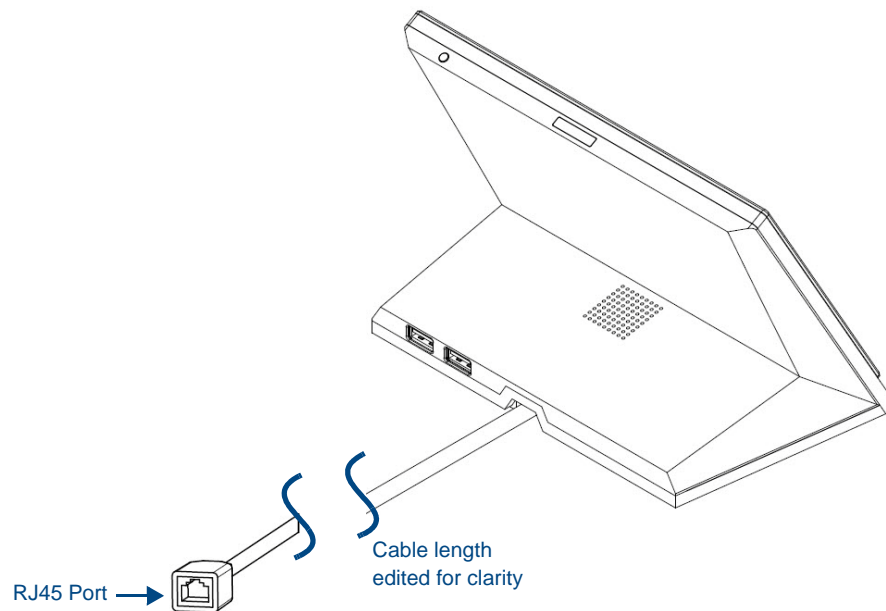


FIG. 10 Back of the MXT-700, showing RJ45 port and cable for PoE

Ethernet Cable Installation and Modification

In installations where you wish to conceal the Ethernet cable, a hole at least 1.00" (2.54 cm) in diameter is required in the surface to allow passage of the female RJ45 connector (FIG. 10). If using a smaller hole is unavoidable, you will need to disconnect the Ethernet cable (**ECA5968-05**) from the device.



The minimum diameter hole through which the Ethernet cable may pass is 0.50" (1.27 cm).

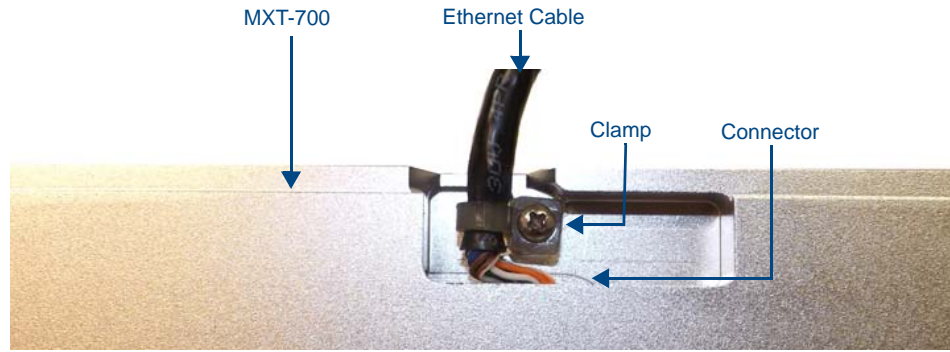


FIG. 11 Bottom of the MXT-700

To disconnect and reconnect the MXT-700's Ethernet cable to allow use of a hole smaller than 1.00" in diameter:

1. On a soft surface, turn the MXT-700 face-down to access the bottom of the device.
2. Remove the clamp holding the Ethernet cable (FIG. 11) until the Ethernet cable moves freely.
3. Remove the Ethernet cable connector and pull the cable out of the clamp.
4. Pass the Ethernet cable (**ECA5968-05**) through the hole, with the RJ45 connector on the other side of the installation surface from the device.
5. Press the Ethernet cable back into the clamp. Do **NOT** tighten the clamp at this time.
6. Using a nonconductive item such as a wooden stick, reinsert the Ethernet cable connector into the device. Use the stick to ensure that the connector is properly seated.
7. Tighten the clamp to secure the Ethernet cable. Make sure the clamp is around the bundled black cable, not the individual wires
8. Connect the RJ45 connector to its incoming Ethernet cable and apply power.

A Note About Wall and Rack Installation

Some products are installed in areas of differing temperature and cooling methodologies. These include products installed in walls, racks, cabinets, etc. Those areas may have different temperatures and/or cooling approaches that must be taken into consideration to maintain the product within the specified operating temperature.

FIG. 12 shows an AMX device installed in a wall with a filled volume (such as with insulation or concrete), as well as with a closed volume (such as between studs in an otherwise finished wall). The diagram shows how heat generated by the device or other devices may have no way to escape, and may build up to levels that may affect device operation.

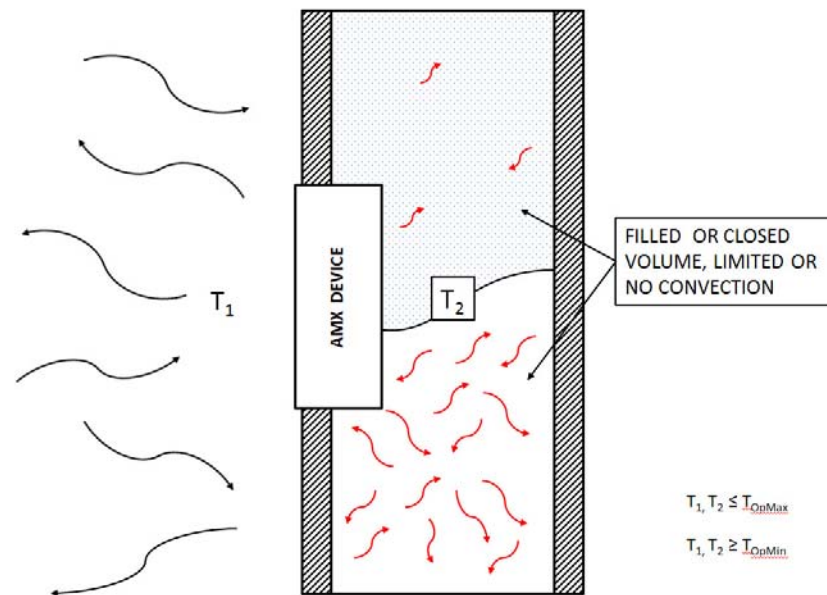


FIG. 12 Heat convection in filled or closed volume, limited or no convection

In FIG. 13, the diagram displays an AMX device in a typical rack mounting, with full air circulation around the front and back of the device. In this case, the main concern is with heat building up between components, possibly to levels that may affect device operation.

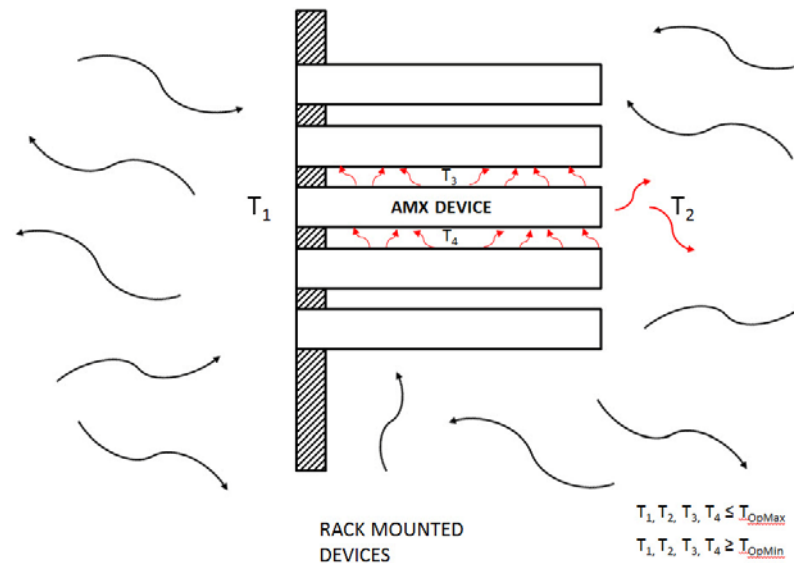


FIG. 13 Heat convection in rack-mounted devices

Installation Recommendations

During any installation, a lack of ventilation may produce conditions that may adversely affect the device's operation. In these circumstances, special care must be made to make sure that temperatures within enclosed areas do not exceed the device's maximum rated temperature.



While the outside temperature of the device may be at or below its maximum operating temperature, special care must be taken before and during installation to ensure that the maximum operating temperature is not exceeded within wall or rack installation spaces.

MXD-700 Installation

The MXD-700 may be installed directly into a solid surface environment, using either solid surface screws or the included locking tabs for different mounting options. Once installed, the MXD-700 is contained within a clear outer housing known as the back box (FIG. 14). This back box is removed when installing the device into a wall or into a Rough-In Box.

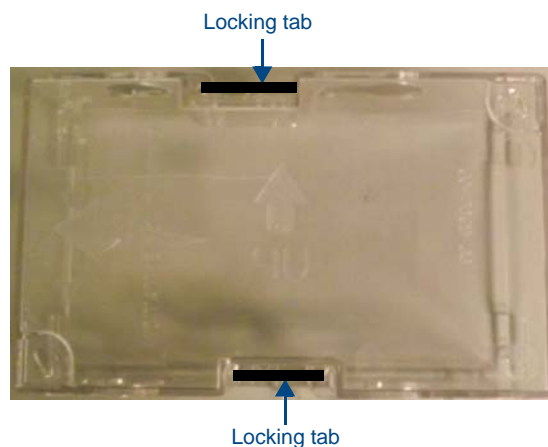


FIG. 14 MXD-700 Back Box

Power Via Power Over Ethernet

Power for the MXD-700 is supplied via Power Over Ethernet (PoE), utilizing an AMX-certified, capacitive touch-compliant PoE injector or other approved AMX PoE power source. The incoming Ethernet cable should be connected to the RJ45 port on the MXD-700 (FIG. 15 and FIG. 16).

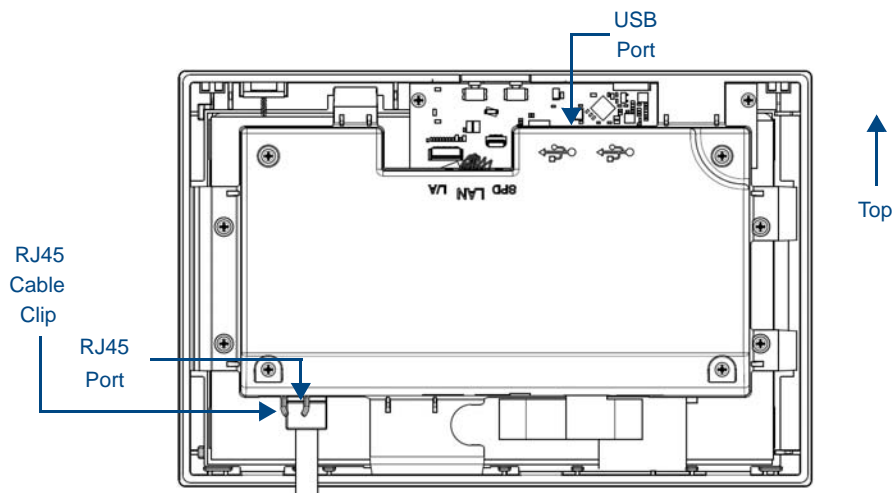


FIG. 15 Rear of the MXD-700 (Landscape)

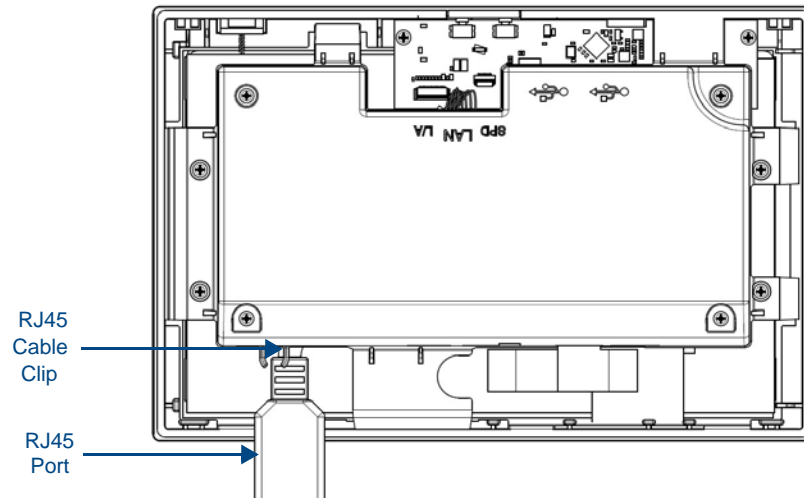


FIG. 16 Rear of the MXD-700 (with RJ45 connection extended)

Installing the MXD-700 into a wall

The MXD-700 comes with a clear plastic backbox (designed to attach the panel to most standard wall materials). This backbox has two locking tabs (one on top and one on bottom) to help lock the backbox to the wall. These locking tabs are only extended AFTER the backbox is inserted into the wall. (FIG. 17).

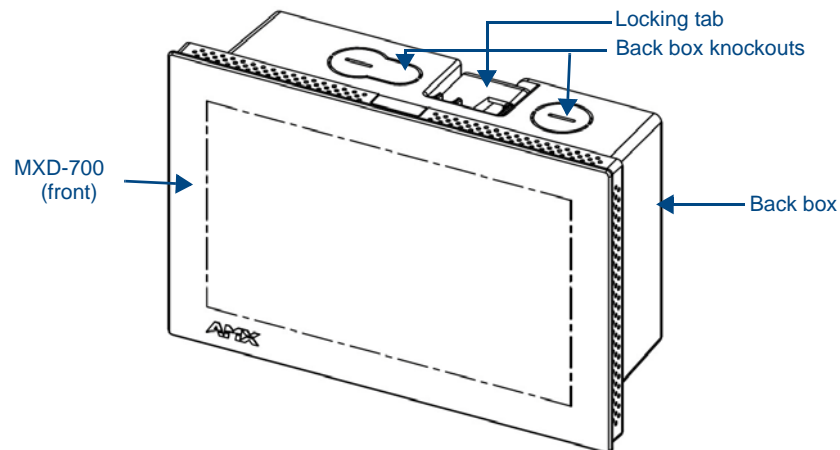


FIG. 17 Oblique view of MXD-700 (Landscape)



WARNING

When installing the backbox, make sure that the assembly is in the correct position and in the correct place. Once the locking tabs are extended and locked into place, removing the backbox may be difficult without having access to the back of the wall or causing damage to the wall.



NOTE

For typical mounting surfaces, such as drywall, use the locking tabs as the primary method for securing the back box to the surface. For thin walls or solid surfaces, use mounting screws (not included).



NOTE

In order to guarantee a stable installation of the MXD-700, the thickness of the wall material must be a minimum of .50 inches (1.27cm) and a maximum of .875 inches (2.22cm). The mounting surface should also be smooth and flat.



The maximum recommended torque to screw in the locking tabs on the plastic back box is 5 IN-LB [56 N-CM]. Applying excessive torque while tightening the tab screws, such as with powered screwdrivers, can strip out the locking tabs or damage the plastic back box.

To install the back box:

1. Prepare the area by removing any screws or nails from the drywall before beginning the cutout process.
2. For best results, use the MXD-700 Installation Template (**68-5968-04**) to ensure proper placement (FIG. 18). The template is marked on one side with directions for both landscape and portrait installations to ensure that the touch panel and back box are properly aligned.

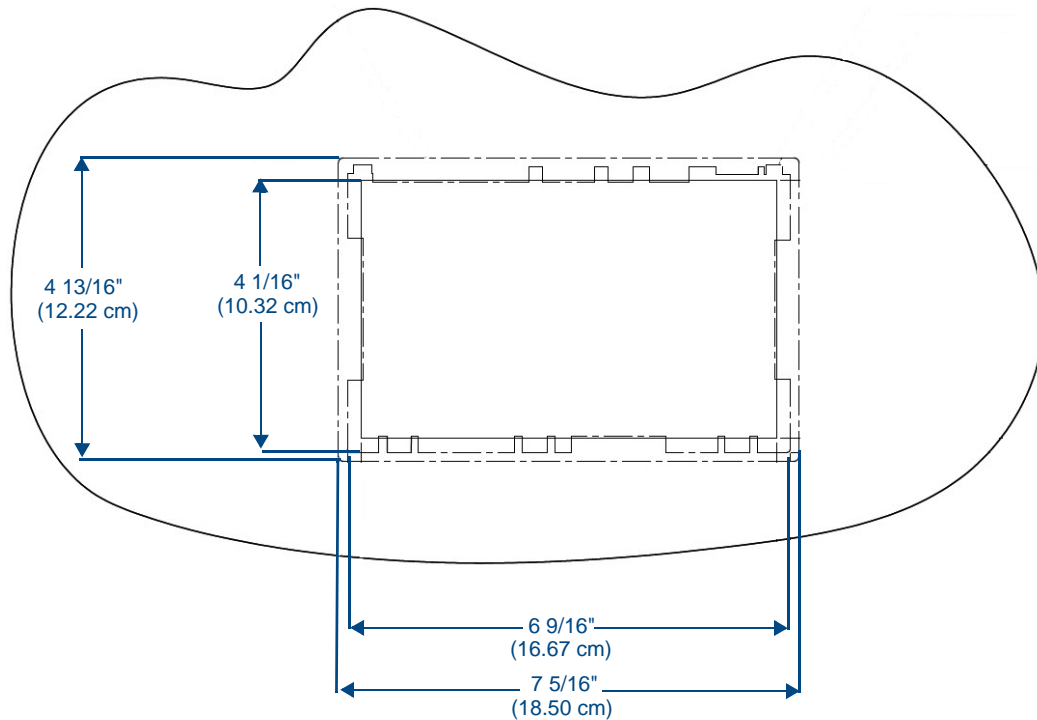


FIG. 18 MXD-700 Installation Template



Using the included template to select the final placement of the back box is highly recommended. The outside edges of the template are the same dimensions as the touch panel, which allows you to troubleshoot possible conflicts with wall edges, doors, and other potential obstacles.

3. After ensuring proper placement, cut out the mounting surface for the back box, using the MXD-700 Installation Template as a guide.



Making sure the actual cutout opening is slightly smaller than the provided dimensions is highly recommended. This action provides the installer with a margin for error if the opening needs to be expanded. Too little wall material removed is always better than too much.

4. Thread the incoming Ethernet from their terminal locations through the surface opening (FIG. 19). *Leave enough slack in the wiring to accommodate any re-positioning of the panel.*

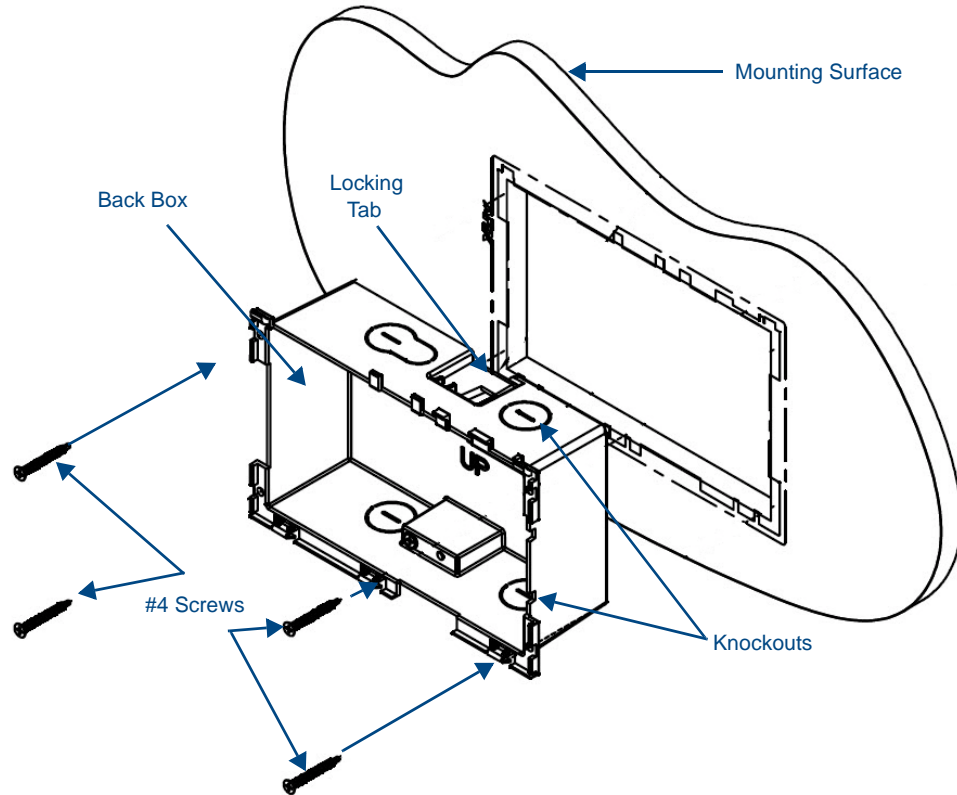


FIG. 19 MXD-700 Back Box Installation (Landscape)

5. Remove the back box knockouts (FIG. 19) and thread the incoming wiring through the knockout holes. To facilitate installation, thread the Ethernet cable through a bottom knockout (Landscape) or a right-side knockout (Portrait), and the USB cable through a top knockout (Landscape) or left knockout (Portrait).
6. Thread the incoming Ethernet and USB wiring (if USB access is desired) from the surface opening and through the knockouts.
7. Push the back box into the mounting surface. Insure that the locking tabs lie flush against the back box and that the back box goes freely into the opening.
8. Extend the locking tabs on the sides of the back box by tightening the screws inside the box until snug. Not all of the tabs must be extended to lock the back box in place, but extending a minimum of the top and bottom tabs is highly recommended. Apply enough pressure to the screw head to keep the box flush with the wall: this ensures that the locking tabs will tighten up against the inside of the wall. The back box is clear to allow visual confirmation that the tabs have been extended and are gripping the wall, as well as in assisting with removal if necessary.
9. For additional strength, #4 mounting screws (not included) may be secured through circular holes located at the left and right sides of the MXD-700 (FIG. 19). In order to prevent damage to the touch panel, make sure that these are flush with the back box.
10. Insert each connector into its corresponding location along the back of the device (FIG. 15). To reach the RJ45 connector, gently pull it from beneath the electronics cover (FIG. 16). Attach the Ethernet cable and gently push the connection back under the cover.



To facilitate connection of the RJ45 connector to the Ethernet cable, press the RJ45's cable into the RJ45 cable clip to hold it in a stable position. Make sure to remove the cable from the cable clip before continuing the rest of the installation.

11. Test the incoming wiring by attaching the panel connections to their terminal locations and applying power. Verify that the panel is receiving power and functioning properly to prevent repetition of the installation.



Do not disconnect the connectors from the touch panel. The unit must be installed with the attached connectors before being inserted into the mounting surface.

12. Latch the panel onto the top hooks on the back box and push it down (Landscape) onto the bottom snaps or on the left side and push it to the right (Portrait) (FIG. 20). Press gently but firmly on the ends until the snaps “click” to lock it down.

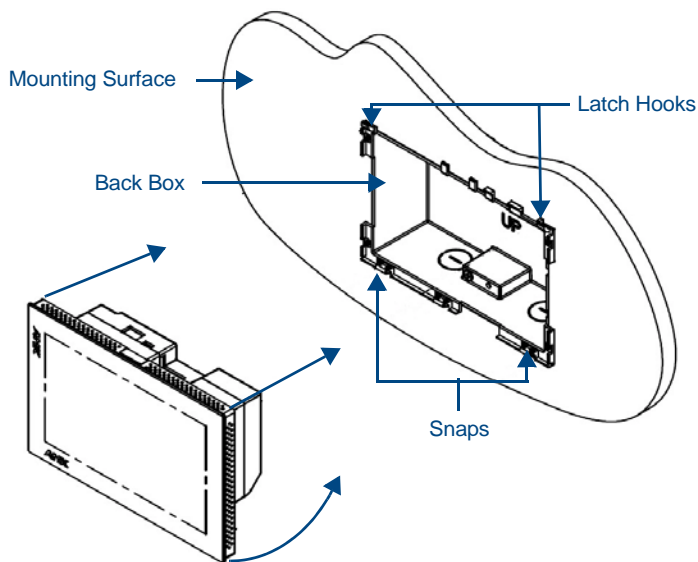


FIG. 20 Installing the MXD-700



If you see a gap between the panel and the back box, or feel any binding while locking down the panel, stop immediately and verify that no cables or other items are in the way. Do not force the panel into position, as this can cause damage to the touch screen or the panel electronics.

13. Reconnect the terminal Ethernet and USB to their respective locations on either the Ethernet port or NetLinx Master.

Uninstalling the MXD-700

The MXD-700 is held in place to the back box via latch hooks and clips on the back box (FIG. 21), securing it to the mounting surface. In certain circumstances, such as firmware updates or other maintenance that requires accessing the device's USB port, the device may need to be removed from the back box. The clips that lock down the MXD-700's bottom edge (Landscape) or right edge (Portrait) may be unlatched in order to remove the device from the mounting surface.

To remove an MXD-700 from its back box:

1. The bottom (Landscape) or right side (Portrait) of the MXD-700 has a series of ventilation holes along the molding (FIG. 21). From each end, count to the fifth holes on the center row.

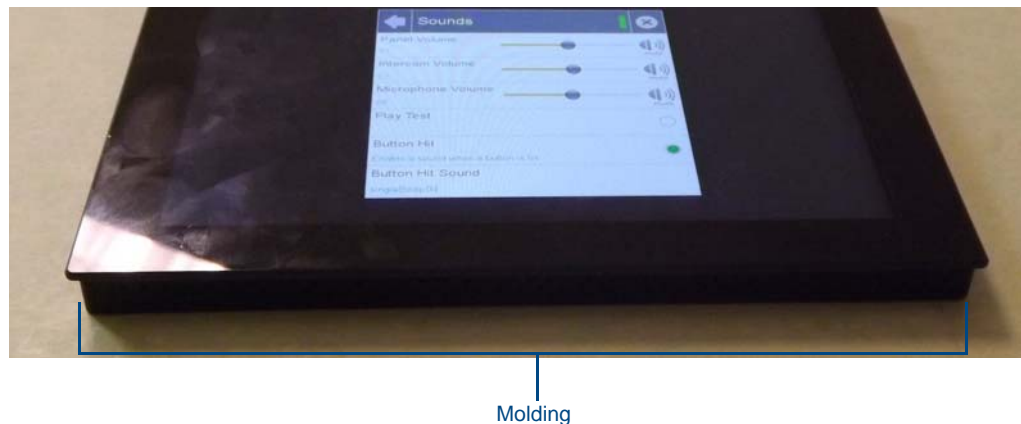


FIG. 21 Underside of MXD-700

2. With a stout, strong point (a push pin or straightened paper-clip, for example), carefully press into the access holes in either end of the molding (FIG. 22) until the snap is disconnected. To facilitate the disconnection, grasp the bottom of the panel (Landscape) or right side (Portrait) and pull gently outward until the side of the panel is free of the snap. Use your other hand to hold stable the front of the touch panel.



FIG. 22 Location of access holes on MXD-700 molding



WARNING

Always pull on the frame of the touch panel. NEVER pull on the glass edge.

3. When the first side is free, repeat the process with the other.
4. With the edge of the touch panel free, carefully lift up and out (Landscape) or to the left and out (Portrait) to remove the touch panel from the back box. Be careful not to pull on the cables or connectors.
5. To reattach the panel to its back box, repeat the installation procedure on page 20.



VIDEO

For further information on this procedure, please refer to the video available at the AMXconfigure channel on YouTube: <http://www.youtube.com/user/AMXconfigure>

Configuration and Programming



Programming the MXT-700 and MXD-700 require the use of the latest versions of NetLinx Studio and TPDesign 4, both available at www.amx.com.

Modero X Series Programming Guide

Information on *Settings* pages, panel configuration, and programming is included in the *Modero X Series Programming Guide*, available at www.amx.com.

Upgrading Firmware

Overview

The latest firmware (*.kit) file for each panel is available to download from www.amx.com. To download firmware files, go to the catalog page for your panel type, and click the link under "**Firmware Files**" on the right side of the catalog page (FIG. 23):




FIG. 23 www.amx.com - example "Firmware Files" link on a touch panel catalog page

The ZIP file that is downloaded via this link contains the firmware (*.kit) file that can be loaded on the panel (as well as release notes and any relevant programming instructions).

Upgrading Firmware via USB Flash Drive

Firmware and TPDesign4 files may be transferred to the panel via USB flash drive. When looking at the device from the front, the MXT-700 has two USB ports on the rear right of the device (FIG. 3).

Load the Firmware on a USB Flash Drive

1. Insert the USB flash drive in an available USB port on your PC.
 - The flash drive must be in either FAT32 or FAT16 format.
 - 32GB is the maximum acceptable size for flash drives used with touch panels.
 - For wall-mounted panels (MXD-xxx), accessing the USB ports may require removing the panel from the wall mount (if a USB extension was not already installed).
2. Create a directory on the USB flash drive with one of the following names, depending on the panel you are upgrading:
 - Note that the name must match exactly (do not include the quotes).
 - These directory names are *not* case-sensitive:

Directory Names for Firmware Files - by Touch Panel Type		
Directory Name	Panel Type(s)	
"MXD-2000XL-PAN"	MXD-2000XL-PAN-P (FG5968-05) MXD-2000XL-PAN-L (FG5968-11)	MXD-2000XL-PAN-P-NC (FG5968-33) MXD-2000XL-PAN-L-NC (FG5968-34)
"MXT-2000XL-PAN"	MXT-2000XL-PAN (FG5968-01)	MXT-2000XL-PAN-NC (FG5968-32)
"MXD-1900L-PAN"	MXD-1900L-PAN-P (FG5968-06) MXD-1900L-PAN-L (FG5968-12)	MXD-1900L-PAN-P-NC (FG5968-22) MXD-1900L-PAN-L-NC (FG5968-23)
"MXT-1900L-PAN"	MXT-1900L-PAN (FG5968-02)	MXT-1900L-PAN-NC (FG5968-21)
"MXT-1000"	MXT-1000 (FG5968-03)	MXT-1000-NC (FG5968-24)
"MXD-1000"	MXD-1000-P (FG5968-07) MXD-1000-L (FG5968-13)	MXD-1000-P-NC (FG5968-25) MXD-1000-L-NC (FG5968-26)
"MXT-700"	MXT-700 (FG5968-04)	MXT-700-NC (FG5968-27)
"MXD-700"	MXD-700-P (FG5968-08) MXD-700-L (FG5968-14)	MXD-700-P-NC (FG5968-28) MXD-700-L-NC (FG5968-29)
"MXD-430"	MXD-430-P (FG5968-15)	

3. Copy the firmware (.kit) file to be transferred (for example, "SW5968_ModeroX_v2_103_52.kit") into this directory on the flash drive.



NOTE

Make sure this is the only .kit file in this directory - if not, the latest version will be used.

4. Eject or unmount the flash drive from the PC.

Transfer the Firmware File From the Flash Drive to the Touch Panel

1. Connect the USB Flash Drive to one of the USB Type A ports on the panel.



NOTE

The Micro USB port cannot be used for firmware upgrades.

2. Go to the **Install Firmware** setup page (*Configuration->Admin->Install Firmware*):
 - a. Press and hold the *Sleep* button for 3 seconds to open the *Settings* page.

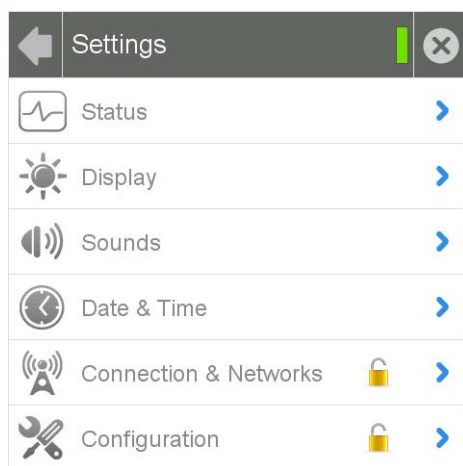


FIG. 24 Settings page

- b. From the *Settings* page, select the *Configuration* page. This may require entering a password.
 - c. From the *Configuration* page, select *Admin*.
 - d. From the *Admin Configuration* page, select *Install Firmware*.
 3. In the *Firmware Installation* page, select **New** to install new firmware from external disk.
 4. The popup page displays the name of the firmware file (for example, "SW5968_ModeroX_v2_103_52.kit").
 5. Select **Yes**, and follow the directions displayed on the popup.
 6. Once the panel reboots it will perform the firmware upgrade.
- After the upgrade, the unit contains the newly loaded version of firmware.

Upgrading from Previous Firmware

The MXT-700 and MXD-700 allow the option to revert the device to the previous firmware run before an upgrade. To upgrade the device from previously loaded firmware:

1. From the *Settings* page, select the *Configuration* page.
2. From the *Configuration* page, select *Admin*.
3. From the *Admin Configuration* page, select *Install Firmware*.
4. In the *Firmware Installation* page, select *Previous*.
5. The *Confirmation Dialog* box (FIG. 25) will ask “Are you sure you want to install the following firmware?” The option to choose **Yes** will be enabled after five seconds. Press **Yes** to load the firmware listed, and **No** to return to the *Firmware Installation* popup window.



FIG. 25 Previous Firmware installation confirmation dialog

6. If you choose **Yes**, the device will retrieve the files and then reboot.

Returning to Factory Default Firmware

The MXT-700 and MXD-700 allow the option to return the device to its original factory default firmware, which may be necessary in certain situations. To return the device to its factory default firmware:

1. From the *Settings* page, select the *Configuration* page.
2. From the *Configuration* page, select *Admin*.
3. From the *Admin Configuration* page, select *Install Firmware*.
4. In the *Firmware Installation* page, select *Factory*.
5. The *Confirmation Dialog* box (FIG. 26) will ask “Are you sure you want to install the following firmware?” The option to choose **Yes** will be enabled after five seconds. Press **Yes** to load the firmware listed, and **No** to return to the *Firmware Installation* popup window.



FIG. 26 Previous Firmware installation confirmation dialog box

6. If you choose **Yes**, the device will retrieve the files and then reboot.

Upgrading Firmware Via NetLinx Studio

The MXT-700 and MXD-700 use an Ethernet connection for programming, firmware updates, and touch panel file transfer via NetLinx Studio. If you have access to the panel's network, you may transfer files directly to the panel through NetLinx Studio.



Firmware upgrades cannot be made through an Ethernet-connected PC to the touch panel, unless that PC is connected to the panel's network. Upgrades cannot be made with NetLinx Studio through a USB connection to the panel from a PC. For more information on firmware transfers, please refer to the online help in NetLinx Studio.

To upgrade firmware via NetLinx Studio:

1. Launch NetLinx Studio and select **Settings > Master Communication Settings** from the Main menu to open the *Master Communication Settings* dialog (FIG. 27)

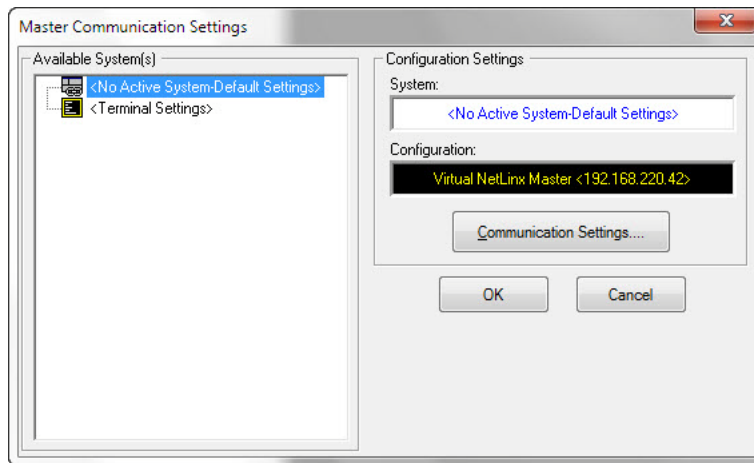


FIG. 27 Master Communications Settings dialog box

2. Click the **Communications Settings...** button to open the *Communications Settings* dialog (FIG. 28).

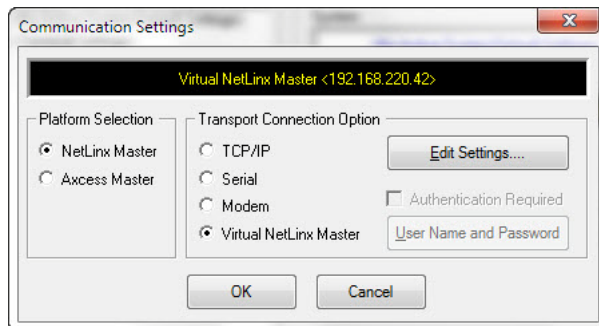


FIG. 28 Communications Settings dialog box

3. Click on the **NetLinx Master** radio button from the *Platform Selection* section.
4. Click on the **Virtual Master** radio box from the *Transport Connection Option* section to configure the PC to communicate directly with a panel. Everything else, such as the Authentication, is greyed-out because this connection is not going through the Master's UI.

5. Click the **Edit Settings** button on the *Communications Settings* dialog to open the *Virtual NetLinx Master Settings* dialog (FIG. 29).

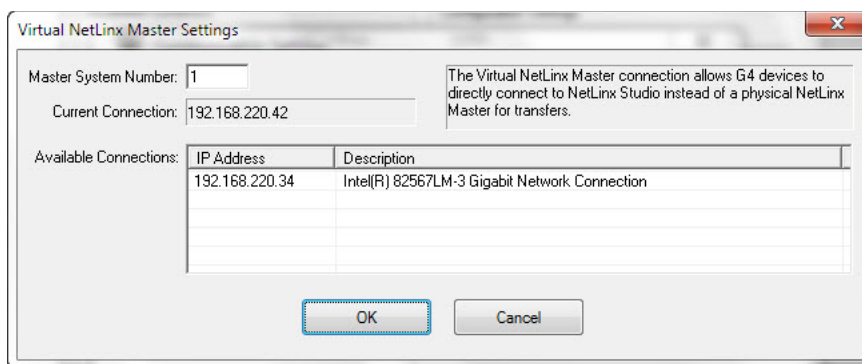


FIG. 29 Virtual NetLinx Master Settings

6. Within this dialog, enter the *Master System number*. The default is **1**.
7. In the *Available Connections* section, click on the IP address for the touch panel to select it.
8. In the *Virtual NetLinx Master Settings* dialog box, click **OK** to close the box.
9. In the *Communications Settings* dialog box, click **OK** to close the box.
10. In the *Master Communications Settings* dialog box, click **OK** to save your settings and return to the main NetLinx Studio application.
11. Click the **OnLine Tree** tab in the Workspace window to view the devices on the Virtual System. *The default System value is 1.*
12. Right-click on the *Empty Device Tree/System* entry and select **Refresh System** to re-populate the list.



The panel will not appear as a device below the virtual system number, in the Online Tree tab, until both the system number used in step 14 for the Virtual NetLinx Master is entered into the Master Connection section of the System Settings page and the panel is restarted.

13. The OnLine Tree should now display the connection to the device. The *Connection Status* Icon on the device may take up to five seconds to register the connection.

Viewing devices on the Virtual System

1. After the *Communication Verification* dialog window verifies active communication between the Virtual Master and the panel, click the **Online Tree** tab in the Workspace window (FIG. 30) to view the devices on the Virtual System. *The default System value is 1.*
2. Right-click on the System entry (FIG. 30) and select **Refresh System** to re-populate the list. Verify the panel appears in the **Online Tree** tab of the Workspace window.

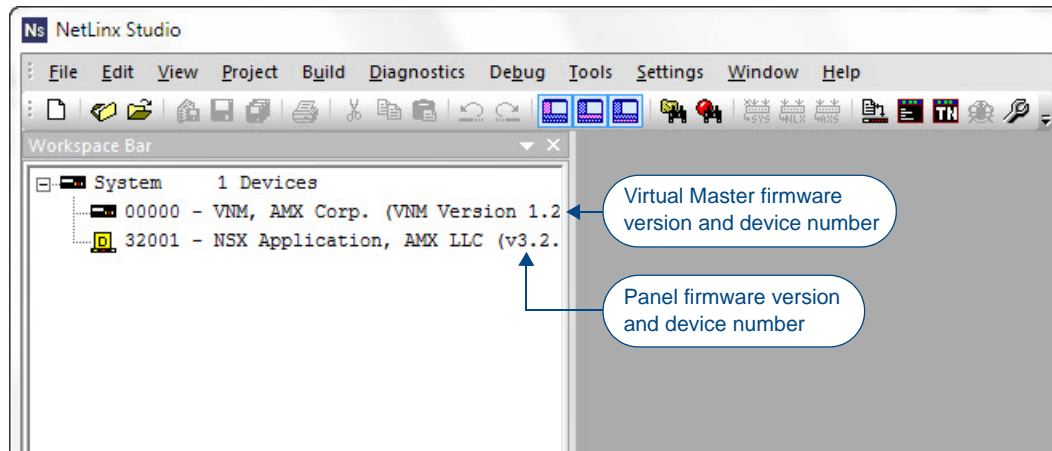


FIG. 30 NetLink Workspace window (showing panel connection via a Virtual NetLink Master)

Downloading firmware



The panel-specific firmware is shown on the right of the listed panel.

Download the latest firmware file from **www.amx.com** and then save the Kit file to your computer. Note that each Kit file is intended for download to its corresponding panel. In some cases, several Kit files may be included in a .zip file; extract the .zip file to access the required Kit file.

1. If the panel firmware version is not the latest available; locate the latest firmware file from **www.amx.com**.
2. Click on the desired Kit file link and after accepting the Licensing Agreement, verify download of the Modero Kit file to a known location.
3. Select **Tools > Firmware Transfers > Send to NetLink Device** from the main menu to open the *Send to NetLink Device* dialog (FIG. 31). Verify that the panel's System and Device number values match those values listed within the System folder in the **Online Tree** tab of the Workspace window.

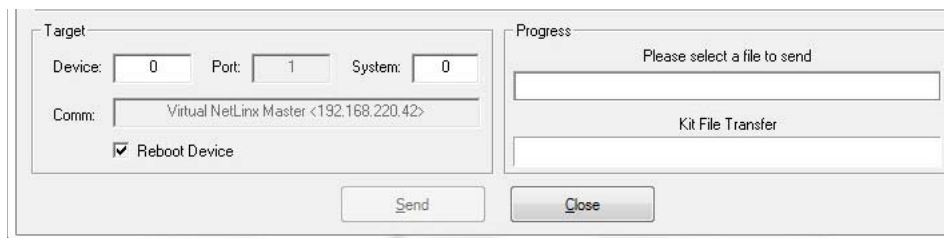


FIG. 31 Send to NetLink Device dialog window

4. Select the appropriate Kit file from within the *Browse for Folder* window (FIG. 32).

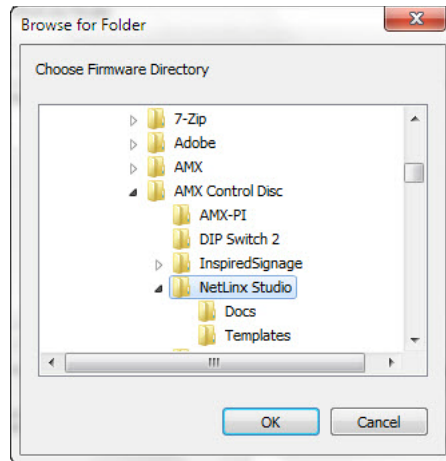


FIG. 32 Browse for Folder window

5. Select the panel's Kit file from the **Files** section.
6. Enter the **Device** value associated with the panel and the **System** number associated with the Master (listed in the *OnLine Tree* tab of the *Workspace* window). The **Port** field is greyed-out.
7. Click the **Reboot Device** checkbox if it is not already checked. This causes the touch panel to reboot after the firmware update process is complete.
8. Click **Send** to begin the transfer. The file transfer progress is indicated on the bottom-right of the dialog.
9. After the file transfer is complete, the panel will automatically reboot.
10. After the panel has finished rebooting, right-click the associated System number and select **Refresh System**. This causes a refresh of all project systems, establishes a new connection to the Master, and populates the System list with devices on your particular system.
11. Confirm that the panel has been properly updated to the correct firmware version.



NOTE

Verify you have downloaded the latest firmware file from **www.amx.com** and then save the Kit file to your computer.

Appendix: Troubleshooting

Overview

This section describes the solutions to possible hardware/firmware issues that could arise during the common operation of a Modero X touch panel.

Panel Doesn't Respond To Touches

Symptom: The device either does not respond to touches on the touch screen or does not register the touch as being in the correct area of the screen.

If the screen is off:

- *The device may be in Display Sleep Mode.* Press and hold the **Sleep** button to wake up the panel.
- *The device may not be connected to power.* Verify that the power source is connected to the device and receiving power.

Panel Isn't Appearing In The Online Tree Tab

1. Verify that the System number is the same on both the NetLinx Project Navigator window and the System Settings page on the device.
2. Verify the proper NetLinx Master IP and connection methods entered into the Master Connection section of the *System Settings* page.

Can't Connect To a NetLinx Master

Symptom: I can't seem to connect to a NetLinx Master using NetLinx Studio.

Select *Settings > Master Comm Settings > Communication Settings > Settings (for TCP/IP)*, and uncheck the "Automatically Ping the Master Controller to ensure availability".

The ping is to determine if the Master is available and to reply with a connection failure instantly if it is not. Without using the ping feature, a connection may still be attempted, but a failure will take longer to be recognized.



NOTE

If you are trying to connect to a Master controller that is behind a firewall, you may have to uncheck this option. Most firewalls will not allow ping requests to pass through for security reasons.

When connecting to a NetLinx Master controller via TCP/IP, the program will first try to ping the controller before attempting a connection. Pinging a device is relatively fast and will determine if the device is off-line, or if the TCP/IP address that was entered was incorrect.

If you decide not to ping for availability and the controller is off-line, or you have an incorrect TCP/IP address, the program will try for 30-45 seconds to establish a connection.

Only One Modero Panel In My System Shows Up

Symptom: I have more than one Modero panel connected to my System Master and only one shows up.

Multiple NetLinx Compatible devices can be associated for use with a single Master. If the user does not assign a device number, one will be assigned automatically to the panel. When using multiple panels, different Device Number values have to be assigned to each panel.

1. Press and hold the **Sleep** button to open the *Settings* page.
2. Press the **Protected** button, enter **1988** into the on-screen Keypad's password field, and press **Done** when finished.
3. Enter a Device Number value for the panel into the Device Number Keypad. The range is from 1 - 32000.



It's Your World - Take Control™