

The top half of the page features a complex, abstract background of overlapping, semi-transparent blue triangles and polygons, creating a low-poly, crystalline effect. The colors range from light sky blue to deep navy blue. A white diagonal line separates this patterned area from the plain white background below.

Service Guide

020-001685-01

UHD654-X-HR

CHRISTIE®

NOTICES

COPYRIGHT AND TRADEMARKS

Copyright © 2019 Christie Digital Systems USA, Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material. Manufacturing facilities in Canada and China are ISO 9001 certified. Manufacturing facilities in Canada are also ISO 14001 certified.

WARRANTY

Products are warranted under Christie's standard limited warranty, the complete details of which are available by contacting your Christie dealer or Christie. In addition to the other limitations that may be specified in Christie's standard limited warranty and, to the extent relevant or applicable to your product, the warranty does not cover:

- a. Problems or damage occurring during shipment, in either direction.
- b. Problems or damage caused by combination of a product with non-Christie equipment, such as distribution systems, cameras, DVD players, etc., or use of a product with any non-Christie interface device.
- c. Problems or damage caused by misuse, improper power source, accident, fire, flood, lightning, earthquake, or other natural disaster.
- d. Problems or damage caused by improper installation/alignment, or by equipment modification, if by other than Christie service personnel or a Christie authorized repair service provider.
- e. Use of third party product enclosures for environmental protection during outside use must be approved by Christie.
- f. Problems or damage caused by use of a product on a motion platform or other movable device where such product has not been designed, modified or approved by Christie for such use.
- g. Except where the product is designed for outdoor use, problems or damage caused by use of the product outdoors unless such product is protected from precipitation or other adverse weather or environmental conditions and the ambient temperature is within the recommended ambient temperature set forth in the specifications for such product.
- h. Image retention on LCD flat panels.
- i. Defects caused by normal wear and tear or otherwise due to normal aging of a product.

The warranty does not apply to any product where the serial number has been removed or obliterated. The warranty also does not apply to any product sold by a reseller to an end user outside of the country where the reseller is located unless (i) Christie has an office in the country where the end user is located or (ii) the required international warranty fee has been paid.

The warranty does not obligate Christie to provide any on site warranty service at the product site location.

PREVENTATIVE MAINTENANCE

Preventative maintenance is an important part of the continued and proper operation of your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, will void the warranty.


REGULATORY (if applicable)

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.

CAN ICES-3 (A) / NMB-3 (A)

이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

ENVIRONMENTAL

The product is designed and manufactured with high-quality materials and components that can be recycled and reused. This symbol  means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Content

- Package handling 5**
 - Unpacking the panel 5
 - Inspecting the display panel 6
 - Handling and mounting guidelines for extreme narrow bezel series panels 7
 - Cleaning the panel 7
 - Important safeguards 8
 - General safety precautions 8
 - Remote Power Rack Shelf safety warnings 8
 - Product documentation 9
 - Related documentation 9

- Replacement parts 10**
 - Index of parts and modules 10

- Replacement procedures 12**
 - Removing the rear cover 12
 - Replacing the AD board 13
 - Replacing the keypad board 13
 - Replacing the sensor board 14
 - Replacing the LAN/RS232 board 14
 - Replacing the IR board 14
 - Replacing the fans 15
 - Replacing the fan board 15
 - Replacing the color sensor board 16
 - Replacing the power board 17

- Maintenance and troubleshooting 18**
 - Maintenance 18
 - Troubleshooting 18
 - The display does not turn on 18
 - No picture appears on the display 19
 - The remote control does not work 19
 - The image geometry is incorrect 19
 - The content is jittery or unstable 20

The image is too bright or lacks definition	20
The image appears washed out	20
The image is too dark.....	20
Images from the HDMI source do not display	20
Computer images do not display correctly.....	21


Package handling

Learn how to remove the display panel from the packaging and how to handle the display panel.

Unpacking the panel

Learn how to remove the panel from the packaging.

Each LCD panel is packed inside a box carton. To protect the panel during transportation, additional packing material has been placed within the carton.

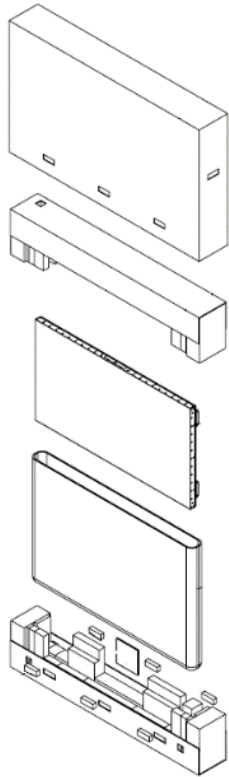


1. Before unpacking, prepare a stable, level, and clean surface near a wall outlet.
2. Set the box in an upright position and pull out the white carton locks.
3. Lift up the top cover carton.
4. Remove the polybag before removing the display from the bottom tray carton.
5. Remove any additional packaging, such as protective stickers, from the display panel.


Inspecting the display panel

Conduct an inspection on the display panel and verify the panel functions as expected before unpacking. If any damage is identified, or the panel does not function as expected, contact Christie Technical Support.

1. Tear off the sticker for a small opening on the right bottom corner at the back of the display panel (A).

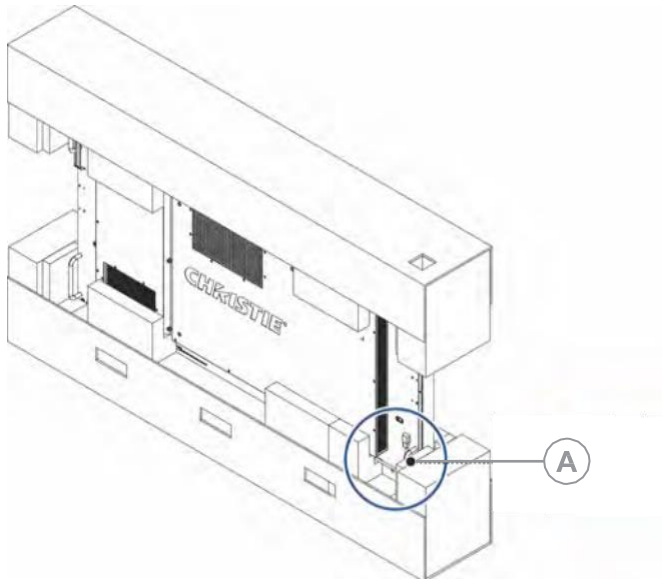

2. Pull the power cable through the packaging.
3. Connect the power cord to a power source and turn on the display panel.
Pull out the DC power cord.

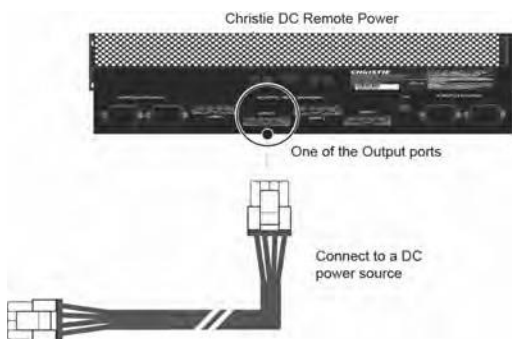

When connecting to a power source for the first time, the display panel automatically cycles through test patterns for 15 minutes (only).

4. As the display panel is cycling through the test patterns, inspect the display.

Handling and mounting guidelines for extreme narrow bezel series panels

Follow these best practices when handling and mounting extreme narrow bezel panels.



Notice. If not avoided, the following could result in property damage.

- When moving the panel, always use the handles. Do not carry the panel by the frame.
- Do not twist, bend, or tilt the panel.
- Do not apply excessive force to the sides of the bezel when mounting the panel or pushing into its locked position.
- Always handle the display panel from the sides or handles.

Follow the following guidelines before removing the panel from the packaging.

- To verify normal operation before handling, power on the panel in the packaging.
- Always use the handles to pick up and carry the panel.
- Leave the panel in the box until the mount is on the wall and you are ready to install the panel.
- To avoid putting undue stress on the panel when mounted, make sure the mount is square, flat, and level.
- Do not rest panels on top of a lower panel.
- When inserting the panel into the wall, pay close attention to adjacent panels.
- Make sure there is a minimum of 0.5 mm between mounted panels to allow for thermal expansion.

Cleaning the panel

Learn how to clean the display panel.

After disconnecting the power cable, wipe contaminated parts and each part of the product screen lightly with a dry and soft cloth.

Do not use a liquid, spray cleaners, or any abrasive cleaners to clean the LCD panel.

Washing with various cleaning agents, brighteners, abrasives, waxes, benzene, alcohol, solvent, surface active agent, may damage the surface of the product.

Important safeguards

To prevent personal injury and to protect the device from damage, read and follow these safety precautions.

General safety precautions

Observe these important safety rules to avoid personal injury or damage to the product.



Warning! If not avoided, the following could result in death or serious injury.

- **“Ensure that any external equipment is properly grounded before connecting to the display device”.**
- A minimum of two people or appropriately rated lift equipment is required to safely lift, install, or move the product.
- Do not drop the product.
- Do not apply excessive force to the sides of the bezel when mounting the panel or pushing into its locked position.
- Always handle the product on the opposing corners of the bezel to avoid direct contact with the glass.
- TIP HAZARD! When shipping a panel, use the provided packing materials and secure to a pallet.
- When moving the panel, always use the handles. Do not carry the panel by the frame.



Caution! If not avoided, the following could result in minor or moderate injury.

- Do not tilt the product more than ± 15 degrees.
- Use the handles when moving the shipping package.
- Do not twist, bend, or tilt the panel.



Notice. If not avoided, the following could result in property damage.

- Only clean the components with Christie approved products.

Remote Power Rack Shelf safety warnings

To prevent personal injury and to protect the device from damage, read and follow these safety precautions.



Warning! If not avoided, the following could result in death or serious injury.

- This product must be installed within a restricted access location not accessible by the general public.
- SHOCK HAZARD! Disconnect the product from AC before installing, moving, servicing, cleaning, removing components, or opening any enclosure.
- A minimum of two people or appropriately rated lift equipment is required to safely lift, install, or move the product.
- A certified electrician must be present during installation to ensure the installation meets the local electrical code.
- Install the product near an easily accessible AC receptacle.
- Hazardous voltages are present at power system inputs. The DC output, though not dangerous in voltage, has a high short-circuit current capacity that may cause severe burns and electrical arcing.

- SHOCK HAZARD! Power supply uses double pole/neutral fusing.
- Before working with live power systems, remove all metallic jewelry (such as watches, rings, metal rimmed glasses, or necklaces) and wear safety glasses with side shields at all times during the installation.
- Motors and fans may start without warning.
- Use insulated hand tools while working on live power systems.

Product documentation

For installation, setup, and user information, see the product documentation available on the Christie website. Read all instructions before using or servicing this product.

1. Access the documentation from the Christie website:
 - Go to this URL: <http://bit.ly/2CqwJJO>.
 - Scan the QR code using a QR code reader app on a smartphone or tablet.



2. On the product page, select the model and switch to the **Downloads** tab.

Related documentation

Additional information on the LCD panels is available in the following documents.

- *UHD654-X-HR LCD Panels User Guide (P/N: 020-001675-XX)*
- *UHD654-X-HR LCD Panels Product Safety Guide (P/N: 020-001683-XX)*
- *UHD654-X-HR LCD Display Panels External Commands (P/N: 020-001684-XX)*
- *LCD Panel Color Matching Guide – UHD654-X-HR and FHD554-XZ-H/HR (P/N: 020-001663-XX)*

Replacement parts

When ordering replacement parts, quote the part numbers of the items required.


Some parts identified in the service parts list may not be available separately. In addition, some parts stocked as inventory are available only until the current supply lasts. All part numbers are subject-to- change. When ordering replacement parts, provide the following information found on the product license label:

- Panel Model
- Panel Serial Number Manufacture Date
- Manufacture Date

Index of parts and modules

The following is a list of replaceable parts and part numbers.

Components must be replaced with exact equivalents. Failure to do so may result in unsafe operation.

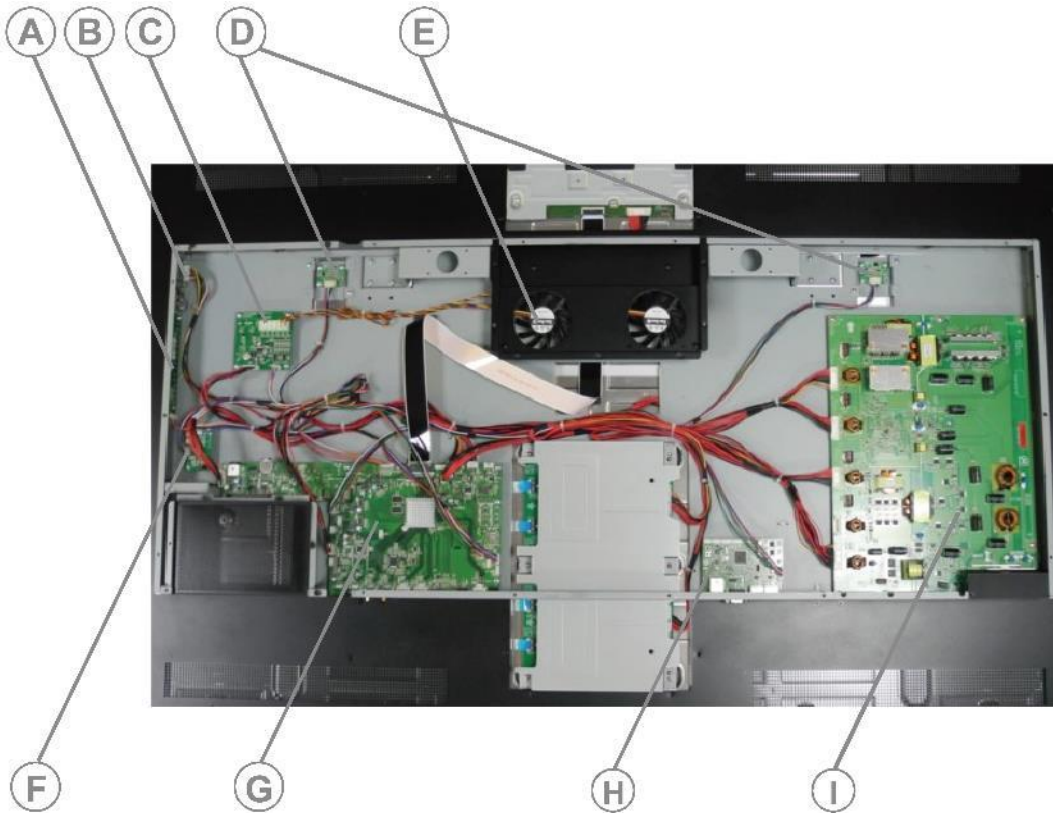

Callout	Part number	Description
A	003-121585-01	Keypad board
B	003-121863-01	IR board
C	003-121583-01	Fan board
D	003-121862-01	Color Sensor Board
E	003-121066-01	Fan
F	003-121584-01	Sensor board
G	003-121864-01	AD board
H	003-121865-01	LAN and RS232 board
I	003-121861-01	Power board

Replacement procedures

When reinstalling a module, follow the removal instructions in reverse unless otherwise indicated.



Caution! If not avoided, the following could result in minor or moderate injury.

- SHOCK HAZARD! Disconnect the product from DC before installing, moving, servicing, cleaning, removing components, or opening any enclosure.



Notice. If not avoided, the following could result in property damage.

- Observe all electrostatic precautions. Use a grounded wrist strap and insulated tools when handling, servicing, or cleaning electronic assemblies.
- Christie products must be installed and serviced by Christie qualified technicians.
- All procedures must be performed by Christie qualified technicians.


Follow all service safety guidelines. This panel is internationally approved and is designed for safe and reliable operation

Required tools

- #1 and #2 Phillips™ screw drivers
- ESD protective strap and pad

Removing the rear cover

The rear cover houses the replaceable components of the display panel.

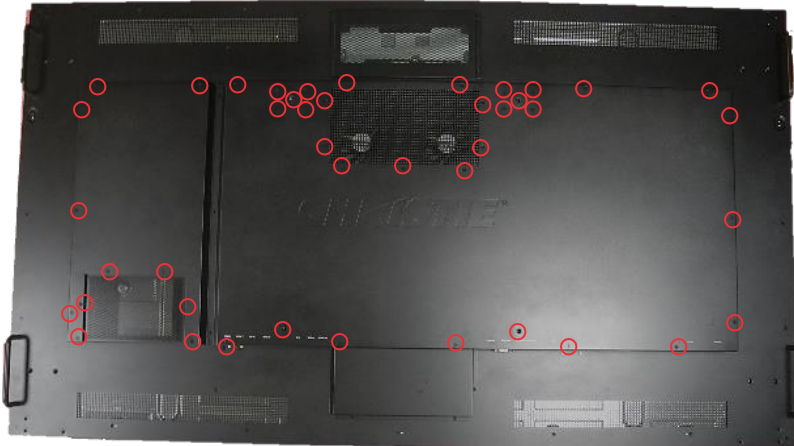

1. Place the display panel face-down on a clean, protective surface.
2. Remove the 43 Phillips screws securing the cover to the panel.
3. [Remove the rear cover](#) from the display panel.


Replacing the AD board

The AD board is located on the bottom left-hand rear side of the display panel.

1. [Remove the rear cover](#).
2. If present, remove the OPS module.
3. Remove the two standoffs from the ports.



4. Mark and remove all connectors from the board.
5. Remove the nine Phillips screws from the AD board.

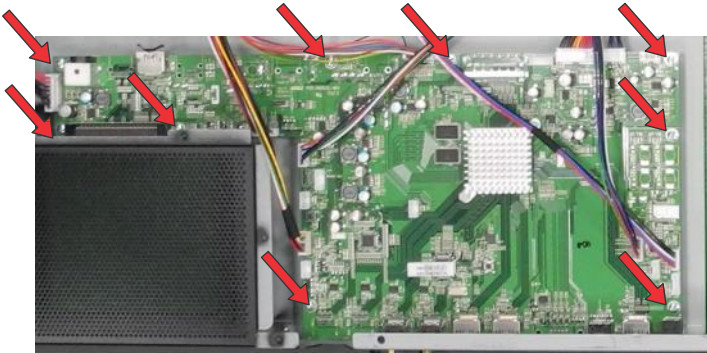

6. Replace the AD board.
7. To re-install, follow these steps in reverse order.

Replacing the keypad board

The keypad board is located on the left-hand rear side of the display panel.

1. [Remove the rear cover](#).
2. Mark and remove all connectors from the board.
3. Remove the two Phillips screws that secure the keypad board to the side of the display panel.



4. Replace the keypad board.
5. To re-install, follow these steps in reverse order.

Replacing the sensor board

The sensor board is located on the left-hand rear side of the display panel.

1. [Remove the rear cover.](#)
2. Mark and remove all connectors from the board.
3. Remove the two Phillips screws from the sensor board.



4. Replace the sensor board.
5. To re-install, follow these steps in reverse order.

Replacing the LAN/RS232 board

The LAN/RS232 board is located at the bottom-center rear side of the display panel.

1. [Remove the rear cover.](#)
2. Mark and remove all connectors from the board.
3. Remove the two Phillips screws from the LAN/RS232 board.




4. Replace the LAN/RS232 board.
5. To re-install, follow these steps in reverse order.

Replacing the IR board

The IR board is located at the top-left rear side of the display panel.

1. [Remove the rear cover.](#)
2. Mark and remove all connectors from the board.
3. Remove the two Phillips screws from the IR board.

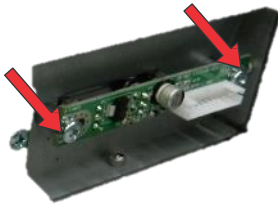


4. Replace the IR board.
When replacing the IR board, ensure the three sensors line up to the window.
5. To re-install, follow these steps in reverse order.


Replacing the fans

The IR board is located at the top-center side of the display panel.

1. [Remove the rear cover.](#)
2. Remove the two screws securing the mounting bracket to the panel.

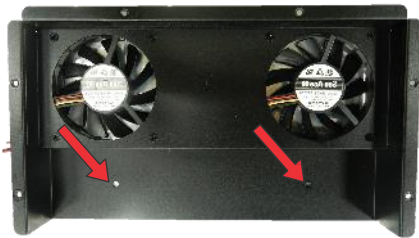

3. Remove the four Phillips screws securing the fan to the mounting bracket.

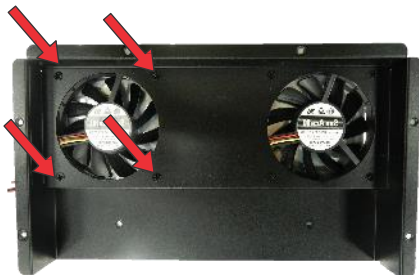


4. Replace the fans.
5. To re-install, follow these steps in reverse order.

Replacing the fan board

The fan board is on the middle-left rear side of the display panel.

1. [Remove the rear cover.](#)
2. Mark and remove all connectors from the board.

3. Remove the four Phillips screws from the fan board.

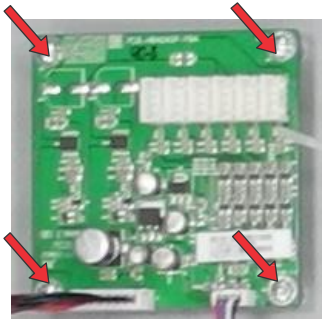


4. Replace the fan board.
5. To re-install, follow these steps in reverse order.

Replacing the color sensor boards

The color sensor board is located in the top-left and top-right rear side of the display panel.

1. [Remove the rear cover.](#)
2. Mark and remove all cables connected to the board.
3. Remove the three screws securing the color sensor board to the sensor bracket.

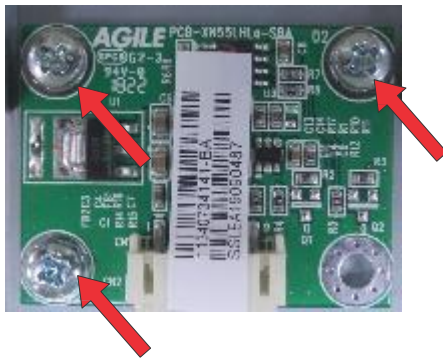


4. Replace the color sensor board.
5. To re-install, follow these steps in reverse order.

Replacing the power board

The power board is on the right-rear side of the display panel.

1. [Remove the rear cover.](#)
2. Mark and remove all connectors from the board.
3. Remove the eight Phillips screws from the power board.

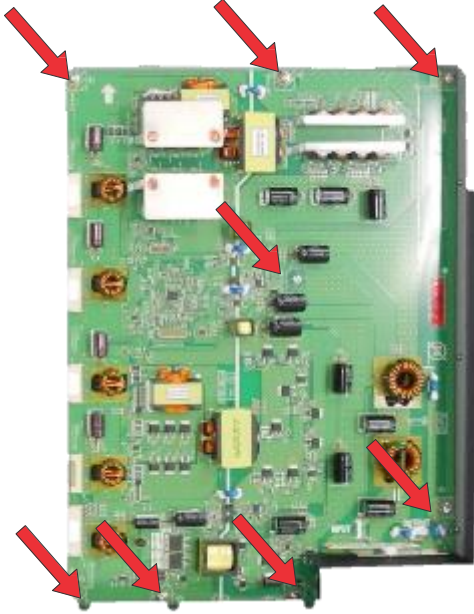

4. Replace the power board.
5. To re-install, follow these steps in reverse order.

Maintenance and troubleshooting

Learn the information and procedures for performing panel troubleshooting.

Maintenance

UHD654-X-HR display panels do not require any routine maintenance.

There are no user-serviceable or -replaceable parts. Unless you are a qualified, factory-trained technician, do not attempt to repair or replace any system component yourself. You will void the product warranty if you do so.

Troubleshooting

Learn about common issues and their solutions.

The UHD654-X-HR display panels do not require any routine maintenance. There are no user-serviceable or replaceable parts. Do not attempt to repair or replace any system component yourself unless you are a qualified, factory trained-technician, as doing so voids the product warranty.

The display does not turn on

No video is displayed on the panel.

Details

Possible causes for this issue include:

- The display is not plugged in or the power outlet is not active.
- The main power switch is off.
- The remote control batteries have run out.

Resolution

- Ensure that the display is plugged in and that the power outlet is active.
- Set the main power switch to the on position.
- Replace the batteries.

No picture appears on the display

The display is on and the menus appear, but there is no picture on the panel.

Details

Possible causes for this issue include:

- Incorrect source selection.
- Source component is not turned on.
- Source component is connected incorrectly or not at all.

Resolution

- Select the correct source.
- Turn on the source component.
- Check connections from the source component to the display.

The remote control does not work

Pressing buttons on the remote control does not affect the display.

Details

Possible causes for this issue include:

- The remote control batteries have run out.
- The buttons are locked.
- IR extender is not connected.

Resolution

- Replace the batteries.
- Unlock the buttons by pressing **ENTER, ENTER, EXIT, EXIT, ENTER** and **EXIT**, in sequence.
- Verify that the IR extender cable is correctly connected.

The image geometry is incorrect

The image is displayed with an incorrect aspect ratio.

Resolution

Select a different aspect ratio.

The content is jittery or unstable

The content on the display panel is poor-quality or the panel is improperly connected to the source.

In some cases, the horizontal or vertical scan frequency of the input signal may be out of range for the display panel.

Resolution

- Verify that the source is properly connected.
- Correct the quality of the content.

The image is too bright or lacks definition

The image contrast is set too high and the bright areas of the image have no definition.

Resolution

Decrease the contrast setting.

The image appears washed out

The dark areas of the displayed image are too bright.

Resolution

Decrease the brightness settings.

The image is too dark

The image appears too dark when the brightness or backlight are set too low.

Resolution

Increase the brightness or backlight settings.

Images from the HDMI source do not display

Source video over HDMI does not display on the panel.

Details

Possible causes for this issue include:

- The resolution and frequency of the video card in the computer are not compatible with the display.
- HDMI cable from source to display is either defective or too long.

Resolution

- Select a compatible resolution and vertical frequency.
- Try a known-good and/or shorter HDMI cable.

Computer images do not display correctly

Images that originate from a computer source do not display correctly on the panel.

Details

Possible causes for this issue include:

- The resolution and frequency of the video card in the computer are not compatible with the display.
- Clock and Phase settings need adjustment.

Resolution

- Select a compatible resolution and vertical frequency.
- Adjust Clock and Phase settings.

Corporate offices

Christie Digital Systems USA, Inc.
Cypress
ph: 714 236 8610

Christie Digital Systems Canada Inc.
Kitchener
ph: 519 744 8005

Worldwide offices

Australia
ph: +61 (0) 7 3624 4888

Brazil
ph: +55 (11) 2548 4753

China (Beijing)
ph: +86 10 6561 0240

China (Shanghai)
ph: +86 21 6278 7708

France
ph: +33 (0) 1 41 21 44 04

Germany
ph: +49 2161 664540

India
ph: +91 (080) 6708 9999

Japan (Tokyo)
ph: 81 3 3599 7481

Korea (Seoul)
ph: +82 2 702 1601

Mexico
ph: +52 55 4744 1790

Republic of South Africa
ph: +27 (0)11 510 0094

Russian Federation
and Eastern Europe
ph: +36 (0) 1 47 48 100

Singapore
ph: +65 6877 8737

Spain
ph: +34 91 633 9990

United Arab Emirates
ph: +971 4 3206688

United Kingdom
ph: +44 (0) 118 977 8000

United States (Arizona)
ph: 602 943 5700

United States (New York)
ph: 646 779 2014

Independant sales consultant offices

Italy
ph: +39 (0) 2 9902 1161



For the most current technical documentation, visit www.christiedigital.com.

