

Instruction Book for DESIGNER CONTOUR® MANUAL



DA-LITE SCREEN COMPANY, INC. 3100 North Detroit Street Post Office Box 137 Warsaw, Indiana 46581-0137 Phone: 574-267-8101 800-622-3737 Fax: 574-267-7804 Toll Free Fax: 877-325-4832

www.da-lite.com e-mail: info@da-lite.com

YOU HAVE MADE A WISE SELECTION...

in choosing a Da-Lite projection screen designed and engineered to produce the sharpest, most pleasing pictures with maximum convenience.

PROTECT YOUR SCREEN by keeping it rolled in its protective case when not in use. Always examine both front and back of surface before re-rolling into case to make certain screen is free of dust, dirt or other foreign matter. Use a very soft duster brush gently to remove foreign particles.

INSTALLATION

Care in mounting and care in correct operation will mean a long and satisfactory life for your Da-Lite wall/ceiling screen. Locate the screen where the audience can best see it and where other furnishings in the room permit. Mount the screen so that bottom of picture surface, when fully extended, will be above heads of viewers.

There are three ways to install the Designer Contour® Manual: Wall Mount, Ceiling Mount, or Ceiling Hook. Procedures for each method are as follows:

Wall Mount

- Secure the wall mount bracket to the wall at the desired height. Bracket should be fastened to wall studs or some reinforcement within the wall. Concrete or brick walls require special fasteners and anchors.
- 2. Make sure the bracket is level. See figure 1 for reference dimensions.
- 3. Keep in mind you will need at least 7/8" between the ceiling and the top of the wall mount bracket to be able to position the case on the bracket.
- 4. Mount the screen case on the wall bracket as shown in figure 1. Be sure the case is fully seated on the bracket. Tighten the stop screws against the wall bracket.

Ceiling Mount

- 1. Do not remove the wall mount bracket, even if you are not using it for mounting. This provides structural stability to the case.
- 2. Be sure the ceiling has adequate reinforcement to attach the screen brackets.
- 3. The top of the screen case has a channel that the ceiling mount brackets slide into. Loosen the two set screws on the brackets and slide bracket so it extends over the end of the case. Lock the brackets in place by tightening two set screws. Refer to figure 2. Mount cannot be more than 12" from end of case.
- Hold the screen case up to the ceiling and mark the hole locations. Drill holes into the ceiling and attach screen with the appropriate fasteners for your ceiling.

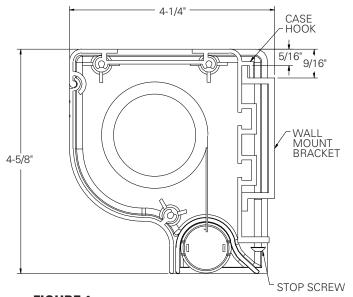


FIGURE 1

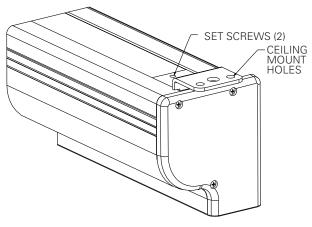


FIGURE 2

INSTALLATION

Ceiling Hook

- 1. Do not remove the wall mount bracket, even if you are not using it for mounting. This provides structural stability to the case.
- 2. Be sure the ceiling has adequate reinforcement to attach a hook anchor.
- 3. The top of the screen case has a channel that the ceiling hook brackets slide into. The brackets can be attached anywhere within 12" of the end of the case. Loosen the set screws on the brackets and slide the brackets to the desired location. Lock the brackets in place by tightening two set screws. Refer to figure 3.
- 4. Attach an S-hook or similar fastener to the large center hole on the bracket.

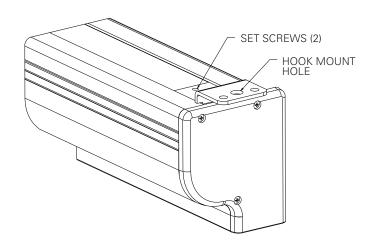


FIGURE 3

OPERATING INSTRUCTIONS

TO LOWER PICTURE SURFACE

Pull screen down all the way. HESITATE – then allow screen to retract VERY SLOWLY until it locks in place.

TO RAISE PICTURE SURFACE

Pull straight down on the pull bail, then release quickly. The screen will retract gently into the case.

SCREEN ACCESSORIES

WALL BRACKETS - (75# per pair maximum)

Da-Lite No. 6 and No. 11 Non-adjustable wall brackets and No. 23 adjustable extension wall brackets are ideal for keystone elimination, clearance, or corner mounting. The screen brackets should be fastened to the studding or other solid surface and not in the plaster only.



No. 23 ADJUSTABLE WALL BRACKETS

Screen can be extended 10", 14", 15³/₄", 18¹/₄", 20" or 24" from wall by wing nut and bolt adjustment.





No. 11 WALL BRACKETS

Screen can be extended 10" or 14" from wall by changing position of bracket.

No. 6 WALL BRACKETS


Screen can be extended 6" from wall.





TILT LOCK For Keystone Elimination

Holds back bottom of screen in tilted position to eliminate keystoning.

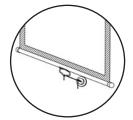

QUALITY FEATURES FOR BETTER PICTURES, EASIER OPERATION, LONGER LIFE

- Exclusive Camlok® Roller System
- Attractively styled
- Easily installed
- Economically priced
- Completely self-storing
- Ideal for houses of worship, schools, family centers and industrial training rooms.

For the finest in film and video projection

DA-LITE IS MORE THAN PROJECTION SCREENS

Da-Lite Tripod, Wall and Ceiling and Electric Screens





Da-Lite Monitor Mounts



Da-Lite Lecterns



Da-Lite Project-O-Stands and Easels



Printed in U.S.A. 93015 Rev. 12/08