

# MIDDLE ATLANTIC®

A brand of  legrand



**NOTE:** Free standing and floor-to-wall models shown.

**forum**  
COLLABORATION SUITE™

## Display Stand for Single Displays

Instruction Sheet

100-00066 Rev C



## **TABLE OF CONTENTS**

Important Safety Instructions.....	3 - 5
Weight Ratings.....	6
Supplied Components and Hardware.....	6 - 7
Required Tools.....	7
Introduction.....	8
Removing the Front Panel from Your Display Stand.....	8
Attaching the Display Stand to Your Wall (Floor-To-Wall Models Only).....	9 - 11
Installing and Configuring the 10" Lever Lock Plate.....	11 - 12
Installing the Vertical Lever Lock Kit (if Purchased).....	12
Using Top Small Device Storage and Bottom Rackmount Bays.....	13 - 14
Re-Attaching the Front Panel to Your Display Stand.....	14
Selecting the Correct Interface Bracket Hardware for Your Display.....	14 - 15
Attaching Interface Brackets to the Back of Your Display.....	15
Attaching the Shroud and Mount to Your Display Stand.....	16
Hanging Your Display onto the Mount.....	17
Warranty.....	18

## IMPORTANT SAFETY INSTRUCTIONS - EN

- Read these instructions.
- Heed all warnings.
- Clean only with dry cloth.
- Keep these instructions.
- Follow all instructions.
- Only use attachments/accessories specified by the manufacturer.

### UNDERSTANDING SAFETY SYMBOLS



**DANGER HAZARDOUS VOLTAGE:** The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**WARNING:** A warning alerts you to a situation that could result in serious personal injury or death.



**CAUTION:** A caution alerts you to a situation that may result in minor personal injury or damage to the product and/or property.

**NOTE:** A note is used to highlight procedures pertaining to the installation, operation, or maintenance of the product.



**WARNING:** Middle Atlantic Products, electrical systems conform to and should be properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities. All electrical products may present a possible shock or fire hazard if improperly installed or used. Electrical products may bear the mark of a Nationally Recognized Testing Laboratory (NRTL) and should be installed in conformance with current local and/or the National Electrical Code.



**WARNING:** Failure to read, understand and follow the following information can result in serious personal injury, damage to the equipment or voiding of the warranty. It is the responsibility of the Installer/User to ensure that this product is loaded according to specifications.



**WARNING:** Exceeding the weight ratings listed can result in serious injury or damage to the equipment. It is the responsibility of the Installer/User to ensure the components installed do not surpass the weight ratings as an unstable condition can occur which may cause possible injury or damage.



**CAUTION:** If there is visible damage on the product, it must not be installed.



**CAUTION:** Safety measures must be practiced at all times during the assembly of this product. Use proper safety equipment and tools for the assembly procedure to prevent personal injury.



**CAUTION:** Note that during construction, there must be no possibility of personal injury, for example the squeezing of fingers or arms.



**CAUTION:** For loading, always put heavier items at the bottom of the bays, not near the top, in order to help prevent the possibility of the furnishing tipping over.



**CAUTION:** The appliance is not intended for use by young children or infirm persons without supervision.

### Safety Instructions: Rack Mount

**Elevated Operating Ambient:** If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature ( $T_{ma}$ ) specified by the manufacturer.

**Reduced Air Flow:** Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

**Mechanical Loading:** Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

**Circuit Overloading:** Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuit might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

**Reliable Earthing:** Reliable earthing of rack-mounting equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).

**Disconnect Device (Pluggable Equipment):** The socket-outlet shall be installed near the equipment and shall be easily accessible.

## INSTRUCCIONES DE SEGURIDAD IMPORTANTES - ES

- Lea estas instrucciones.
- Preste atención a todas las advertencias.
- Guarda estas instrucciones.
- Siga todas las instrucciones
- Limpie solamente con un paño seco.
- Utilice únicamente accesorios especificados por el fabricante.

### COMPRENSIÓN SEGURIDAD SÍMBOLOS



**PELIGRO PELIGROSO VOLTAJE:** El relámpago con el símbolo de la punta de flecha, dentro de un triángulo equilátero está destinado a alertar al usuario de la presencia de tensión peligrosa no aislada dentro del recinto del producto que puede ser de magnitud suficiente para constituir un riesgo de descarga eléctrica para las personas.



**ADVERTENCIA:** Una advertencia le avisa de una situación que podría resultar en lesiones personales graves o la muerte.



**PRECAUCIÓN:** Una precaución le avisa de una situación que puede resultar en lesiones personales menores o daños al producto y/o propiedad.

**NOTA:** Se utiliza una nota para resaltar los procedimientos relacionados con la instalación, operación o mantenimiento del producto.



**ADVERTENCIA:** No leer, entender y seguir la siguiente información puede resultar en lesiones personales graves, daños al equipo o anulación de la garantía. Es responsabilidad del instalador/usuario asegurarse de que este producto se carga según las especificaciones.



**ADVERTENCIA:** Middle Atlantic Products, los sistemas eléctricos se ajustan a y deben estar correctamente conectados a tierra en cumplimiento con los requisitos del actual Código Eléctrico Nacional o códigos administrados por las autoridades locales. Todos los productos eléctricos pueden presentar un posible riesgo de choque o incendio si se instalan o utilizan incorrectamente. Los productos eléctricos pueden llevar la marca de un Laboratorio de Pruebas Reconocido a Nivel Nacional (NRTL) y deben instalarse de conformidad con la corriente local y/ o el Código Eléctrico Nacional.



**PRECAUCIÓN:** La superación de los pesos nominales indicados puede provocar lesiones graves o daños en el equipo. Es responsabilidad del instalador/usuario asegurarse de que los componentes instalados no excedan las notas de peso como una condición inestable puede ocurrir que puede causar lesiones o daños.



**PRECAUCIÓN:** Si hay daños visibles en el producto, no debe ser instalado.



**PRECAUCIÓN:** Se deben implementar medidas de seguridad en todo momento durante el montaje de este producto. Utilizar equipos y herramientas de seguridad adecuados para los procedimientos de para evitar lesiones.



**PRECAUCIÓN:** Tenga en cuenta que durante la construcción no debe haber riesgo de lesiones, como por ejemplo aplastar los dedos o los brazos.



**PRECAUCIÓN:** Para la carga, coloque siempre artículos más pesados en la parte inferior de las bahías, no cerca de la parte superior, para evitar la posibilidad de inclinación de los muebles.



**PRECAUCIÓN:** El dispositivo no está diseñado para ser utilizado por niños pequeños o personas con discapacidad sin supervisión.

### Instrucciones de seguridad: montaje en rack

**Alta temperatura de funcionamiento:** Si se instala en un rack cerrado o de varias unidades , la temperatura ambiente de funcionamiento del entorno del rack puede ser superior a ambiente de la habitación. Por lo tanto, debe considerarse la instalación del equipo en un entorno compatible con la temperatura ambiente máxima (Tma) especificada por el fabricante.

**Descuento Aire acreditativo:** Instalación del equipo en un rack debe ser tal que la cantidad de flujo de aire necesario para el buen funcionamiento del equipo no se vea comprometida.

**Carga mecánica:** El montaje del equipo en el rack debe ser tal que una condición peligrosa no esté relacionada con una carga mecánica irregular.

**Sobrecarga de circuitos:** Se debe considerar la conexión del equipo al circuito de alimentación y el efecto que la sobrecarga del circuito podría tener en la protección contra sobrecorriente y cableado de alimentación. Examen adecuado de los equipos evaluaciones de la placa de identificación debe ser utilizado para hacer frente a esta preocupación.

**Conexión a tierra confiable:** Confiable puesta a tierra del equipo de montaje en rack debe mantenerse. Debe prestarse especial atención a las conexiones de alimentación distintas de las conexiones directas al circuito de derivación (por ejemplo, el uso de bandas de potencia).

**Dispositivo Disconnect (Equipo Pluggable):** La toma de corriente debe instalarse cerca del material y debe ser fácilmente accesible.

## INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ - FR

- Lire ces instructions.
- Respectez tous les avertissements.
- Conservez ces instructions.
- Suivez toutes les instructions.
- Nettoyer uniquement avec un chiffon sec.
- N'utilisez que des accessoires spécifiés par le fabricant.

### COMPRENDRE LES SYMBOLES DE SÉCURITÉ



**DANGER TENSION DANGEREUSE:** Le symbole de la pointe de flèche, dans un triangle équilatéral, est destiné à alerter l'utilisateur sur la présence de tension dangereuse non isolée dans l'enceinte du produit qui peut être d'une ampleur suffisante pour constituer un risque d'électrocution.



**AVERTISSEMENT:** Un avertissement vous avertit d'une situation pouvant entraîner des blessures graves ou la mort.



**ATTENTION:** Une attention vous avertit d'une situation pouvant entraîner des blessures mineures ou des dommages au produit et/ou à la propriété.

**REMARQUE:** Une remarque est utilisée pour mettre en évidence les procédures relatives à l'installation, au fonctionnement ou à l'entretien du produit.



**AVERTISSEMENT:** Les produits Middle Atlantic, les systèmes électriques sont conformes et doivent être correctement mis à la terre conformément aux exigences du Code national de l'électricité en vigueur ou aux codes administrés par les autorités locales. Tous les produits électriques peuvent présenter un risque d'électrocution ou d'incendie s'ils sont mal installés ou utilisés. Les produits électriques peuvent porter la marque d'un laboratoire d'essais reconnu au niveau national (NRTL) et doivent être installés conformément au code électrique local et/ou national en vigueur.



**AVERTISSEMENT:** Refus de lire, comprendre et suivre la renseignements suivants peut traduire par de graves blessures, des dommages à l'équipement ou invalider la garantie. Il est la responsabilité de l'installateur / utilisateur de s'assurer que ce produit est chargé conformément aux spécifications.



**AVERTISSEMENT:** Le dépassement des poids nominaux indiqués peut entraîner des blessures graves ou des dommages à l'équipement. C'est l'responsabilité de l'installateur/utilisateur de s'assurer que les composants installé ne dépassent pas les notes de poids comme un instable condition peut se produire qui peut causer des blessures ou dommages.



**ATTENTION:** S'il ya des dommages visibles sur le produit, il ne doit pas être installé.



**ATTENTION:** Des mesures de sécurité doivent être mises en œuvre en tout temps lors de l'assemblage de ce produit. Utiliser un équipement et des outils de sécurité appropriés pour la procédures de afin d'éviter les blessures.



**ATTENTION:** Notez que pendant la construction, il ne doit pas y avoir de risque de blessure, comme par exemple le écraser des doigts ou des bras.



**ATTENTION:** Pour le chargement, placez toujours des articles plus lourds au bas des baies, pas près du sommet, afin d'éviter la possibilité de basculement de l'ameublement.



**ATTENTION:** L'appareil n'est pas destiné à être utilisé par des enfants en bas âge ou des personnes infirmes sans surveillance.

### Consignes de sécurité: montage en rack

**Température de fonctionnement élevée:** Si installé dans un rack fermé ou à unités multiples , la température ambiante de fonctionnement de l'environnement du rack peut être supérieure à ambiante de la pièce. Par conséquent, il faudrait envisager d'installer l'équipement dans un environnement compatible avec la température ambiante maximale (Tma) spécifiée par le constructeur.

**Réduction Air accréditives:** Installation de l'équipement dans un rack doit être telle que la quantité de flux d'air nécessaire au bon fonctionnement de l'équipement ne soit pas compromise.

**Changement mécanique:** Le montage de l'équipement dans le rack doit être telle qu'une condition dangereuse ne lié à un changement mécanique irrégulier.

**Surcharge des circuits:** Il faudrait envisager à la connexion de l'équipement au circuit d'alimentation et l' effet que la surcharge du circuit pourrait avoir sur la protection contre les surintensités et le câblage d'alimentation. Examen approprié des équipements évaluations de la plaque signalétique doit être utilisée pour traiter de cette préoccupation.

**Mise à la terre fiable:** Fiable mise à la terre de l'équipement de montage en rack doit être maintenue. Une attention particulière devrait être accordée aux connexions d'alimentation autres que les connexions directes vers le circuit de dérivation (par exemple de l'utilisation de bandes de puissance).

**Appareil Disconnect (Équipement Pluggable):** La prise de courant doit être installée à proximité du matériel et doit être facilement accessible.

## WEIGHT RATINGS

Item	Weight Rating
Chief Fusion Fixed Display Mount Attached to the Forum Collaboration Suite Display Stand (Free Standing or Floor-to-Wall)	150 lbs. (68 kg) Maximum Total Rated Load <b>NOTE:</b> The combined maximum total rated load of the mount installed on the stand must not exceed the total rated load indicated. This includes the mounting of any additional camera, soundbar/audio, and AV accessories on the stand or mount.
Display Stand's Bottom Rackmount Storage	50 lbs. (23 kg) Maximum Total Rated Load Per Bay
Display Stand's Top Small Device Storage	25 lbs. (11 kg) Maximum Total Rated Load



**WARNING:** This product is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Total equipment weight must not exceed the amounts indicated on the previous table.


**ADVERTENCIA:** Este producto está destinado a ser utilizado solo con los productos y pesos máximos indicados. El uso con otros productos o productos más pesados que el peso máximo indicado puede causar inestabilidad que puede causar lesiones. El peso total del equipo no deberá superar las cantidades indicadas en el cuadro anterior.

**AVERTISSEMENT:** Ce produit est destiné à être utilisé uniquement avec les produits et les poids maximum indiqués. L'utilisation avec d'autres produits ou produits plus lourds que le poids maximum indiqué peut entraîner une instabilité pouvant causer des blessures. Le poids total de l'équipement ne doit pas dépasser les quantités indiquées dans le tableau précédent.

## SUPPLIED COMPONENTS AND HARDWARE



After carefully opening all product packaging, identify the supplied components and hardware shown. If any pieces are missing or damaged, please report it immediately to Technical Support at [av.middleatlantic.techsupport@legrand.com](mailto:av.middleatlantic.techsupport@legrand.com) or (866) 977-3901.

Keep original box(es) in a safe place for future use.

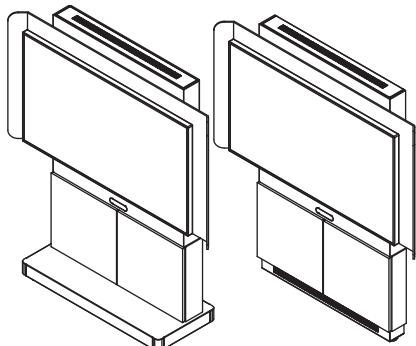

Display Stand  
**NOTE:** Free Standing and Floor-to-Wall models, respectively.

A

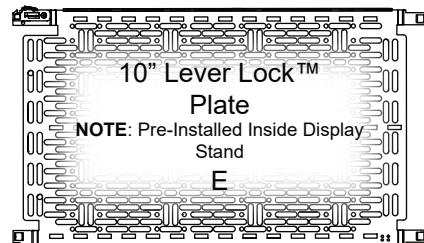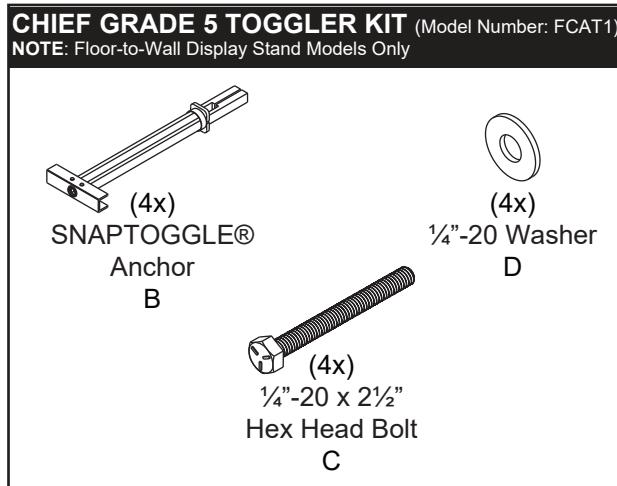







10" Lever Lock™  
Plate

**NOTE:** Pre-Installed Inside Display Stand

E


## VERTICAL LEVER LOCK KIT (IF PURCHASED)

(Model Number: DSA-DW-LLKIT1)

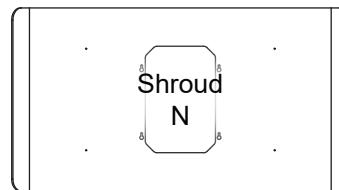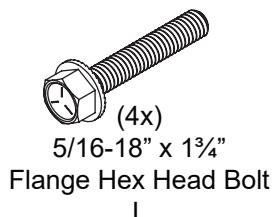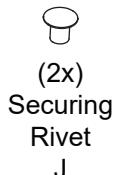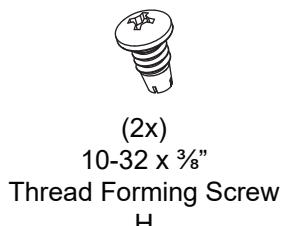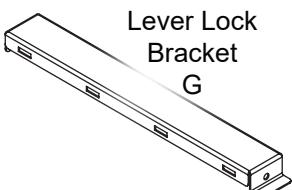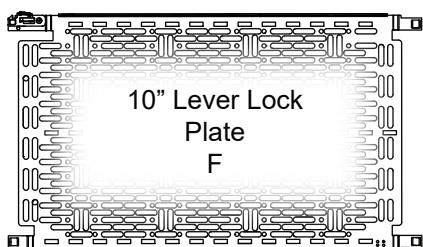

## SUPPLIED COMPONENTS AND HARDWARE (CONTINUED)

### CHIEF FUSION FIXED DISPLAY MOUNT

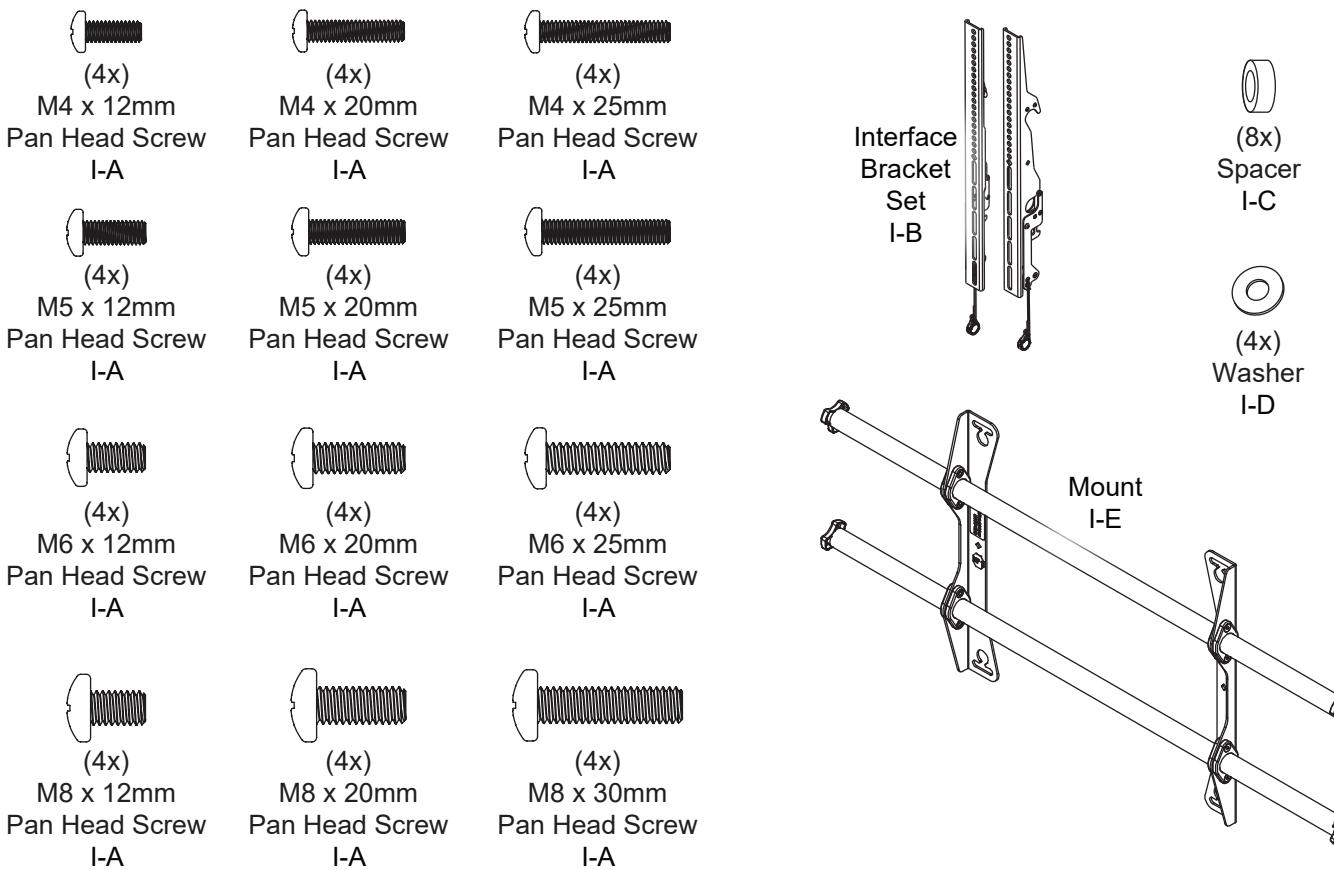

### NOTE:

- To order more hardware, contact support at [av.support@legrand.com](mailto:av.support@legrand.com) or (866) 977-3901.
- Additional hardware is included that may not be required for your installation.

### REQUIRED TOOLS

- Protective Eyewear
- Socket Wrench
- $\frac{3}{8}$ " Socket
- Pencil
- Electric Drill
- $\frac{1}{2}$ " Drill Bit
- Level
- 7/16" Socket
- 3/32" Drill Bit
- #2 Phillips Bit
- #2 Phillips Screwdriver
- Toothpick or Small Straw
- Adjustable Wrench



**WARNING:** Use tools with caution and follow all necessary safety protocols.

**ADVERTENCIA:** Utilice las herramientas con precaución y siga todos los protocolos de seguridad necesarios.

**AVERTISSEMENT:** Utiliser des outils avec prudence et suivre tous les protocoles de sécurité nécessaires.

## INTRODUCTION

### NOTE:

- Please take the time to carefully unpack and inspect all of the products you ordered and save this instruction sheet for future use.
- Maintenance and care information is provided in Care and Cleaning of Products (I-00788) and Unpacking and Handling Precautions (I-00787) for your convenience.
- All documents may be accessed at [www.legrandav.com](http://www.legrandav.com).

Your Forum™ collaboration suite configuration may include a free-standing display stand, a floor-to-wall display stand, additional Lever Lock™ kit, and/or a table equipped with optional Wiremold ModPower™ modular power units (table and ModPower units sold separately).

Use the topics in this instruction sheet in order of appearance to attach the floor-to-wall display stand to your wall (if applicable), the configuration of additional Lever Lock plates brackets and panels, and attaching your display (not provided) to your display stand.

If you purchased a Forum™ Collaboration Suite XL Display Stand for Single and Dual Displays (100-00087) or a Forum™ Collaboration Suite Table Option (100-00086), please refer to those respective instruction sheets provided with your product or download them anytime from our website.

For more information, refer to the following Forum™ Collaboration Suite product page at [www.legrandav.com](http://www.legrandav.com):


[https://www.legrandav.com/Products/Technical\\_Furniture/Collaboration/Forum\\_Collaboration\\_Suite](https://www.legrandav.com/Products/Technical_Furniture/Collaboration/Forum_Collaboration_Suite)

## REMOVING THE FRONT PANEL FROM YOUR DISPLAY STAND

1. Use socket wrench and  $\frac{3}{8}$ " socket to remove (4x) 10-32 nuts (accessed through the front opening and located inside the display stand columns) from studs on the front filler panel and carefully set aside panel and nuts for re-installation. (**FIGURE A**)
2. Carefully tug at the magnetic sides of the front panel to remove it from the display stand frame and set aside front panel for re-installation.

### NOTE:

- Any indentations made to the acoustic felt (PET) material of the front or filler panel may be removed by applying steam.
- Remove dust and debris from panels with a clean, soft, lint-free cloth or vacuum.
- Bleach and cleaning agents are not recommended, as they may discolor the material.

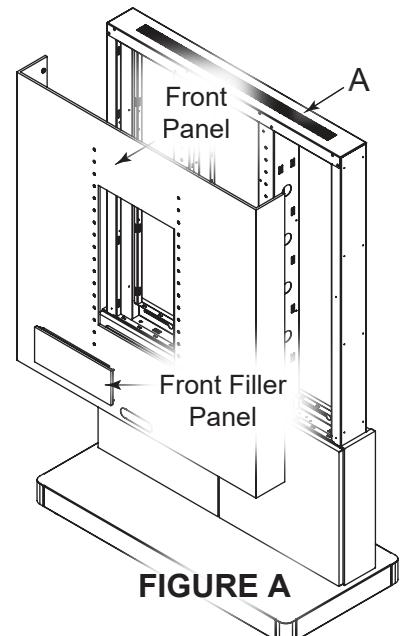

## ATTACHING THE DISPLAY STAND TO YOUR WALL (FLOOR-TO-WALL MODELS ONLY)



**WARNING:** This procedure requires at least one additional person.

**ADVERTENCIA:** Este procedimiento requiere al menos una persona adicional.

**AVERTISSEMENT:** Cette procédure nécessite au moins une personne supplémentaire.

1. Carefully team lift your display stand (A) and place it on its feet against your desired mounting wall.



**WARNING:** The display stand must always bear its weight on its feet when wall mounted.

**ADVERTENCIA:** El soporte de visualización siempre debe soportar su peso en los pies cuando se monta en la pared.


**AVERTISSEMENT:** Le présentoir doit toujours supporter son poids sur ses pieds lorsqu'il est fixé au mur.

**NOTE:** Consider power receptacles on the wall and power requirements when positioning your display stand.

2. Use a pencil to draw horizontal lines on your wall from the center of the top and bottom keyhole slots (shaded) of the display stand. (**FIGURE B**)
3. With the display stand still on the wall, mark your desired keyhole slot drilling locations along top and bottom keyhole slot lines (drawn during previous step) as shown.
4. Carefully team lift your display stand away from the wall.

**NOTE:**

- If securing to a wall with steel or wood studs, use a pencil and a stud finder to align your keyhole slot drilling locations along top and bottom keyhole slot lines (drawn during step 2) to hit the studs.
- If you are not securing your display stand into steel studs using the provided SNAPTOGGLE® anchors (B), and instead are going into wood studs, you must provide your own lag bolt hardware that meets the appropriate weight ratings specified in “Weight Ratings” on page 5.
- If you are not securing your display stand into cinderblocks using the provided SNAPTOGGLE anchors (B), and instead are going into a solid concrete wall, you must also provide your own concrete anchor hardware meeting the appropriate weight ratings specified.

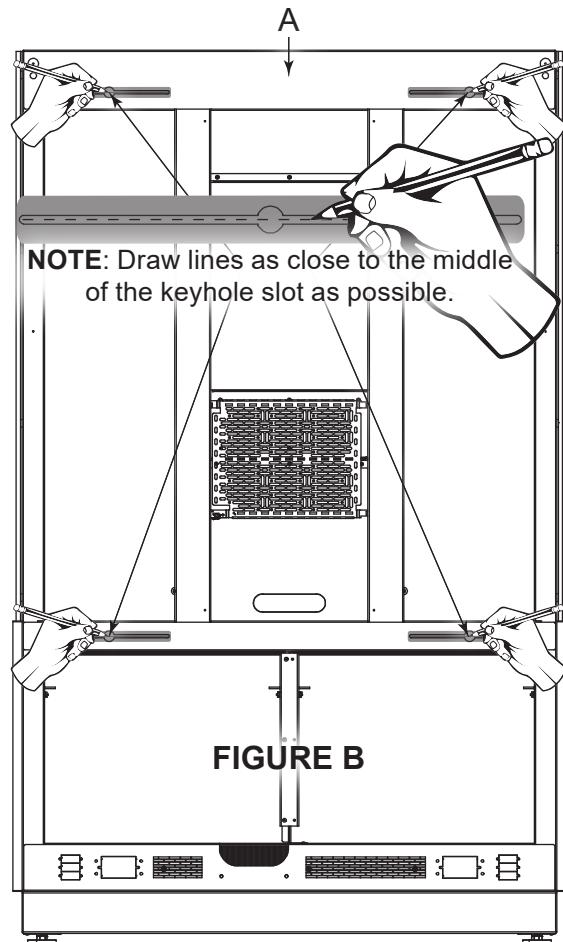

**WARNING:** Customer-provided mounting hardware must be used on all four keyhole slot locations when securing the display stand to any wall type and the unit must be set on the ground.

**ADVERTENCIA:** El material de montaje proporcionado por el cliente debe utilizarse en las cuatro ranuras de los orificios de bloqueo al fijar el soporte de pantalla a cualquier tipo de pared y la unidad debe colocarse en el suelo.

**AVERTISSEMENT:** Le matériel de montage fourni par le client doit être utilisé sur les quatre emplacements des trous de serrure lors de la fixation du support d'affichage à tout type de mur et l'unité doit être placée sur le sol.

## ATTACHING THE DISPLAY STAND TO YOUR WALL (IF PURCHASED, CONTINUED)



**WARNING:** When securing to a wall with steel or wood studs, your mounting hardware must hit the stud through both top and bottom keyhole slot locations on at least one side of your display stand for proper support.

**ADVERTENCIA:** Al asegurar a una pared con de acero o madera estructuras, su hardware de montaje debe fijarse al material a través de ambos lugares de ranura de ojo de cerradura superior e inferior en al menos un lado de su soporte de pantalla para un soporte suficiente.

**AVERTISSEMENT:** Lors de la fixation à un mur avec des montants en acier ou en bois, votre matériel de montage doit toucher le montant à travers les emplacements des fentes en trou de serrure supérieur et inférieur sur au moins un côté de votre présentoir pour un support approprié.

5. The remaining sections of this topic show you how to attach the display stand to your specific wall type as follows:

- “Attaching the Display Stand to a Wall With Steel Studs or Cinderblocks” on page 10.
- “Attaching the Display Stand to a Wall With Wood Studs” on page 11.
- “Attaching the Display Stand to a Solid Concrete Wall” on page 11.



**NOTE:** If your installation requires additional measurements and details, refer to the technical specification (120-00027) at [www.legrandav.com](http://www.legrandav.com).

### Attaching the Display Stand to a Wall With Steel Studs or Cinderblocks

**NOTE:** Adjust torque on drill to the “drill” setting.

1. Use drill and  $\frac{1}{2}$ ” drill bit to drill holes in all the marked keyhole slot locations. You must hit wall studs (where applicable) in top and bottom keyhole slots on at least one side of the display stand for proper support.

**NOTE:** If securing to cinderblocks, avoid drilling into webs and sides as shown. (**FIGURE C**)

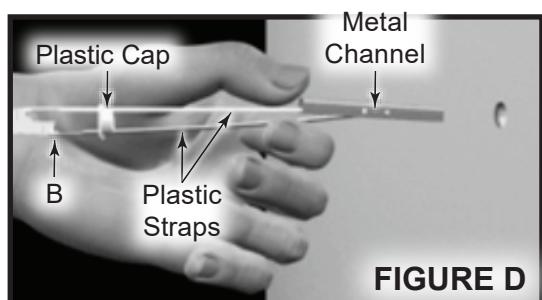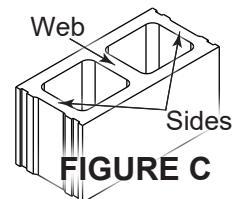


2. Insert SNAPTOGGLE® anchor (B) into a hole by holding the metal channel flat alongside the plastic straps and sliding the channel through the hole as shown. (**FIGURE D**)
3. Make the plastic strap handles even to force the metal channel perpendicular to the entire anchor. (**FIGURE E**)
4. Secure the anchor by firmly sliding the plastic cap along the straps until the flange of the cap is flush with the wall.

5. Snap off plastic straps from the anchor by carefully bending them toward the wall. (**FIGURE F**)


6. Repeat steps 2 - 5 to insert SNAPTOGGLE anchors (B) into all of your keyhole slot location holes drilled during step 1.

**NOTE:** Adjust torque on drill to lightest setting and only increase as necessary.

7. Team lift the display stand and place it against your mounting wall aligning keyhole slots with the prepared holes and anchors.

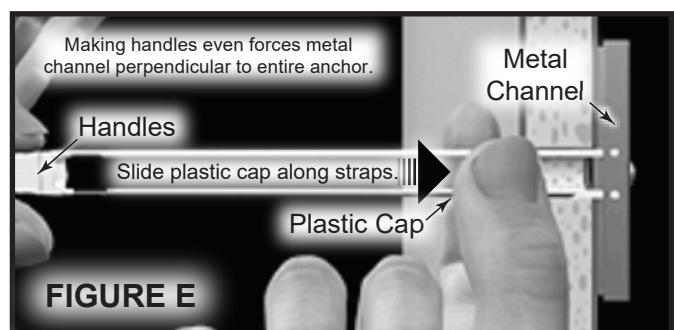

## ATTACHING THE DISPLAY STAND TO YOUR WALL (IF PURCHASED, CONTINUED)

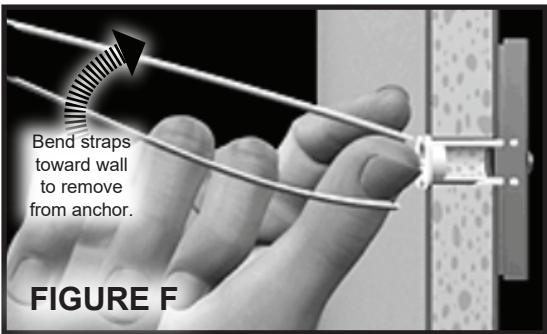

8. Place a level on the top center of your display stand and make any final adjustments to the leveling feet (by carefully team tilting the display stand) as necessary.
9. Use drill, 7/16" socket, (4x) 1/4"-20 x 2 1/2" bolts (C) and (4x) 1/4" washers (D) through keyhole slots and into the anchors to secure the stand to your wall.

### Attaching the Display Stand to a Wall With Wood Studs

**NOTE:** Adjust torque on drill to the "drill" setting.

1. Use protective eyewear, drill, and 3/32" drill bit to drill holes in all the marked keyhole slot locations. You must hit wall studs in top and bottom keyhole slots on at least one side of the display stand for proper support.

**NOTE:** Adjust torque on drill to lightest setting and only increase as necessary.

2. Team lift the display stand and place it against your mounting wall aligning keyhole slots with the prepared holes and anchors.
3. Place a level on the top center of your display stand and make any final adjustments to the leveling feet (by carefully team tilting the display stand) as necessary.
4. Use drill, 7/16" socket, (4x) 1/4" x 2 1/2" lag bolts (not provided), and (4x) 1/4" washers (D) through keyhole slots and into the drilled holes to secure the stand to your wall.

### Attaching the Display Stand to a Solid Concrete Wall

**NOTE:** When securing your display stand (A) to a solid concrete wall, you must provide your own concrete anchors that support the weight ratings specified in "Weight Ratings" on page 5.


Secure your display stand (A) to a solid concrete wall by using a procedure similar to "Securing the Display Stand to a Wall With Steel Studs or Cinderblocks" on page 10.

## INSTALLING AND CONFIGURING THE 10" LEVER LOCK PLATE

**NOTE:** One 10" Lever Lock plate is pre-installed inside of the display stand.

A Vertical Lever Lock kit is also available that includes an additional 10" Lever Lock plate. For more information, contact support at [av.support@legrand.com](mailto:av.support@legrand.com) or (866) 977-3901.

1. Press the clip and lift the same side of the 10" plate from the display stand column. (**FIGURE G**)

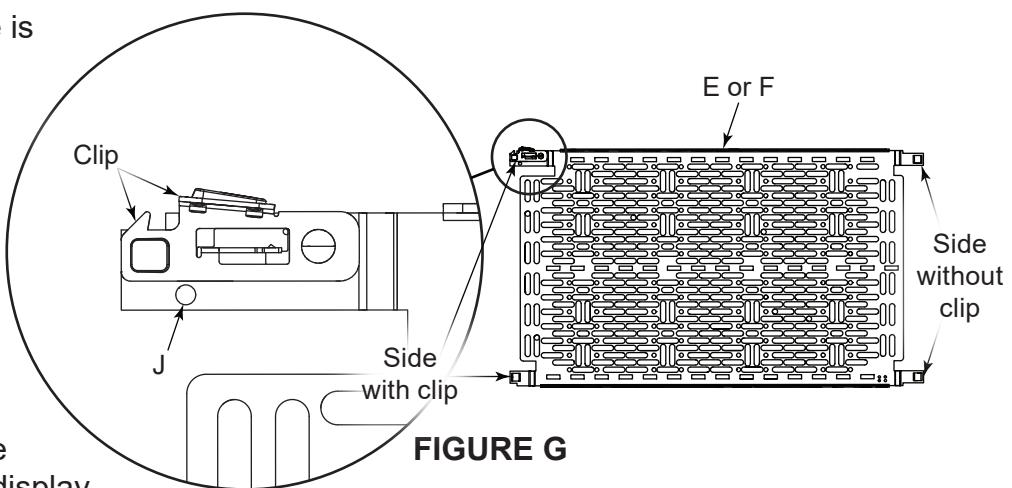

**FIGURE G**

## INSTALLING AND CONFIGURING THE 10" LEVER LOCK PLATE (CONTINUED)

2. Reverse the steps (inserting the 10" plate tabs on the side without the clip first) to re-install the 10" plate to a new location inside the display stand, if desired.
3. Insert securing rivets (J) on the tab beneath the clip of the 10" plate to lock it in place.

**TIP:** If necessary, you can remove the securing rivet by pushing its tip end out of the hole with a small screwdriver, and then pulling by hand at the rivet's head.



## INSTALLING THE VERTICAL LEVER LOCK KIT (IF PURCHASED)

### NOTE:


- One 10" Lever Lock plate (F), bracket (G), (2x) screws (H), (6x) securing rivets (J), and (20x) washers (K) are provided with a Vertical Lever Lock kit, if purchased.
- The 4 available mounting locations on the left and right columns of the display stand's small device storage area are for vertical Lever Lock and are shaded in the figure for clarity.  
**(FIGURE H)**
- Lever Lock brackets and plates may be installed to face the front or the back of the display stand.
- Adjust torque on drill to lightest setting and only increase as necessary.

1. Use drill, Phillips bit and (2x) 10-32 x  $\frac{3}{8}$ " thread forming screws (H) to attach brackets (G) into one of the 4 positions along the left and right columns on your display stand as shown. **(FIGURE J)**

**NOTE:** Figure J shows 2 vertical Lever Lock brackets (each kit sold separately) installed in the lower sides of the display stand for clarity.

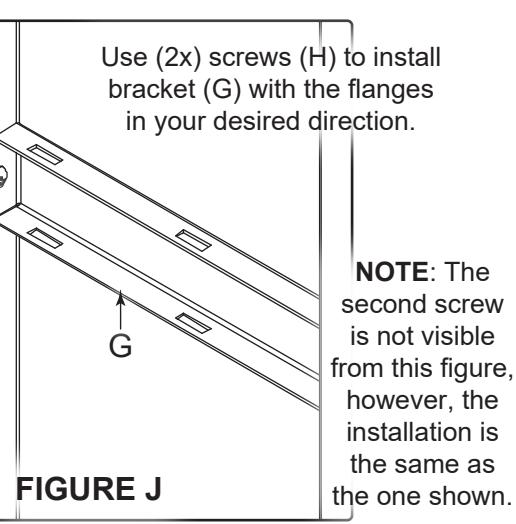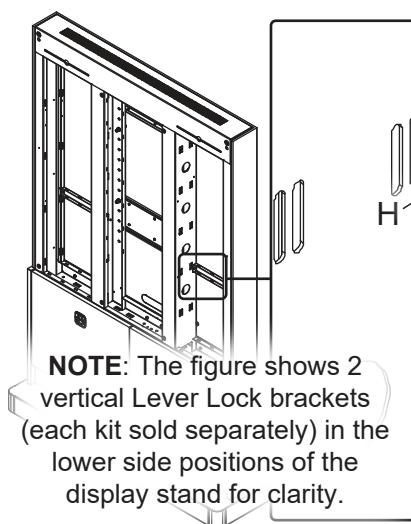

**FIGURE J**

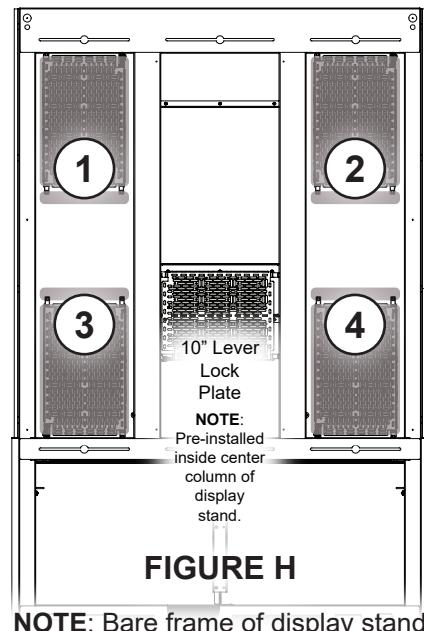

**FIGURE H**

**NOTE:** Bare frame of display stand (free-standing pictured) shown for clarity.

2. Attach the 10" Lever Lock plate (F) by inserting the side with the 2 tabs and no securing clip first.

Insert the tabs into the corresponding openings on the bracket or the display stand.

Then, install the side with the clip. See Figure G on page 11 for more information.  
**(FIGURE G)**

3. Insert securing rivets (J) on the tab beneath the clip of the 10" plate to lock it in place.


**NOTE:** Use (20x) washers (K) for equipment mounting convenience.

## USING TOP SMALL DEVICE STORAGE AND BOTTOM RACKMOUNT BAYS

1. Load equipment into the top small device storage columns using "Installing and Configuring the 10" Lever Lock Plate" on page 11 and "Installing the Lever Lock Kit (If Purchased) on page 12 as needed. (**FIGURE K**)
2. Run cabling using knockouts between the top small device storage columns and the bottom rackmount bays as necessary.

**FLOOR-TO-WALL DISPLAY STANDS ONLY:** You must load any components into the top small device storage columns and the bottom rackmount bays at this point in the overall installation and configuration process because you won't have access to these areas after re-installing the front panel and mounting your display.

3. Carefully push outward on the front doors covering the bottom rackmount bays to open them and load

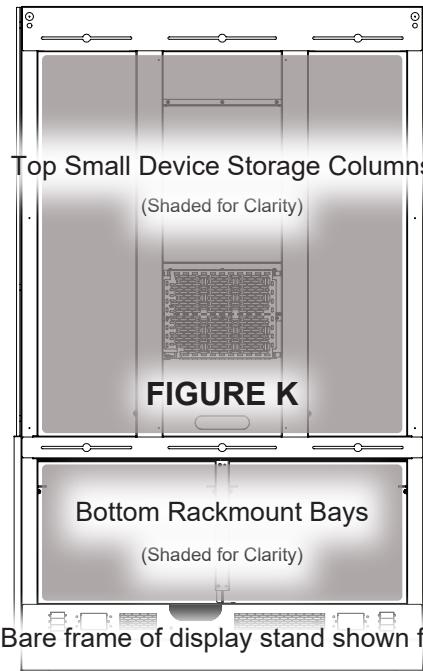


**NOTE:** Bare frame of display stand shown for clarity.

**NOTE:**

- Each bottom rackmount bay on all display stand models includes 2RU fixed rackrail pairs for device storage that may be re-positioned in 7 vertical 1.5" (38mm) increments.
- Adjust torque on drill to lightest setting and only increase as necessary.

4. Use drill and a  $\frac{3}{8}$ " socket to remove the 10-32 nuts, re-position the brackets to the same height, and re-install the nuts as necessary.
5. Attach devices to the rackrail using a #2 screwdriver and your own rack screws.

**NOTE:** If using the rackrails in higher bay positions, attach your rack screws using your screwdriver through the obrounds on the frame as shown.

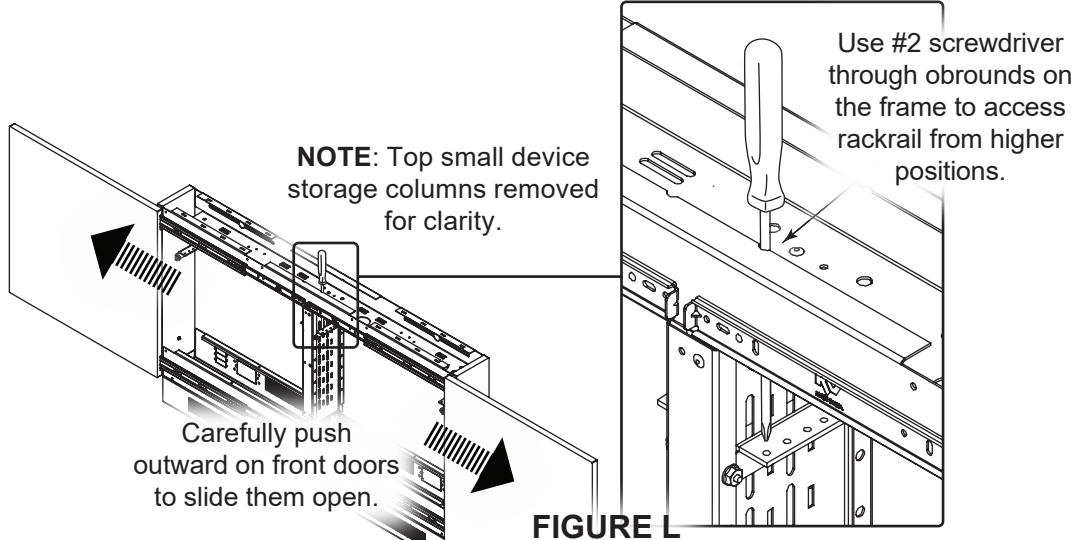


## USING TOP SMALL DEVICE STORAGE AND BOTTOM RACKMOUNT BAYS (CONTINUED)

### FLOOR-TO-WALL DISPLAY STANDS ONLY:

- Access to the bottom rackmount bays is only available from the front doors after re-installing the front panel and mounting your display.
- The useable equipment depth of the bottom rackmount bays in a floor-to-wall display stand is 16" (423mm).

### FREE STANDING DISPLAY STANDS ONLY:

- Equipment may be loaded into either the top small device storage columns and into the bottom rackmount bays at any point during the overall installation and configuration process. In addition to front door access to the bottom rackmount bays, you can also access both the top small device storage and bottom rackmount bays from the back by carefully tugging at the magnetic sides of the back panel and opening back bay latch panels, respectively. (**FIGURE M**)
- The useable equipment depth of the bottom rackmount bays in a free standing display stand is 12" (329mm).

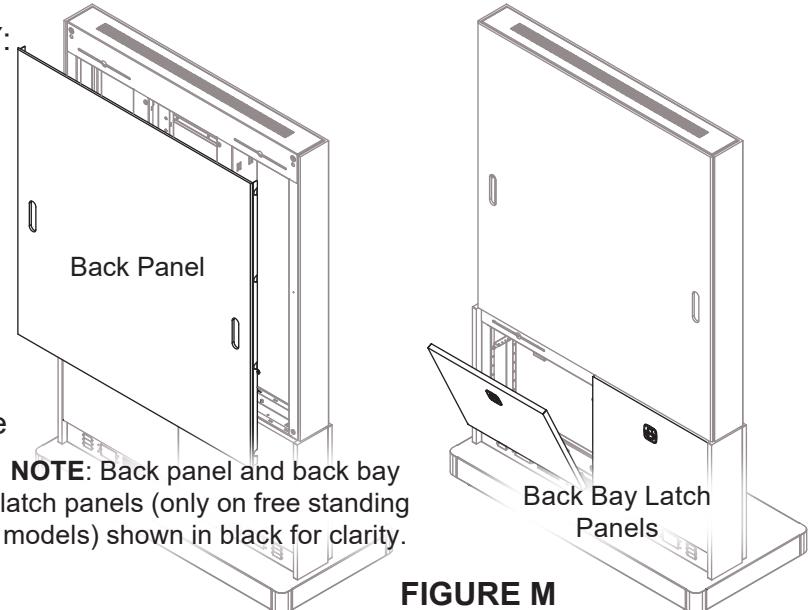

**FIGURE M**

## RE-ATTACHING THE FRONT PANEL TO YOUR DISPLAY STAND

- Carefully re-install both the front panel and the front filler panel by reversing the steps in "Removing the Front Panel from Your Display Stand" on page 8.


### NOTE:

- If indentations have formed on the acoustic felt (PET) material of panels during re-attachment, apply steam to remove.
- Clean dust and debris from panels with a clean, soft, lint-free cloth or vacuum.
- Bleach and cleaning agents are not recommended, as they may discolor the material.

## SELECTING THE CORRECT INTERFACE BRACKET HARDWARE FOR YOUR DISPLAY


**NOTE:** The interface hardware kit provided includes different pan head screws (I-A) to accommodate the threaded inserts on the back of most displays. This topic helps you select the correct size pan head screw length for your display.

- Use a toothpick or small straw as a thread depth indicator and insert it into a threaded insert on the back of your display.
- With the toothpick or straw fully inserted, use a pencil to mark it at  $\frac{1}{8}$ " above the surface as shown. (**FIGURE N**)

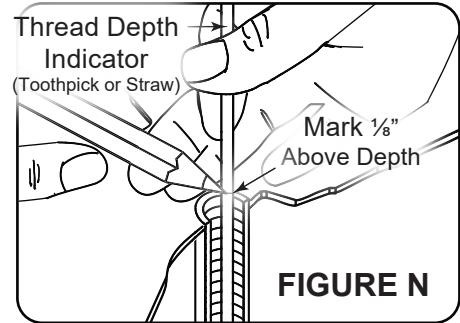

**FIGURE N**

## SELECTING CORRECT INTERFACE BRACKET HARDWARE (CONTINUED)

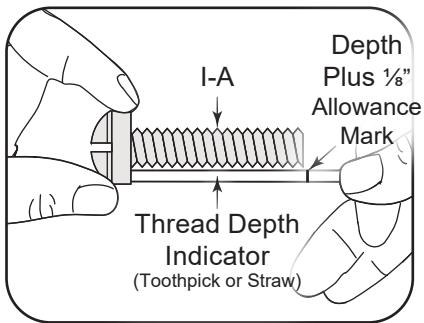

3. Select a pan head screw (I-A) size that is shorter in length than the  $\frac{1}{8}$ " mark you made on your thread depth indicator. (**FIGURE P**)



**CAUTION:** Only use screws shorter than the  $\frac{1}{8}$ " mark or damage to the display may occur.

**PRECAUCIÓN:** Utilice tornillos más cortos que la marca  $\frac{1}{8}$ " o puede dañar la pantalla.

**ATTENTION:** N'utilisez que des vis plus courtes que la marque  $\frac{1}{8}$ " ou vous risquez d'endommager l'écran.

**FIGURE P**

## ATTACHING INTERFACE BRACKETS TO THE BACK OF YOUR DISPLAY

**NOTE:** You may need to install any additional accessories you may have purchased such as compatible camera mounts, sound bars and other audio products (available from Legrand or other providers) before your display mount and display. Before proceeding, refer to the instructions provided with your accessory for the proper installation order.

1. Carefully place your display facedown onto an appropriate work surface.

**NOTE:** Center the interface brackets (I-B) on your display so they do not extend past the top or bottom.

2. Determine the correct size pan head screws for attaching the interface brackets to your display. For more information, see the previous topic.


3. Determine if spacers (I-C) are required when attaching the interface brackets to the back of your display.

**NOTE:** Adjust torque on drill to lightest setting and only increase as necessary.

4. Use a drill, #2 Phillips bit, (4x) spacers (I-C, if required), (4x) washers (I-D), and (4x) correct length pan head screws to attach the interface brackets to the back of your display as shown. (**FIGURE J**)

### NOTE:

- Spacers must be used if your display has recessed and/or uneven portions on the back where the threaded inserts are located. Even if that is not the case, you may still prefer the added depth the spacers provide.

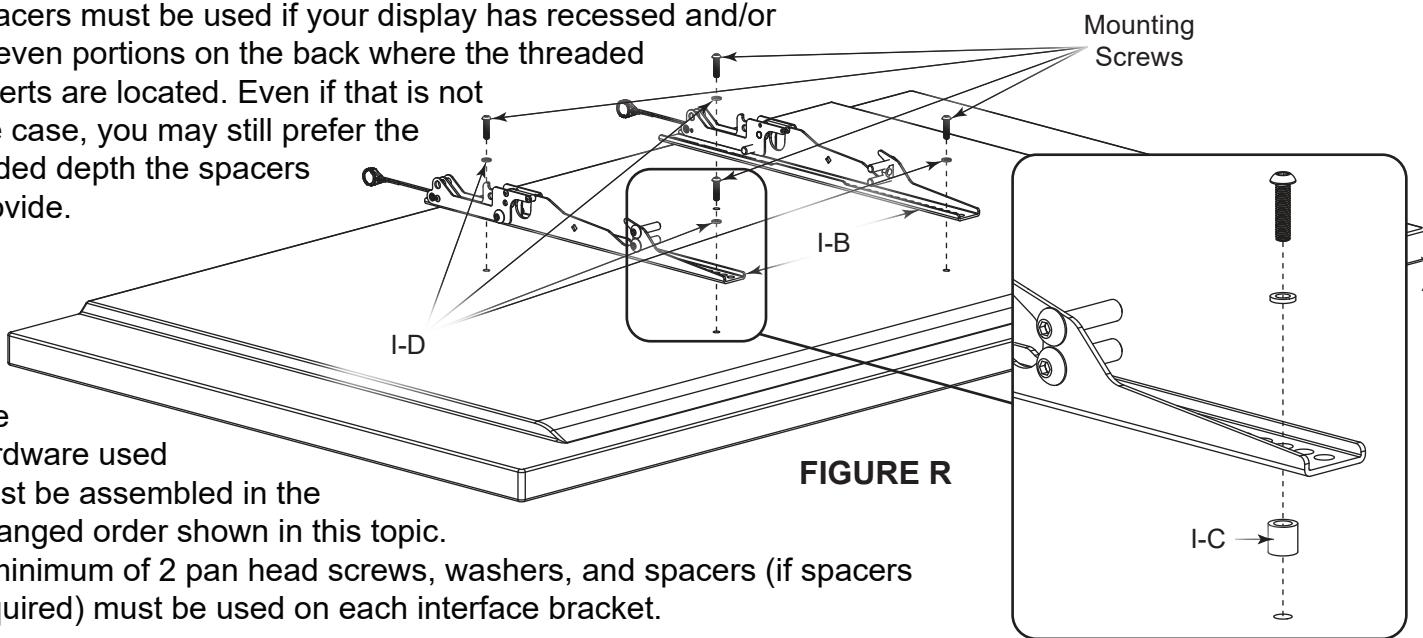

**FIGURE R**

- The hardware used must be assembled in the arranged order shown in this topic.
- A minimum of 2 pan head screws, washers, and spacers (if spacers required) must be used on each interface bracket.

## ATTACHING THE SHROUD AND MOUNT TO YOUR DISPLAY STAND

1. Use your hand to loosely attach (2x) 5/16-18" x 1 $\frac{3}{4}$ " flange hex head bolts (L) to (2x) 5/16-18" flange nuts (M, approximately 2-3 thread rotations) through the front panel and into your chosen top 2 locations on the display stand assembly as shown. (**FIGURE S**)

**NOTE:** Select from the top 10 hole pairs on the display mount for the top bolts and nuts to determine your preferred display height.



**WARNING:** This procedure requires at least one additional person.

**ADVERTENCIA:** Este procedimiento requiere al menos una persona adicional.



**AVERTISSEMENT:** Cette procédure nécessite au moins une personne supplémentaire.

2. Carefully thread the bolt heads on the top 2 loosely attached bolts through the corresponding keyholes on the shroud (N), and then the mount (I-E) as shown. (**FIGURE T**)


**NOTE:** Adjust torque on drill to lightest setting and only increase as necessary.

3. Use adjustable wrench on the top 5/16-18" flange nuts (M) while using drill and 1/2" socket to tighten the corresponding 5/16-18" x 1 $\frac{3}{4}$ " flange hex head bolts (L). Do not overtighten.

4. Use your hand to thread (2x) 5/16-18" x 1 $\frac{3}{4}$ " flange hex head bolts (L) through the obrounds on the lower side of the bottom 2 keyholes on the mount (I-E), through corresponding holes on the shroud, and into the display mount. (**FIGURE U**)

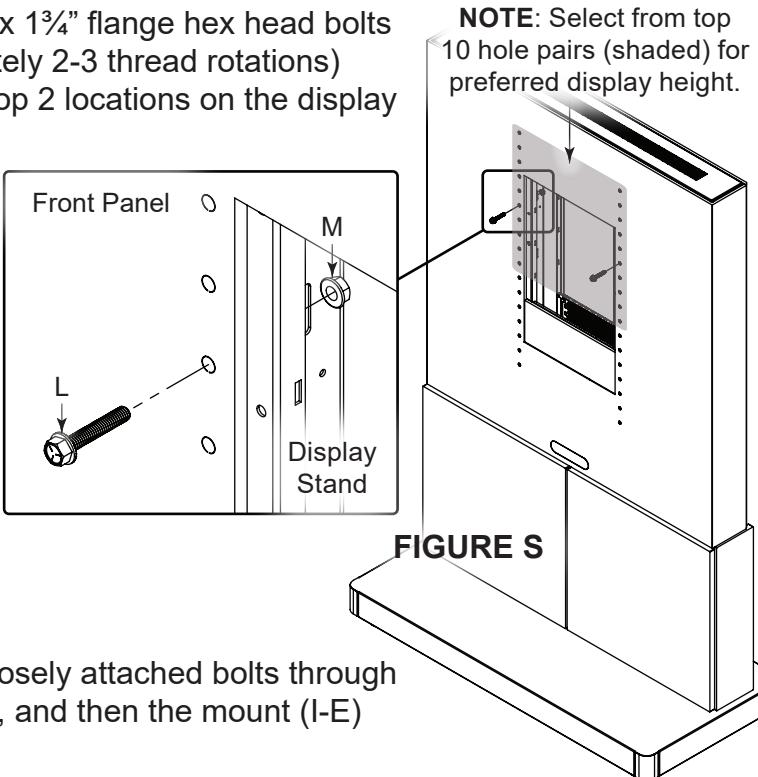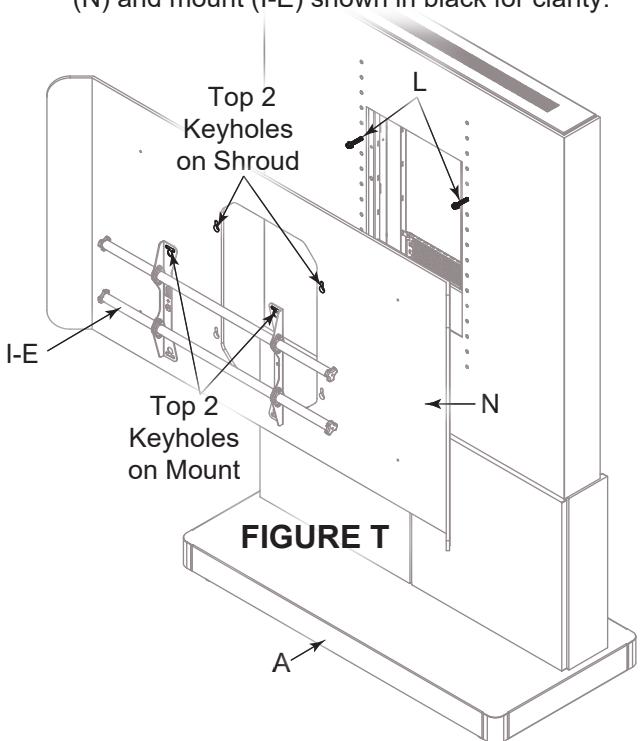

5. Use adjustable wrench on both bottom 5/16-18" flange nuts (M) while using drill and 1/2" socket to tighten corresponding 5/16-18" x 1 $\frac{3}{4}$ " flange hex head bolts (L). Do not overtighten.

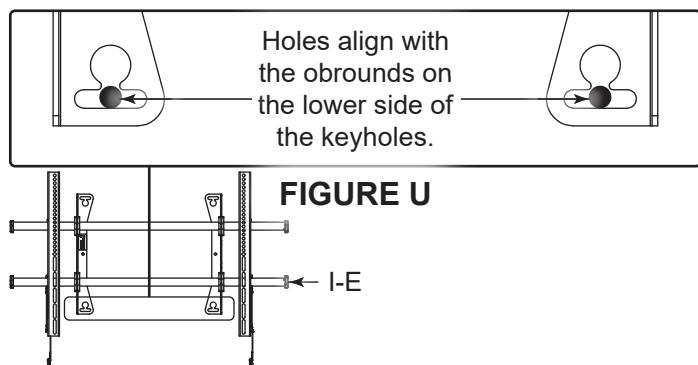

5. Use adjustable wrench on both bottom 5/16-18" flange nuts (M) while using drill and 1/2" socket to tighten corresponding 5/16-18" x 1 $\frac{3}{4}$ " flange hex head bolts (L). Do not overtighten.

## HANGING YOUR DISPLAY ONTO THE MOUNT



**WARNING:** This procedure requires at least one additional person.

**ADVERTENCIA:** Este procedimiento requiere al menos una persona adicional.

**AVERTISSEMENT:** Cette procédure nécessite au moins une personne supplémentaire.

1. With at least one other person, carefully lift your display slightly above both top and bottom poles on the mount (I-E).

(FIGURE V)

2. Slowly lower the display while ensuring top interface bracket hooks fully engage onto the top pole of the mount.



**WARNING:** Do not release your display until certain the top hook of each interface bracket is securely seated on the upper pole of the mount.


**ADVERTENCIA:** No suelte la pantalla hasta que el gancho superior de cada soporte de interfaz esté firmemente fijado al polo superior del soporte.

**AVERTISSEMENT:** Ne relâchez pas votre écran tant que le crochet supérieur de chaque support d'interface n'est pas solidement fixé sur le pôle supérieur du support.

3. Carefully bring the lower side of the display forward until the lower jaws of the interface brackets securely latch onto the bottom pole of the mount.

**NOTE:** Remove your display by pulling both release cord rings down while pulling bottom of the display away from the mount, and then team lift it off the poles.

**TIP:** Store release cords behind your display by attaching the magnetic rings to the metal interface brackets or the mount.

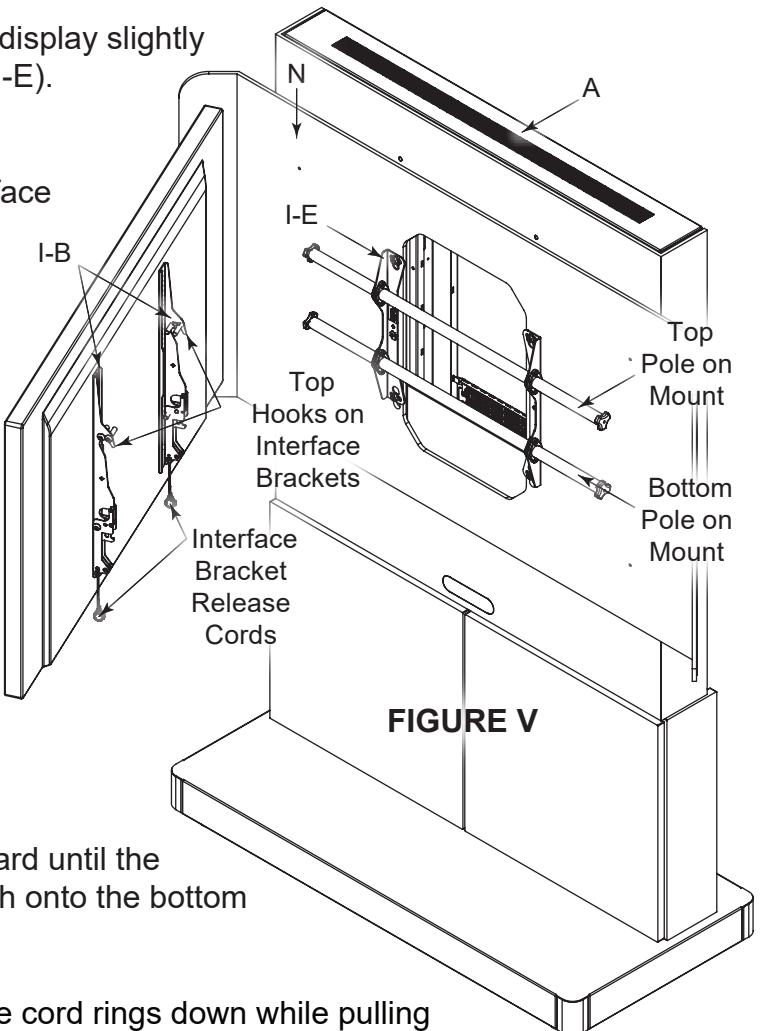

## **WARRANTY**

For warranty information, refer to [www.legrandav.com/policies/warranty\\_information](http://www.legrandav.com/policies/warranty_information).

### **Contacting Corporate Headquarters**

P: (866) 977-3901 | F: (877) 894-6918 | [www.legrandav.com](http://www.legrandav.com) | [av.support@legrand.com](mailto:av.support@legrand.com)

### **Contacting Middle Atlantic Canada**

P: (888) 766-9770 | F: (888) 599-5009 | [ca.middleatlantic.com](http://ca.middleatlantic.com) | [av.canada.customerservice@legrand.com](mailto:av.canada.customerservice@legrand.com)

### **Contacting Middle Atlantic Europe, Middle East, and Africa (EMEA) Technical Support**

P: +31 495-726-003 | [av.emea.middleatlantic.support@legrand.com](mailto:av.emea.middleatlantic.support@legrand.com)

#### **United States (US)**

Legrand | AV Headquarters  
6436 City West Parkway  
Eden Prairie, MN, 55344, USA

#### **European Union (EU)**

Legrand AV Netherlands  
B.V. Franklinstraat 14 6003  
DK, Weert, Netherlands

#### **United Kingdom (UK)**

Starline Holding Technology Ltd.  
(Authorized Representative)  
Unit C, Island Rd.  
Reading RG2, 0RP- UK

At Legrand AV Inc. we are always listening. Your comments are welcome.

Legrand AV is an ISO 9001 and ISO 14001 Registered Company.

**MIDDLE  
ATLANTIC®**

A brand of  legrand®